Arrow Compressor Sizing Program

Instruction for **Windows 7** and **Windows 10** operating systems using **Internet Explorer**. In some instances, antivirus programs will need to be disabled temporarily to run the installer.

Installation

1. From the Arrow Compressor Sizing Program request email, click the Download software link

You requested instructions to download and install our compressor sizing software.

In order to download the software click on the following link: <u>Download software</u>

In order to download the installation instructions click on the following link: Download installation instructions

Thank you,

Arrow Engine Company

2. Click the Run button when prompted by Internet Explorer

Windows 7

If prompted by a Windows Security Warning, click the Run button
Open File - Security Warning



Windows 10

• If you receive a pop-up from Windows SmartScreen click the More info link



Windows SmartScreen prevented an unrecognized app from starting. Running this app might put your PC at risk.

App: Arrow_Engine_Performance_Software_Setup.exe Publisher: Unknown Publisher

Run anyway

Don't run

3. Click the Next button



5. Accept the default installation path or click the **Browse** button to choose a different location, then click the **Next** button

			4	^
elect Destination Location Where should Arrow Engine Performance So	ftwa <mark>re</mark> be installed?			ARROV
Setup will install Arrow Engine Perfo	ormance Software in	to the fo	llowing fold	ler.
-				
To continue, click Next. If you would like to s	elect a <mark>different fo</mark> l	der, dick	Browse,	
C:\Program Files (x86)\Arrow Engine Perfor	mance Software		Browse	e
At least 77.3 MB of free disk space is require	d.			
	< Back	Next >	C	ancel
J Would like a desktop icon leave ti		d and c		Next b
etup - Anow Engine Penormance Soltwan				\sim
elect Additional Tasks				ARREL
elect Additional Tasks Which additional tasks should be performed?				
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Sel	up to perform while	installing	Arrow	ARRS
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then click Nex	up to perform while ct.	installing	Arrow	ARR <mark>S</mark> I B
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Sel Engine Performance Software, then dick Net Additional icons:	tup to perform while kt.	installing	Arrow	arr <mark>o</mark> t Baga
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then dick Ne: Additional icons:	up to perform while ct.	installing	Arrow	arr <mark>en</mark>
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then click Nex Additional icons:	up to perform while kt.	installing	Arrow	
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Sel Engine Performance Software, then dick Nex Additional icons:	up to perform while kt.	installing	Arrow	
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then dick Nex Additional icons:	up to perform while kt.	installing	Arrow	
Select Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then click Nex Additional icons:	up to perform while ct.	installing	Arrow	
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then dick Ne: Additional icons:	up to perform while ct.	installing	Arrow	
Select Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then click Nex Additional icons:	up to perform while ct.	installing	Arrow	
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then dick Net Additional icons:	tup to perform while ct.	installing	Arrow	
elect Additional Tasks Which additional tasks should be performed? Select the additional tasks you would like Set Engine Performance Software, then dick Nex Additional icons: Create a desktop icon	up to perform while	installing	Arrow	

6.

7. Review the installation details and click the **Install** button

🛃 Setup - Arrow Engine Performance Software	(<u>(43)</u>)		×
Ready to Install			ARROW
Setup is now ready to begin installing Arrow Engine Performance S your computer.	Software or	n	0.8.0
Click Install to continue with the installation, or click Back if you wa change any settings.	ant to revie	w or	
Destination location: C:\Program Files (x86)\Arrow Engine Performance Software			A .
Additional tasks: Additional icons: Create a desktop icon			
×.		>	~
< Back	nstall	С	ancel

8. Once installation completes, click the **Finish** button to launch the **Arrow Compressor Sizing** program

