

# AECS Arrow Engine Control System


## RPM GUIDE




**1** To change engine speed go to gauge screen, hold down the fourth button for three seconds.



**2** Press the far left button once to go to the next screen.

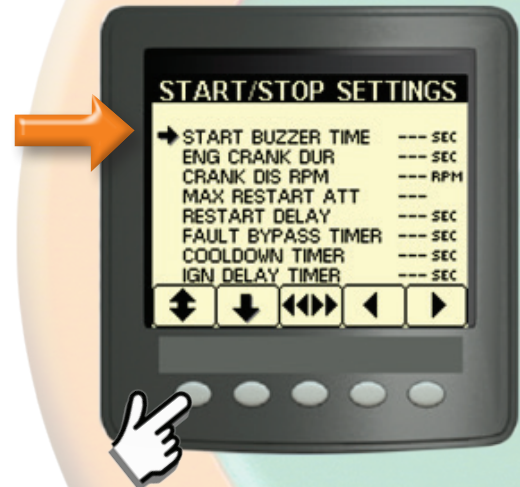

**3** Press the second button to move the arrow selection down to the RATED RPM TARGET. Use the three buttons on the right to change the speed.

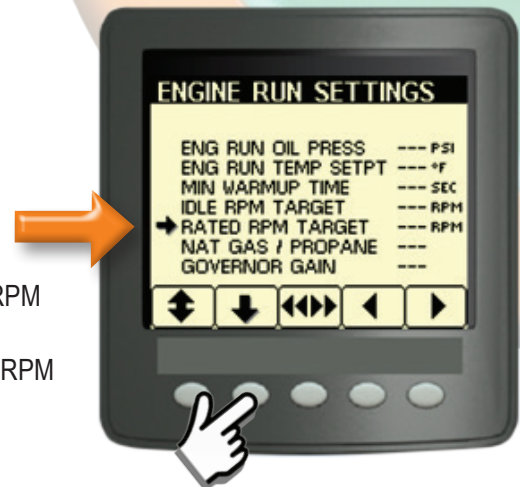

Changes setpoint in steps of 10 RPM

Changes setpoint in steps of 100 RPM

Press the far left button three times to return to main screen



Arrow Engine Company  
2301 East Independence, Tulsa, Oklahoma 74110

www.ArrowEngine.com

toll free (800) 331-3662 local (918) 583-5711  
toll free fax in US & Canada (800) 266-1481 • local fax (918) 699-2202

AECSRPM-ML-F -OCT13