


**1** Turn key to “RUN” position.


**2** Press first button.

**3** Press **RESET ENGINE** button.


**4** Press **START ENGINE** button.

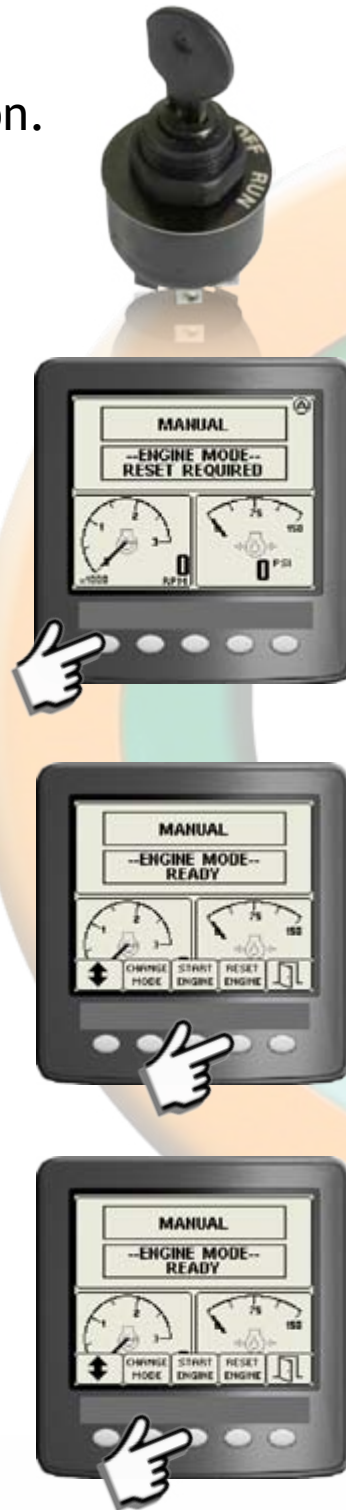

### Mode Screen

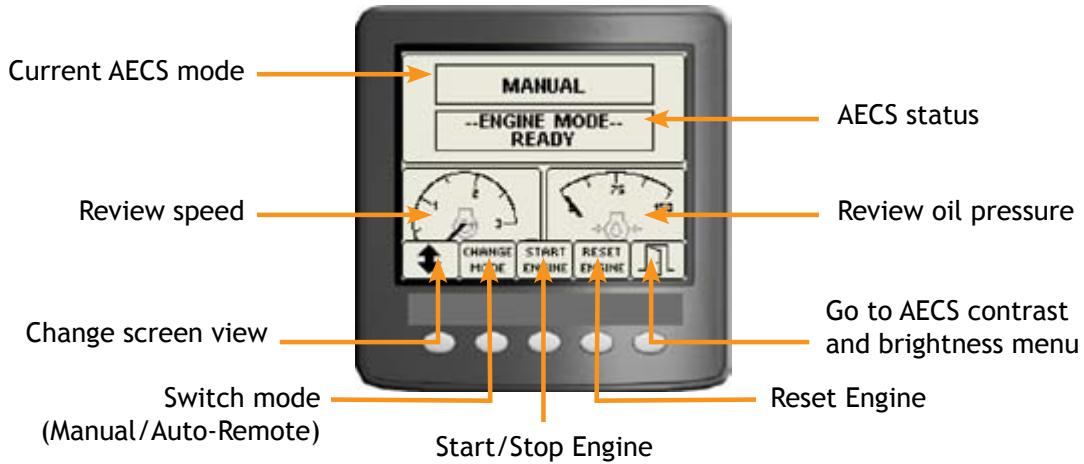

### Gauges

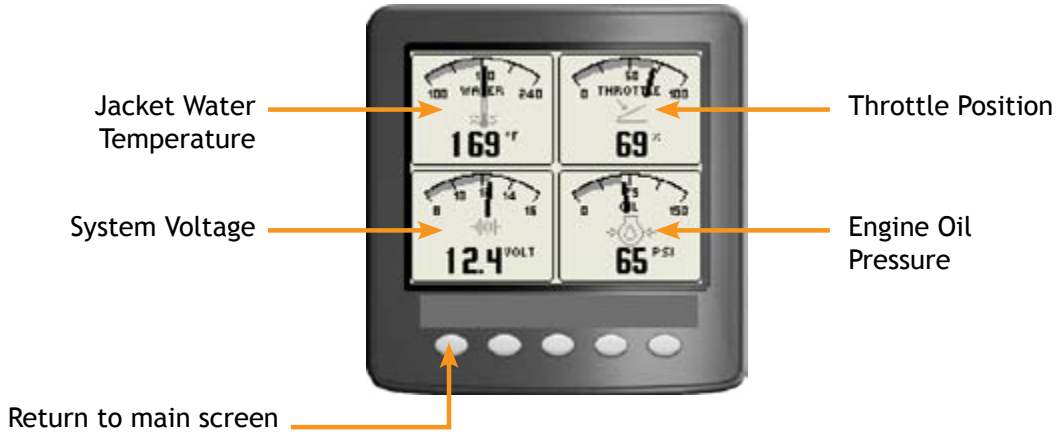

### Alarms & Faults

