




**Original Equipment.
Engineered Solutions.**

VRS-4

PARTS AND OPERATIONS MANUAL

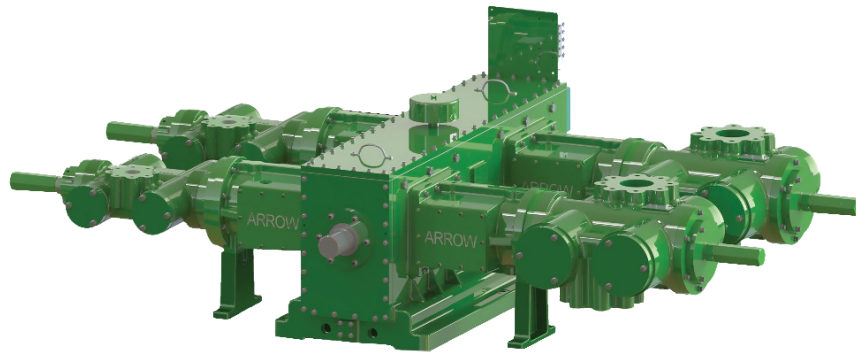

ARROW ENGINE COMPANY
2301 E. Independence St., Tulsa, OK 74110
www.arrowengine.com

©2024
Arrow Engine Company
VRS4-POM-JAN2024

VRS-4

PARTS AND OPERATIONS MANUAL

VRS4-POM-JAN2024

Copyright ©2024 by Arrow Engine Company

2301 E. Independence St.

Tulsa, OK 74110

All rights reserved

1 **TABLE OF CONTENTS**

1	TABLE OF CONTENTS	ii
----------	--------------------------	-----------

2 INTRODUCTION

2.1	Purpose of this Manual	1
-----	------------------------	---

3 DESIGN SPECIFICATIONS

3.1	Arrow Engine VRS-4 Compressor Overview	2
3.2	Compressor Frame Specifications	3
3.3	Piston Ring Side Clearance and End Gap	9
3.4	Fastener Tightening Torque	11
3.5	Torque Procedures	12
3.6	Bolting	13
3.7	Safety Information	13
3.8	Recommended Special Tools	15

4 COMPRESSOR START-UP

4.1	Maximum Allowable Working Pressure	16
4.2	Relief Valve Settings	16
4.3	Filling the Main Oil System Sump	16
4.4	Cylinder Lubricator Pump Adjustment at Start-up	17
4.5	VRS-4 Compressor Start-up Checklist	18
4.6	Compressor Maintenance	26
4.7	Frame Parts – Frame, Covers, Gaskets, Oil Strainer, Sight Glass, and Plugs	27
4.8	Crankshaft, Crosshead, and Connecting Rod Parts	30
4.9	Crankshaft Installation	32
4.10	Piston and Piston Rod Assembly Preparation	36
4.11	Pressure Packing, Piston Rod	54

4.12	Valves	58
4.13	Lubrication System Installation Chain Drive	62
4.14	Chain Idler Assembly	65
4.15	Chain Idler Assembly Installation	66
4.16	Cylinder Lubricator Installation	66
4.17	Accessory End Plate Subassembly and Drive Chain Installation	67
4.18	Setting Chain Tension	68
4.19	Y-type Oil Strainer Installation	68
4.20	Sight Glass Installation	69
4.21	Plug installation	69

5 DOUBLE-ACTING CYLINDER AND PISTON

5.1	2.5-inch Double-acting Cylinder and Piston Parts	70
5.2	3.0-inch Double-acting Cylinder and Piston Parts	72
5.3	3.5-inch Double-acting Cylinder and Piston Parts	74
5.4	4.0-inch Double-acting Cylinder and Piston Parts	76
5.5	4.5-inch Double-acting Cylinder and Piston Parts	78
5.6	5.0-inch Double-acting Cylinder and Piston Parts	80
5.7	5.5-inch Double-acting Cylinder and Piston Parts	82
5.8	6.0-inch Double-acting Cylinder and Piston Parts	84
5.9	6.5-inch Double-acting Cylinder and Piston Parts	86
5.10	7.0-inch Double-acting Cylinder and Piston Parts	88
5.11	7.5-inch Double-acting Cylinder and Piston Parts	90
5.12	8.0-inch Double-acting Cylinder and Piston Parts	92
5.13	9.5-inch Double-acting Cylinder and Piston Parts	94
5.14	10.0-inch Double-acting Cylinder and Piston Parts	96
5.15	Pressure Packing, Piston Rod for DA Cylinders	98
5.16	Piston Rod Pressure Packing Kits for DA Cylinders	99
5.17	Cylinder O-ring and Gasket Kits – DA Cylinder	100

5.18	VVCP Piston and Stem Assemblies	100
5.19	Piston Rod Jam Nuts Used for Balancing	100
5.20	Double-acting Cylinder and Piston/Rod Assemblies	101

6 STEEPLE CYLINDER AND PISTON

6.1	2.5 × 1.375-inch Steeple Cylinder Parts	102
6.2	3.0 × 1.375-inch Steeple Cylinder Parts	104
6.3	3.5 × 2.25-inch Steeple Cylinder Parts	106
6.4	4.0 × 2.25-inch Steeple Cylinder Parts	108
6.5	4.5 × 2.5-inch Steeple Cylinder Parts	110
6.6	4.5 × 3.0-inch Steeple Cylinder Parts	112
6.7	4.5 × 3.5-inch Steeple Cylinder Parts	114
6.8	5.0 × 2.5-inch Steeple Cylinder Parts	116
6.9	5.0 × 3.0-inch Steeple Cylinder Parts	118
6.10	5.0 × 3.5-inch Steeple Cylinder Parts	120
6.11	5.5 × 3.0-inch Steeple Cylinder Parts	122
6.12	5.5 × 3.5-inch Steeple Cylinder Parts	124
6.13	6.0 × 3.0-inch Steeple Cylinder Parts	126
6.14	6.0 × 3.5-inch Steeple Cylinder Parts	128
6.15	6.5 × 4.0-inch Steeple Cylinder Parts	130
6.16	6.5 × 4.5-inch Steeple Cylinder Parts	132
6.17	7.0 × 4.0-inch Steeple Cylinder Parts	134
6.18	7.0 × 4.5-inch Steeple Cylinder Parts	136
6.19	Pressure Packing, Piston Rod for Steeple Cylinders	138
6.20	Piston Rod Pressure Packing Kits for Steeple Cylinders	139
6.21	Cylinder O-ring and Gasket Kits – Steeple Cylinders	140
6.22	Steeple Cylinder and Piston/Rod Assemblies	141

7 VALVE PARTS, KITS, ASSEMBLIES

7.1	Valve Parts – Suction Valves	143
7.2	Valve Parts – Discharge Valves	144

7.3	Valve Complete Assemblies and Repair Kits	145
7.4	Concentric Valve Kit for 1.125" Cylinder	146
7.5	Added Clearance Retainer Kits	147

8 CYLINDER ASSEMBLY

8.1	Steeple Piston and Cylinder Removal	150
8.2	Steeple Cylinder – Piston and Rod Disassembly	152
8.3	Steeple Cylinder – Valve Removal	156
8.4	Distance Piece Installation	158
8.5	Cylinder Assembly and Installation	163

9 LUBRICATION OVERVIEW

9.1	Introduction	168
9.2	Frame and Cylinder Lubrication Overview	170
9.3	Cylinder Lubrication System Description	171
9.4	Frame Oil Pressure Relief Valve (Typical*)	172
9.5	Tubing and Distance Piece Venting	174
9.6	Filling and Operating the Lubrication System	177
9.7	Divider Block	178
9.8	Cylinder Lubrication System Running Conditions	179
9.9	Lubrication System Troubleshooting	180
9.10	Locating Blockage	181
9.11	No-flow Switch	182


10 RECOMMENDED MAINTENANCE

10.1	Suggested Maintenance Intervals	184
10.2	Daily Maintenance Requirements	184
10.3	Common Problems, Possible Causes	187

11 WARRANTY

191

2 INTRODUCTION

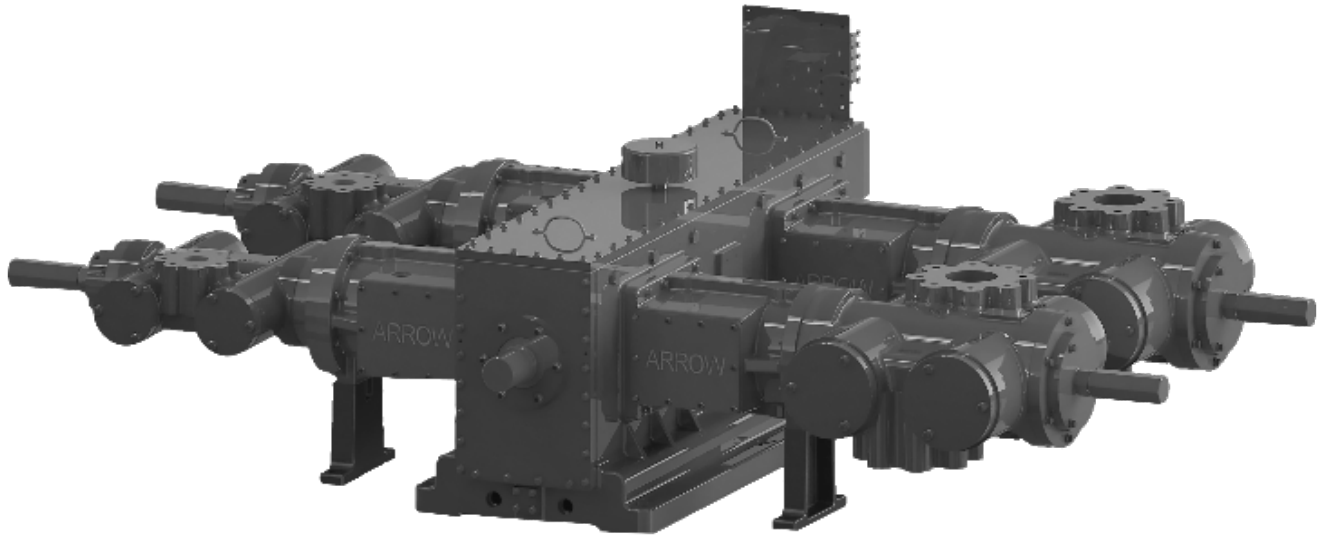

2.1 Purpose of this Manual

This manual is designed to provide information, specifications, maintenance and instruction regarding the Arrow Engine VRS-4 gas compressor.

This manual provides design specifications standards for the VRS-4 gas compressor at time of publication of this material. If you have any questions regarding any of this material, please contact your packager. If they are unable to assist, you may always contact Arrow Engine at 1-800-331-3662.

This manual provides design specifications for standard current production equipment at the date of publication. Do not exceed information plate ratings for the VRS-4 Compressor.

3 DESIGN SPECIFICATIONS

3.1 Arrow Engine VRS-4 Compressor Overview


The Arrow VRS-4 is a four-throw separable reciprocating gas compressor. The horizontally opposed cylinders are accurately balanced for smooth running and long lasting durability at 1,800 RPM. Unlike many other reciprocating compressors, the VRS-4 has a unique four-throw crankshaft configuration that eliminates opposing cylinder off-set and the vibration associated with traditional designs.

The absolute alignment of opposing cylinders provides perfectly balanced weight distribution and symmetry. The elimination of vibration associated with horizontal couple inherent with traditional designs, along with state-of-the-art engineering design and rugged construction, make the VRS-4 a truly balanced, high-performance, durable compressor specifically designed for continuous operation at high speed. The 1,800 RPM speed design, 550 horsepower rating and 20,000-pound combined rod load capability make the VRS-4 a perfect fit for direct coupling with today's higher speed gas engines.

The Arrow VRS-4 can be packaged for single, two-stage, three-stage and four-stage applications with cylinder size from 1.125" to 10". Cylinders are air-cooled which reduces packaging and maintenance costs. As a standard feature, cylinders have a variable volume clearance pocket (VVCP) for flexibility and adjustment to allow accurate fits for changing field conditions.

The use of a pressurized lubrication system, highly efficient Hoerbiger valves, industry-proven accessories, innovative engineering design, and close attention to quality make the Arrow VRS-4 gas compressor unequaled in the industry.

3.1.1 Compressor Frame Nomenclature

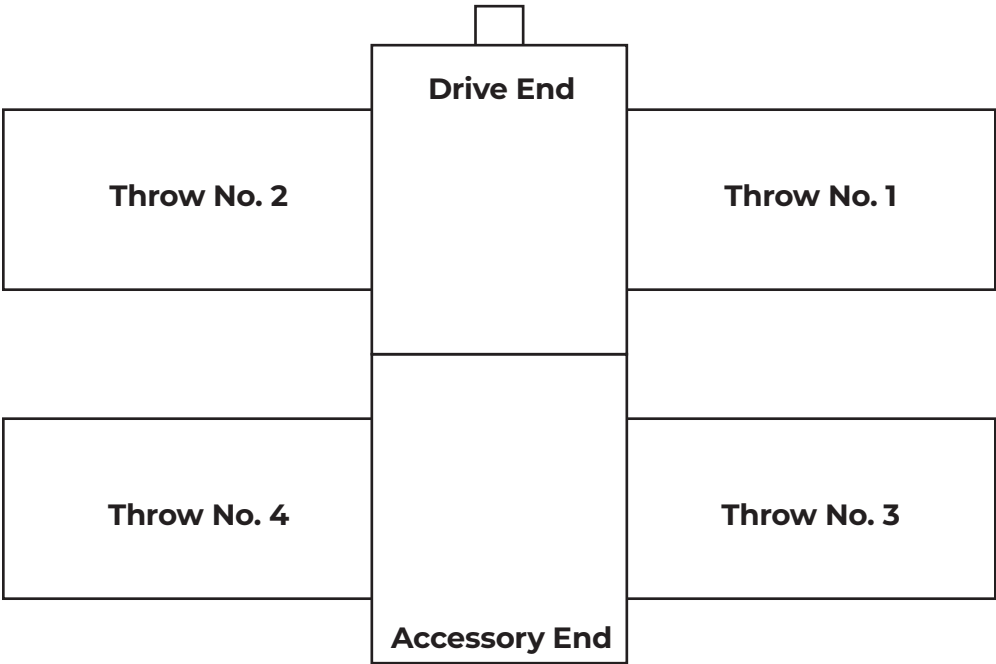

3.2 Compressor Frame Specifications

VRS-4 COMPRESSOR FRAME SPECIFICATIONS	
Stroke	3 inches (76.2 mm)
Speed, RPM (maximum)	1,800 RPM
Piston speed	900 ft/min (4.57 m/s)
Number of throws	4
Horsepower	550 HP (410 kw)
Piston rod diameter	1.125 inches (28.575 mm)
Crankshaft diameter	2.75 inches (69.85 mm)
Height - bottom to crankshaft	13 inches (330.2 mm)
Maximum width	100 inches (2.54 m)
Maximum length	66 inches (1.65 m)
Approximate weight with cylinders	6,500 lbs. (2948.4kg)
Rod load - tension	10,000 lbs. (4535.9 kg)
Rod load - compression	10,000 lbs. (4535.9 kg)
Rod load combined	20,000 lbs. (9071.8 kg)
Oil pump capacity	8.4 GPM (31.8 LPM)
Oil heat rejection	34,000 BTU/hr. (8,568 kcal/hr)
Oil sump capacity	10.5 gal. (39.74 L)

Table 3.1. VRS-4 Compressor Specifications

COMPONENTS	INCHES (mm)
Main bearing diameter	3.250 (82.55)
Rod bearing journal diameter	3.125 (79.3)
Main bearing type	Plain
Connecting rod length cl-cl	8.375 (212.725)
Connecting rod bearing width (single)	1.745 (44.323)
Connecting rod bushing width (single)	2.125 (53.975)
Connecting rod bolts (single)	(four) 1/2"
Connecting rod bearing width (double)	1.370 (34.798)
Connecting rod bushing width (double)	1.125 (28.575)
Connecting rod bolts (double)	(two) 1/2"
Crosshead surface	5.50 X 4.0 (139.7 X 101.6)
Floating crosshead pin diameter	2.499 (63.475)
Piston rod diameter	1.125 (28.575)

Table 3.2. VRS-4 Compressor Components

MATERIALS	
Frame	Class 40 gray iron
Crankshaft	Forging with induction hardened journals
Connecting rods	Forging
Connecting rod bearings	Tri-metal
Crossheads	65-45-12 ductile iron with babbitt
Crosshead pins	SAE 8620 carburized
Crosshead pin bushings	SAE 660 bronze
Piston rods	SAE 4140 induction hardened
Packing rings	Carbon-filled Teflon with cast-iron backup rings
Piston	Cast iron or anodized aluminum
Piston rings	Carbon-filled Teflon
Cylinders	80-55-06 ductile iron

Table 3.3. VRS-4 Compressor Materials

CLEARANCES (AS NEW)		
DESCRIPTION	CLEARANCE	
	INCHES	mm
Crankshaft thrust (end play)	0.013 to 0.020	0.33 to 0.51
Crankshaft pin to connecting rod bearing	0.0015 to 0.0040	0.04 to 0.10
Connecting rod thrust (side)	0.050 to 0.075	0.18 to 0.41
Connecting rod bushing to crosshead pin	0.0014 to 0.0031	0.04 to 0.08
Crosshead to crosshead pin	0.0015 to 0.0025	0.04 to 0.07
Crosshead to guide (feeler gauge)	0.007 to 0.011	0.18 to 0.28
Piston end clearance - crank end (double-acting)	30% of total clearance - 0.050 (approx.)	1.27 (approx.)
Piston end clearance - head end (double-acting)	70% of total clearance - 0.093 (approx.)	2.36 (approx.)
Piston end clearance - crank end (steeple cylinder)	30% of total clearance - 0.063 (approx.)	1.60 (approx.)
Piston end clearance - head end (steeple cylinder)	70% of total clearance - 0.093 (approx.)	2.36 (approx.)
Maximum acceptable piston rod run-out - vertical	0.002	0.05
Maximum acceptable piston rod run-out - horizontal	0.001	0.03

Table 3.4. VRS-4 Compressor Clearances

VRS-4 DOUBLE-ACTING CYLINDER DATA							
BORE IN.	FLANGE SIZE IN/RATING	VALVE TYPE	LIFT AREA SUCT/DISCH SQ/IN.	VALVE LIFT SUCT/DISCH IN.	ADDED CLEARANCE/ MAXIMUM %	MAWP PSI	RDP PSI
2.5	1.5"/900#	42 CRE	0.82/0.59	.055/.039	44 W/HEAD SPACERS	2250	2025
2.5 HP	1.5"/1500#	42 CRE	0.59/0.47	.039/.031	44 W/HEAD SPACERS	2750	2475
3.0	1.5"/900#	42 CRE	0.82/0.59	.055/.039	40 W/HEAD SPACERS	2250	2025
3.0 HP	1.5"/1500#	42 CRE	0.59/0.47	.039/.031	40 W/HEAD SPACERS	2750	2475
3.5	2"/600#	60 CRE	1.90/1.43	.063/.047	56 W/VVCP	1270	1150
4.0	2"/600#	60 CRE	1.90/1.43	.063/.047	42 W/VVCP	1270	1150
4.5	2.5"/600#	70 CRE	2.25/1.69	.063/.047	52 W/VVCP	1100	990
5.0	2.5"/600#	70 CRE	2.25/1.69	.063/.047	42 W/VVCP	1100	990
5.5	3"/300#	88 CRE	3.88/3.09	.079/.063	52 W/VVCP	635	575
6.0	3"/300#	88 CRE	3.88/3.09	.079/.063	44 W/VVCP	635	575
6.5	4"/300#	98 CRE	4.31/3.44	.079/.063	59 W/VVCP	500	450
7.0	4"/300#	98 CRE	4.31/3.44	.079/.063	52 W/VVCP	500	450
7.5	4"/300#	105 CRE	5.83/4.67	.079/.063	59 W/VVCP	350	315
8.0	4"/300#	105 CRE	5.83/4.67	.079/.063	52 W/VVCP	350	315
9.5	6"/150#	98 CRE (2/corner)	4.31/3.44	.079/.063	100 W/VVCP	250	225
10.0	6"/150#	98 CRE (2/corner)	4.31/3.44	.079/.063	96 W/VVCP	250	225

NOTE: HP= special high-pressure rated cylinders.

Table 3.5. VRS-4 Compressor Double-acting Cylinder Data

VRS-4 STEEPLE CYLINDER DATA							
BORE SACE X SAHE IN	FLANGE SIZE IN./RATING	VALVE TYPE	LIFT AREA SUCT/DISCH SQ/IN.	VALVE LIFT SUCT/DISCH IN.	ADDED CLEARANCE MAXIMUM %	MAWP PSI	RDP PSI
2.5/1.375	1.5"/1500# X 1.5" SPECIAL FLG.	42 CRE/42 CRE 46030 OR 40030	.59/.59 .152/.164	.039/.039 .039/.031	0 0	2750/6000	2475/ 5400
3.0/1.375	1.5"/1500# X 1.5" SPECIAL FLG.	42 CRE/42 CRE 46030 OR 40030	.59/.59 .152/.164	.039/.039 .039/.031	0 0	2750/6000	2475/ 5400
3.5/2.25	2.0"/600# X 1.5"/1500#	60 CRE 42 CRO	1.90/1.43 0.76/0.65	.063/.047 .055/.047	26 with head spacers	1270/2550	1150/ 2025
4.0/2.25	2.0"/600# X 1.5"/1500#	60 CRE 42 CRO	1.90/1.43 0.76/0.65	.063/.047 .055/.047	26 with head spacers	1270/2250	1150/ 2025
4.5/2.50	2.5"/600# X 1.5"/1500#	70 CRE 42 CRO	2.25/1.69 0.76/0.65	.063/.047 .055/.047	26 with head spacers	1100/2250	990/ 2025
4.5/3.0	2.5"/600# X 1.5"/900#	70 CRE 60 CRO	2.25/1.69 1.64/1.23	.063/.047 .063/.047	26 with head spacers	1100/1500	990/ 1350
4.5/3.5	2.5"/600# X 1.5"/900#	70 CRE 60 CRO	2.25/1.69 1.64/1.23	.063/0.47 .063/.047	26 with head spacers	1100/1500	990/ 1350
5.0/2.50	2.5"/600# X 1.5"/1500#	70 CRE 42 CRO	2.25/1.69 0.76/0.65	.063/.047 .055/.047	26 with head spacers	1100/2250	990/ 2025
5.0/3.0	2.5"/600# X 1.5"/900#	70 CRE 60 CRO	2.25/1.69 1.64/1.23	.063/.047 .063/.047	26 with head spacers	1100/1500	990/ 1350
5.0/3.5	2.5"/600# X 1.5"/900#	70 CRE 60 CRO	2.25/1.69 1.64/1.23	.063/.047 .063/.047	26 with head spacers	1100/1500	990/ 1350
5.5/3.0	3.0"/300# X 1.5"/900#	88 CRE 60 CRO	3.88/3.09 1.64/1.23	.079/.063 .063/.047	26 with head spacers	635/1500	575/ 1350
5.5/3.5	3.0"/300# X 1.5"/900#	88 CRE 60 CRO	3.88/3.09 1.64/1.23	.079/.063 .063/.047	26 with head spacers	635/1500	575/ 1350
6.0/3.0	3.0"/300# X 1.5"/900#	88 CRE 60 CRO	3.88/3.09 1.64/1.23	.079/.063 .063/.047	26 with head spacers	635/1500	575/ 1350
6.0/3.5	3.0"/300# X 1.5"/900#	88 CRE 60 CRO	3.88/3.09 1.64/1.23	.079/.063 .063/.047	26 with head spacers	635/1500	575/ 1350
6.5/4.0	4.0"/300# X 2.0"/600#	98 CRE 70 CRO	4.31/3.44 2.12/1.60	.079/.063 .063/0.47	26 with head spacers	500/1000	450/ 900
6.5/4.5	4.0"/300# X 2.0"/600#	98 CRE 70 CRO	4.31/3.44 2.12/1.60	.079/.063 .063/.047	26 with head spacers	500/1000	450/ 900
7.0/4.0	4.0"/300# X 2.0"/600#	98 CRE 70 CRO	4.31/3.44 2.12/1.60	0.79/.063 .063/.047	26 with head spacers	500/1000	450/ 900
7.0/4.5	4.0"/300# X 2.0"/600#	98 CRE 70 CRO	4.31/3.44 2.12/1.60	0.79/0.63 .063/.047	26 with head spacers	500/1000	450/ 900

Table 3.6. VRS-4 Compressor Steeple Cylinder Data

3.3 Piston Ring Side Clearance and End Gap

The standard side clearance in inches (mm) for the VRS-4 compressor piston rings, when new, is shown in the following tables:

NEW CONVENTIONAL PISTON RING SIDE CLEARANCE		
NOMINAL WIDTH	ACTUAL GROOVE WIDTH inches (mm)	TEFLON ONE-PIECE inches (mm)
1/4 (6.35)	0.250 to 0.252 (6.35 to 6.4008)	0.005 to 0.009 (0.127 to 0.2286)
3/8 (9.53)	0.375 to 0.377 (9.525 to 9.5758)	0.007 to 0.011 (0.1778 to 0.2794)

Table 3.7. VRS-4 Compressor Piston Ring Side Clearance

NEW RIDER RING PISTON RING SIDE CLEARANCE		
NOMINAL WIDTH	ACTUAL GROOVE WIDTH inches (mm)	TEFLON ONE-PIECE inches (mm)
1/2 (12.7)	0.500 to 0.502 (12.70 to 12.7508)	0.008 to 0.013 (0.2032 to 0.3302)
3/4 (19.05)	0.750 to 0.752 (19.05 to 19.1008)	0.014 to 0.019 (0.3556 to 0.4826)

Table 3.8. VRS-4 Compressor New Rider Ring Piston Ring Side Clearance

PISTON TO BORE CLEARANCE AND CONVENTIONAL PISTON RING END GAP FOR DOUBLE-ACTING AND STEEPLE CYLINDERS

BORE DIAMETER (INCHES)	PISTON TO BORE CLEARANCE (INCHES)	PISTON RING END GAP – TFE NEW MIN. - MAX. (INCHES)
1.375	0.007 to 0.009	0.015 to 0.021
2.5	0.031 to 0.034	0.034 to 0.044
3.0	0.030 to 0.033	0.042 to 0.052
3.5	0.030 to 0.033	0.049 to 0.059
4.0	0.030 to 0.034	0.056 to 0.068
4.5	0.030 to 0.034	0.063 to 0.077
5.0	0.030 to 0.034	0.070 to 0.086
5.5	0.045 to 0.049	0.077 to 0.095
6.0	0.045 to 0.049	0.084 to 0.102
6.5	0.045 to 0.049	0.091 to 0.110
7.0	0.045 to 0.049	0.098 to 0.120
7.5	0.045 to 0.049	0.105 to 0.129
8.0	0.045 to 0.049	0.112 to 0.136
9.5	0.045 to 0.049	0.133 to 0.163
10.0	0.045 to 0.049	0.140 to 0.172

Table 3.9. Piston to Bore Clearance and Conventional Piston Ring End Gap for Double-acting and Steeple Cylinders

3.4 Fastener Tightening Torque

The following tables list the fastener tightening torque values required for proper assembly of the Arrow VRS-4 compressor. All threads need to be cleaned and free from burrs and nicks.

Torque values are based on the use of petroleum-type lubricants used on threads and seating surfaces.

FASTENER TIGHTENING VALUES			
FASTENER	NOMINAL SIZE, INCH – TPI	TYPE	TORQUE
Main bearing cap screw	1/2 - 13	12-point - Grade 8	105 ft.-lbs. (142 Nm)
Connecting rod cap screw	1/2 - 20	12-point - Grade 8	90 ft.-lbs. (122 Nm)
Frame tie-bolt screw	5/8-18	Hex - Grade 8	85 ft.-lbs. (115 Nm)
Crosshead pin through bolt - lock nut	3/8 - 16	Hex - Flexloc	25 ft.-lbs. (34 Nm)
Frame to cylinder - screw	1/2 - 13	12-point - Grade 8	82 ft.-lbs. (111 Nm)
Eccentric chain idler clamp - screw	1/4 - 20	12-point - Grade 8	109 in.-lbs. (16 Nm)
Idler sprocket - screw	3/8 - 24	12-point - Grade 8	30 ft.-lbs. (55 Nm)
Rod packing - screw	1/2 - 13	12-point - Grade 8	45 ft.-lbs. (61 Nm)
Piston nut	7/8 - 14	Arrow Design	330 ft.-lbs. (447 Nm)
Crosshead jam nut	2 - 14	Arrow Design	255 ft.-lbs. (346 Nm)
Rupture disc - blow out fitting cap	1/4 - Nom. Tube	Hex - Tube Fitting	36 in.-lbs. (4 Nm)*
Valve cover/cylinder head/VVCP - screw	1/2 - 13	12-point - Grade 8	82 ft.-lbs. (111 Nm)
Steeple cylinder to cylinder - screw	1/2 - 13	12-point - Grade 8	82 ft.-lbs. (111 Nm)
Divider block valve - screw	1/4 - 28	Socket Head	109 in.-lbs. (16 Nm)
* Because the aluminum disk may be damaged if tightened too tight, Arrow recommends to hand-tighten and then 1/8 turn with a wrench for proper tightening.			

Table 3.10. VRS-4 Compressor Fastener Tightening Values

VALVE ASSEMBLY FASTENERS – TIGHTENING VALUES		
CYLINDER SIZE (INCHES)	CENTER BOLT SIZE (INCHES)	TORQUE VALUE (FT.-LBS.)
2.25 - 3.0	1/4 - 28 UNF	8 - 10
3.5 - 4.0	5/16 - 24 UNF	13 - 15
4.5 - 5.0	3/8 - 24 UNF	18 - 21
5.5 - 6.0	1/2 - 20 UNF	32- 38
6.5 - 10.0	1/2 - 20 UNF	32- 38

Table 3.11. VRS-4 Compressor Valve Assembly Fasteners – Tightening Values

3.5 Torque Procedures

Listed here are procedures to aid you with proper torque technique. These procedures will allow faster and more accurate tightening as well as to ensure that the proper torque is being applied.

These are general guidelines to assist you in the proper use and techniques of the torque wrench:

1. Check to be sure your torque wrench is calibrated properly and is being used by a qualified individual. This will ensure that proper tightening torque for all critical parts is achieved.
2. Because torque wrenches are not accurate over their entire range, check to determine what range the torque wrench is accurate.
3. When tightening with a torque wrench, NEVER jerk the wrench. Apply steady slow force to the torque wrench. When jerking a torque wrench, the amount of torque applied can be as much as one-and-a-half times the amount indicated on the wrench.
4. Always finalize tightening with a torque wrench. NEVER tighten the fastener with a ratchet or impact wrench, and then check the torque with a torque wrench.
5. Never double tap the torque wrench. This action will cause the torque wrench to make the torque on the bolt more than what is set. If you need to check the setting, release all pressure on the torque wrench and slowly apply a steady force until a click is felt.
6. After the tightening is complete return the torque wrench to its lowest setting. If the torque wrench is left in a high setting, the spring will become stressed and the torque wrench will become inaccurate over time.
7. The torque wrench should not be used to break fasteners loose. This could cause the torque wrench to lose calibration.

3.6 Bolting

Bolts used with the VRS-4 compressor have been selected based on Arrow's strength, sealing and locking requirements. Proper bolting must be used and tightened to the values found listed in Table 3.10, Fastener Tightening Values. This information provides assistance in the identification of bolts used in the Arrow VRS-4 compressor.

If there are questions about replacing bolts or bolting questions, please contact your packager or Arrow. Arrow-supplied replacement bolting is recommended.

3.7 Safety Information

CAUTION

SEVERE INJURY AND PROPERTY DAMAGE CAN OCCUR IF COMPRESSOR IS NOT COMPLETELY VENTED BEFORE LOOSENING SCREWS, FLANGES, HEADS, VALVES, VALVE COVERS OR PACKING. REFER TO THE ARROW VRS-4 COMPRESSOR OPERATIONS AND MAINTENANCE MANUAL BEFORE ANY REPAIR OR MAINTENANCE IS STARTED.

CAUTION

SUCTION AND DISCHARGE VALVES MUST BE INSTALLED CORRECTLY AND IN THEIR PROPER LOCATION OR SEVERE PERSONAL INJURY AND PROPERTY DAMAGE CAN OCCUR. REFER TO THE VRS-4 COMPRESSOR OPERATIONS AND MAINTENANCE MANUAL FOR PROPER VALVE INSTALLATION INSTRUCTIONS.

CAUTION

NOISE GENERATED BY THE VRS-4 COMPRESSOR CAN CAUSE HEARING INJURY. ARROW RECOMMENDS WEARING THE PROPER HEARING PROTECTION WHEN THE COMPRESSOR IS RUNNING.

CAUTION

HOT GAS TEMPERATURES FROM CYLINDER AREA AS WELL AS HIGH FRICTION AREAS OF THE UNIT CAN CAUSE BURNS. WEAR THE PROPER INSULATED CLOTHING WHEN AROUND THE COMPRESSOR. SHUT DOWN THE UNIT AND ALLOW FOR COOLING BEFORE PERFORMING ANY MAINTENANCE TO THESE AREAS.



3.8 Recommended Special Tools

Special tools may be ordered as follows:

1. Tool box (complete set of recommended tools)
2. Individual recommended tools
3. Individual optional tools
4. Combination of individual recommended tools and individual optional tools

SPECIAL TOOLS AND TOOL BOX					
ITEM NO.	PART NO.	DESCRIPTION	QUANTITY		
			STD. ISSUE	REC. TOOL	OPT. TOOL
	VRS29400A	Tool box (includes all of the following)			
1	VRC29400	Tool bag, Arrow Compression Products		1	
2	VRC21140	Adaptor, bar-over, crankshaft	1	1	
3	VRC29490	Piston nut adaptor		1	
4	VRC29492	Piston rod entering sleeve		1	
5	VRS29482	Tool, oil seal entering sleeve		1	
6	VRC29496	2" jam nut wrench		1	
7	VRC29499	Piston jam nut bar		1	
8	VRC29463	Tool, valve installation, 2.25 - 4.0" cylinders		1	
9	VRC29464	Tool, valve installation, 4.5 - 8.0" cylinders		1	
10	KA50060	Filter oil		1	

4 COMPRESSOR START-UP

4.1 Maximum Allowable Working Pressure

All Arrow VRS-4 compressor cylinders have a maximum allowable working pressure (MAWP). This MAWP is stamped on every name plate.

Arrow cylinders are tested to a hydrostatic test pressure of 1-1/2 times the MAWP.

CAUTION: Operating conditions must NOT exceed the cylinder maximum allowable working pressure (MAWP).

API SPEC 11P* (paragraph 1.10.5) - RDP

Rated discharge pressure (RDP) is defined as the highest pressure required to meet the conditions specified by the purchaser for the intended service. Arrow Cylinder Data Sheets list the RDP, which is the recommended continuous pressure the equipment should be designed to operate. RDP is 90% of the maximum allowable working pressure (MAWP).

4.2 Relief Valve Settings

It is the responsibility of the packager to provide relief valves for every stage of the compression operation in compliance with API SPEC 11P*, Paragraph 7.20.3.

4.3 Filling the Main Oil System Sump

Filling the sump of the main oil system must be done prior to start-up.

1. Remove breather and fill compressor sump through top cover.
2. Check sight glass on accessory end. Oil level at start-up should be in the middle of the sight glass. Be careful NOT TO OVER FILL THE SUMP. The crankshaft will dip into the oil, churn it, and make it difficult to pump and control the proper level of oil if sump is overfilled. It may be necessary to add additional oil to bring the level of oil to the middle of the sight glass if you are starting with a dry or new filter.

NOTE: After the compressor is running, it may be necessary to add oil to increase the oil level to one-half the height of the sight glass; however, it must never exceed two-thirds the height while the compressor is running during normal operations.

3. When the sump is filled to the proper level, install and tighten the breather by hand. Tightening by hand will help when removing the breather at a later date.

4.4 Cylinder Lubricator Pump Adjustment at Start-up

To be sure that the cylinder lube pump system is set to the correct break-in rate, refer to the cylinder lubricator plate located on the side of the force-feed lube reservoir or refer to Table 9.7.2, Divider Block Technical Data and Cycle Time. An indicator pin on the divider block shows the rate at which the block is cycling.

To make adjustments to the rate, screw DOWN the feed regulator adjustment to DECREASE the rate, screw UP the feed regulator adjustment to INCREASE the rate. Adjust screw upward to twice the normal rate to set the break-in rate.

Run at this setting for 200 hours of operation. The lubricator adjustment may then be reduced (screw DOWN the feed regulator adjustment) to the normal operating rate.


NOTE: Remember this simple rule when making adjustments: UP IS UP (screw upward to increase rate) and DOWN IS DOWN (screw downward to decrease rate).

Tighten lock nut securely after adjustments have been made to the feed regulator screw.

NOTE: If lock nut is not tightened properly, it can vibrate loose and lube rate will not be at the desired setting.

4.5 VRS-4 Compressor Start-up Checklist

COMPRESSOR GENERAL INFORMATION				
Compressor Model		Serial No.		
Cylinder Serial No.				
Driver		Rated Speed		
Packager		Packager Unit No.		
Date Packager Shipped		Start-up Date		
Serviceman		Customer		
Location		Field Contact		
Field Telephone No.		Unit Location		
Frame Oil - Manufacturer		Grade		
Cylinder Oil - Manufacturer		Grade		
NOTES / COMMENTS:				

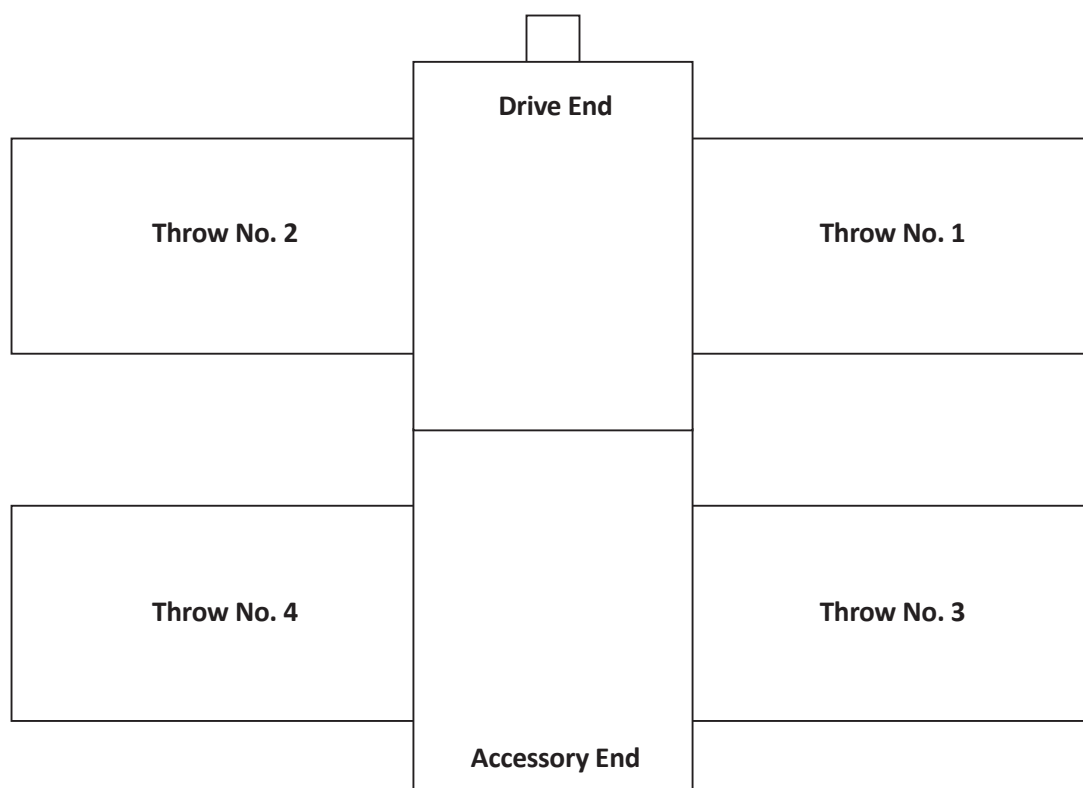

4.5.1 Pre-Start-up Checklist

Compressor Model	Serial No.	
	YES	NO
1. Are the correct Arrow parts book, technical manual, special tools, and spares available?		
2. Have the design limitations for the compressor model such as rod load, maximum and minimum speed, discharge temperature been checked?		
3. Have the design operating conditions been determined?		

Pressure, PSIG (kPa): Suction	Discharge
Temperature, °F (°C): Suction	Discharge
Maximum RPM	Minimum RPM


	YES	NO
4. Soft Foot Check: Have the compressor feet and crosshead guide supports been shimmed so that the machine is not twisted or bent?		
5. Have bottom crosshead clearances on all corners been checked? Max. 0.0015" (0.0381 mm) feeler inserted to 1/2" (12.7 mm) Max. depth.		

6. Record top crosshead minimum feeler clearance below:

THROW No. 1	THROW No. 2
THROW No. 3	THROW No. 4

	YES	NO
7. Have the piping and supports been checked to be sure they do not bend or stress compressor?		
8. Have the coupling bolt torque values been rechecked?		
9. Has the compressor to driver alignment been checked? Maximum allowable 0.005" (0.127mm) TIR		

10. Record coupling dial indicator readings in inches at the 3, 6, 9, 12 o'clock positions on the lines provided.

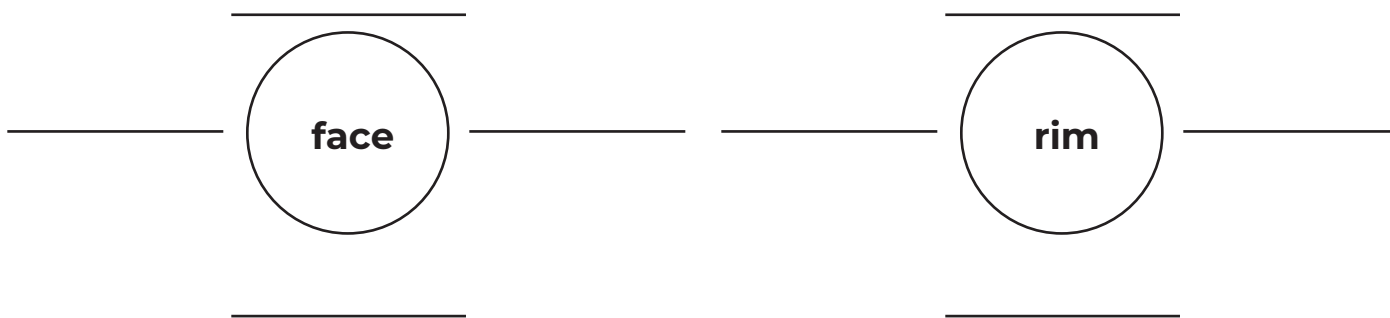

	YES	NO		
11. Has the crankshaft end-play clearance been checked?				
Record frame end-play clearance here:	inches (mm)			
	YES	NO		
12. Have piston end clearances been checked with feeler gauges?				
THROW NO.	1	2	3	4
HE				
CE				
	YES	NO		
13. Has the frame been filled with oil to the proper level?				
14. Has proper oil been added if extreme ambient conditions exist or special gases are compressed?				
15. Is the compressor frame oil level control working and set at the proper level?				
16. Is the frame oil supply isolation valve open?				
17. Does the frame low level shutdown work?				
18. Has the recommended oil filter element been installed?				

19. Is the oil filter element and all lube oil piping primed with oil?		
20. Is the low oil pressure shutdown installed and tubed correctly to the downstream side of the oil filter?		
21. Does the low oil pressure shutdown work?		
YES NO		
22. Does unit have an oil cooler? Maximum compressor inlet oil temperature is not to exceed 250°F (121°C).		
23. Is the frame oil temperature shutdown installed, set and working?		
24. If oil is cooled, is there a temperature control valve?		
25. Is the frame breather element clean?		
26. Is the cylinder lubricator box filled with oil?		
27. Is the cylinder lubricator system primed?		
28. Is the cylinder lubrication system no-flow shutdown installed and working?		
29. Is the cylinder lubrication overpressure indicator installed? Check rupture disc for color. Aluminum is standard at 2,350 PSI.		
30. Has the lubricator instruction plate or divider block technical data and cycle time (Table 9.7.2) been checked for proper lube feed rate?		
31. Is there a working vibration shutdown mounted on the compressor?		
32. Are the primary and secondary packing vents and the distance piece vents open, and when necessary, tubed off of the skid or out of the building?		
33. Is there some method of suction pressure control?		
34. Are the suction pressure, inter stage pressure and discharge pressure shutdowns set and working?		
35. Are the safety relief valves installed and set to protect cylinders and piping for each stage of compression?		
36. Are the gas discharge temperature shutdowns installed, set and working?		

37. Have the gas suction lines been blown out to remove water, slag, dirt, etc?		
38. Have temporary screens been installed at cylinder suction?		
39. Has the machine been rolled with the starter to make sure it is free? The oil pressure should increase noticeably while rolling on the starter.		
40. For engine-driven units, has the machine been rolled with the starter to make sure it is free? The oil pressure should increase noticeably while rolling on the starter.		
41. Does the driver rotation match the compressor rotation?		
	YES	NO
42. For machines compressing a combustible gas, have the piping and compressor been purged to remove all air?		
43. Have the start-up instructions for other equipment on the package been followed?		
44. Has the Packager's representative done the required review of the Packager's Start-up and Operating Instructions for the unit with the unit operator?		

4.5.2 After Start-up Checklist

Compressor Model:	Serial No:	
	YES	NO
1. Did the oil pressure increase immediately?		
2. Any strange noises or shaking in the compressor or piping?		
3. Is low oil pressure shutdown set at 25 PSIG?		
4. Are the high discharge gas temperature shutdowns set at approximately 10% above normal discharge temperature? 325°F (163°C) to a maximum of 350°F (177°C).		
5. Is the divider block cycle indicator pin moving, and have you set lubricator for proper break-in flow rate?		
6. Are there any oil leaks? If so, where?		

7. Are the scrubber dumps and high level shutdowns working?		
8. Are the scrubbers removing all liquids from the gas?		
How often do the scrubbers dump?	min	
9. Are there sands or oxides in the gas?		
10. Is the overspeed shutdown set?		
11. Are rod packing sealing properly?		
12. Have all safety functions been tested to ensure shutdown of unit upon malfunction?		

	YES	NO		
13. Has the crankshaft end-play clearance been checked?				
Record frame end-play clearance here:	inches (mm)			
	YES	NO		
14. Have piston end clearances been checked with feeler gauges?				
THROW No.	1	2	3	4
HE				
CE				
	YES	NO		
15. Has the frame been filled with oil to the proper level?				
16. Has proper oil been added if extreme ambient conditions exist or special gases are compressed?				
17. Is the compressor frame oil level control working and set at the proper level?				
18. Is the frame oil supply isolation valve open?				
19. Does the frame low level shutdown work?				
20. Has the recommended oil filter element been installed?				
21. Is the oil filter element and all lube oil piping primed with oil?				

22. Is the low oil pressure shutdown installed and tubed correctly to the downstream side of the oil filter?		
23. Does the low oil pressure shutdown work?		
24. Does unit have an oil cooler? Maximum compressor inlet oil temperature is not to exceed 250°F (121°C).		
25. Is the frame oil temperature shutdown installed, set and working?		
26. If oil is cooled, is there a temperature control valve?		
27. Is the frame breather element clean?		
28. Is the cylinder lubricator box filled with oil?		

	YES	NO
29. Is the cylinder lubricator system primed?		
30. Is the cylinder lubrication system no-flow shutdown installed and working?		
31. Is the cylinder lubrication overpressure indicator installed? Check rupture disc for color. Aluminum is standard at 2350 PSI.		
32. Has the lubricator instruction plate or divider block technical data and cycle time (Table 9.7.2) been checked for proper lube feed rate?		
33. Is there a working vibration shutdown mounted on the compressor?		
34. Are the primary and secondary packing vents and the distance piece vents open, and when necessary, tubed off of the skid or out of the building?		
35. Is there some method of suction pressure control?		
36. Are the suction pressure, inter stage pressure and discharge pressure shutdowns set and working?		
37. Are the safety relief valves installed and set to protect cylinders and piping for each stage of compression?		
38. Are the gas discharge temperature shutdowns installed, set and working?		

39. Have the gas suction lines been blown out to remove water, slag, dirt, etc?		
40. Have temporary screens been installed at cylinder suction?		
41. Has the machine been rolled with the starter to make sure it is free? The oil pressure should increase noticeably while rolling on the starter.		
42. For engine-driven units, has the machine been rolled with the starter to make sure it is free? The oil pressure should increase noticeably while rolling on the starter.		
43. Does the driver rotation match the compressor rotation?		
44. For machines compressing a combustible gas, have the piping and compressor been purged to remove all air?		
45. Have the start-up instructions for other equipment on the package been followed?		
46. Has the Packager's representative performed the required review of the Packager's Start-up and Operating Instructions for the unit with the unit operator?		

4.6 Compressor Maintenance

4.6.1 General Information

The main components of the frame assembly are: the frame, crosshead guides, crankshaft and bearings, connecting rods, chain drive system and crossheads. Drilled oil passages deliver lubrication to the running gear.

A top cover and crosshead guide side covers provide ample accessibility for inspecting and removing internal components of the VRS-4 compressor.

Cleanliness is important. Use lint-free cloths to wipe clean the frame and all the working parts during any maintenance on the compressor. It is important to keep the frame covered when the access panels are removed during maintenance. Covering the frame will help keep dust and dirt out. If any components have been removed, it is important that you protect these parts from anything that might damage the running surfaces.

Whenever the compressor has been dismantled, gaskets at non-pressure positions are to be inspected before reusing. If a gasket is found to be damaged or compromised it **MUST** be replaced before restarting the compressor. Gaskets and o-rings at pressure locations in the compressor should be replaced.



When conducting major overhauls on the compressor, drain and flush the compressor frame.

CAUTION: *To prevent personal injury be sure that the compressor crankshaft cannot be turned by the driver or compressor cylinder gas pressure during maintenance or repair. On engine-driven compressors, lock the flywheel. On electric motor-driven compressors, the driver switch gear must be locked out during maintenance or repair.*

Before starting any maintenance or repairing any of the compressor parts, relieve all pressure from the compressor cylinders. See the packager's instructions for complete venting of the system.


CAUTION: *When maintenance is complete, air must be totally eliminated from the entire system before operation. This will avoid a potentially explosive air/gas mixture from occurring.*

4.7 Frame Parts – Frame, Covers, Gaskets, Oil Strainer, Sight Glass, and Plugs

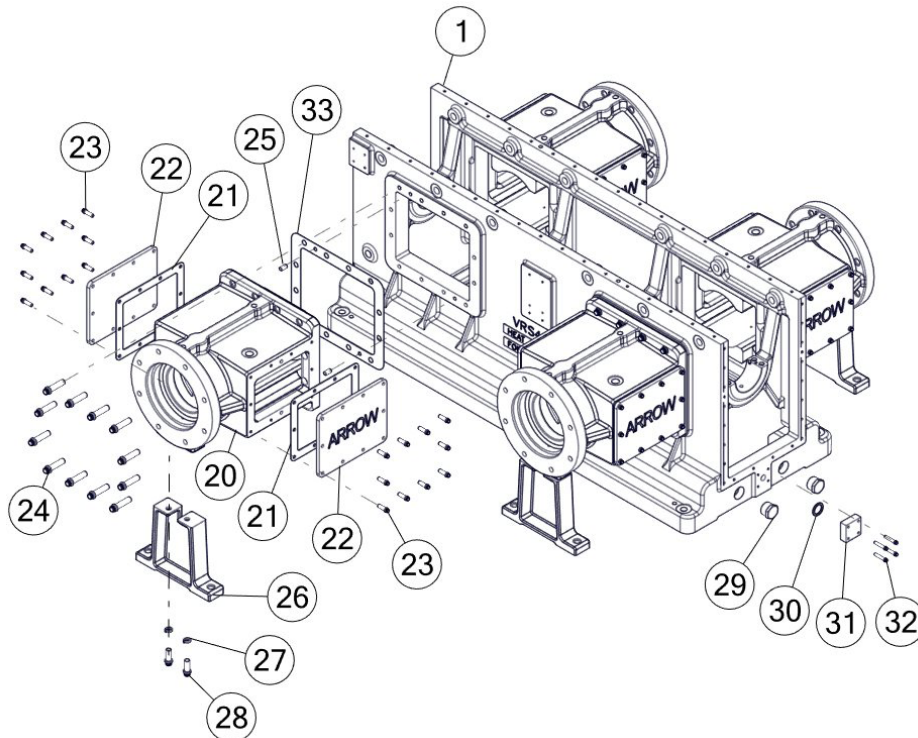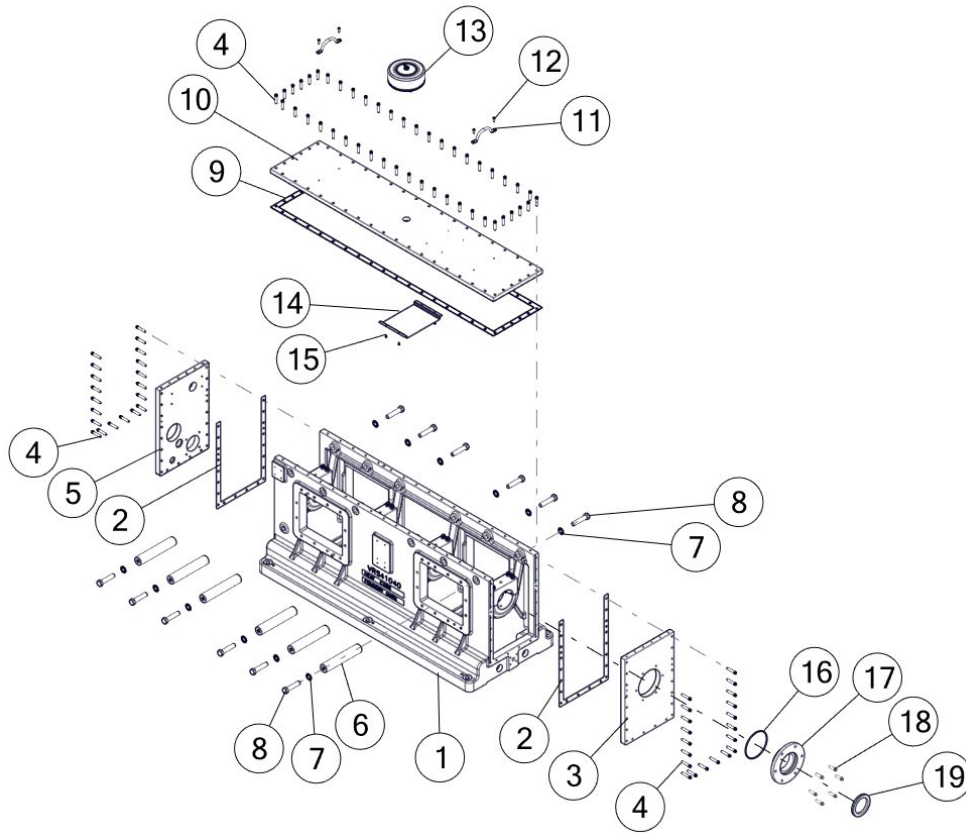

Frame Parts


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
1	VRS-41040	FRAME	1			
2	VRS-41115	GASKET, END PLATE	2			
3	VRS-41130	END PLATE, DRIVE END	1			
4	VRS-41327	SCREW, 12-POINT, 5/16-18 X 1-1/2	86			
5	VRS-41120	END PLATE, ACCESORY END	1			
6	VRS-41043	SPACER	6			
7	VRS-41044	SEAL WASHER	12			
8	VRS-41048	BOLT, FRAME TIE BOLT	12			
9	VRS-41315	GASKET, TOP COVER	1	1	1	1
10	VRS-41310	TOP COVER	1			
11	VRS-41319	HANDLE	2			
12	VRS-41318	SCREW, SOCKET HEAD CAP 12-24 X 5/8	4			
13	VRS-41410	BREATHER	1			1
14	VRC21312	BAFFLE	1			
15	VRC21317	SCREW, 1/4-20 X 3/4 SC HEAD CAP	4	4	4	4
16	VRC25502	O-RING, RETAINER, DRIVE-END	1			
17	VRS-41110	RETAINER, OIL SEAL, DRIVE-END	1			
18	VRC28467	SCREW, 12-POINT, 3/8-16 X 1-1/4	6			
19	VRS28024	OIL SEAL, CRANKSHAFT	1			
20	VRS22220	DISTANCE PIECE	4			
21	VRS21325	GASKET, COVER PLATE FRAME SIDE	8			
22	VRS21320	COVER PLATE, FRAME SIDE	8			
23	VRC21327	SCREW, 12-POINT, 5/16-18 X 1	80			
24	VRC25077	SCREW, 12-POINT, 1/2-13 X 2	48			
25	VRS21506	PIN, DOWEL	8			
26	VRS22230	SUPPORT, DISTANCE PIECE	4			
27	VRC25025	LOCKWASHER, 1/2 HIGH COLLAR PLAIN	8			
28	VRC25067	SCREW, 12-POINT, 1/2-13 X 1-1/4	8			
29	HP-3000-1	PLUG, 1" NPT HEX HEAD	4			
30	VRS-41454	O-RING, FRAME OIL FITTING	2			
31	VRS-41451	FITTING, FRAME OIL PLUG	1			
32	VRS-41459	SCREW, 12-POINT 1/4-20 X 1-1/4	4			
33	VRS22221	GASKET, DIST. PIECE TO FRAME	4			

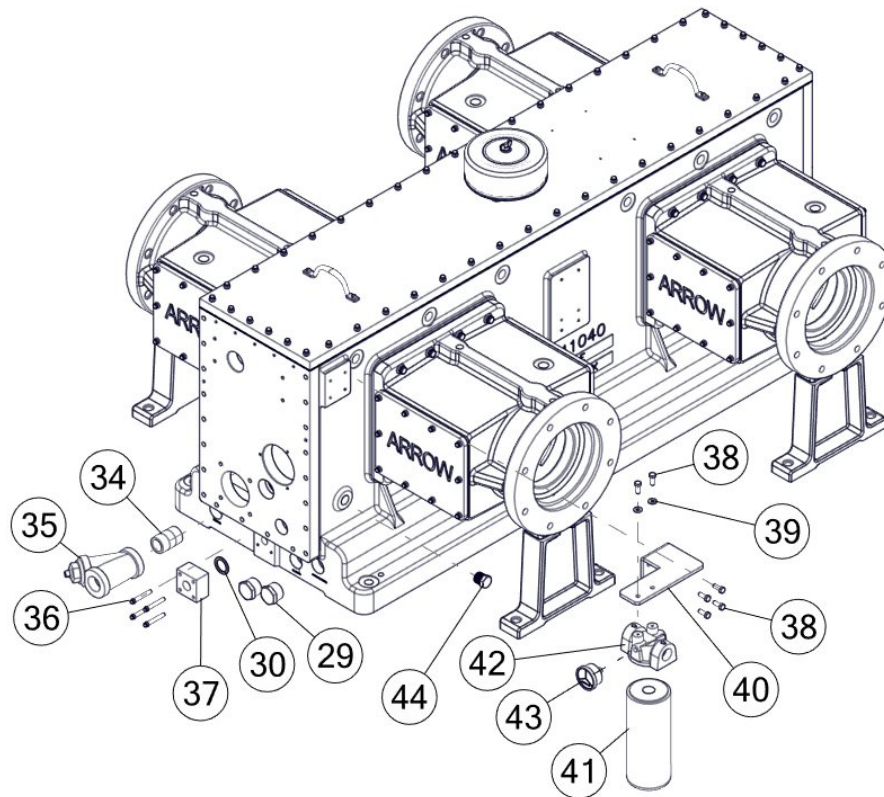

Frame Parts

NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
34	PFI-1X2	PIPE NIPPLE, 1 NPT X 2 LG	1			
35	VRS-48340	STRAINER, Y-TYPE OIL	1			
36	VRS-41457	SCREW, 12-POINT, 1/4-20 X 1-3/4	4			
37	VRS-41450	FITTING, FRAME OIL SUPPLY	1			
38	7A-1/420X3/4	SCREW, HEX HEAD 1/4-20 X 3/4	6			
39	1B-1/4	WASHER, FLAT	2			
40	VRS-48322	BRACE ANGLE FILTER	1			
41	KA50060	FILTER, OIL	1			
42	VRS-48320	BRACKET, MOUNTING FILTER	1			
43	VRS-48329	GAUGE, SERVICE FILTER	1			
44	HP-3000-1/2	PLUG, 1/2" NPT HEX HEAD	1			

4.8 Crankshaft, Crosshead, and Connecting Rod Parts

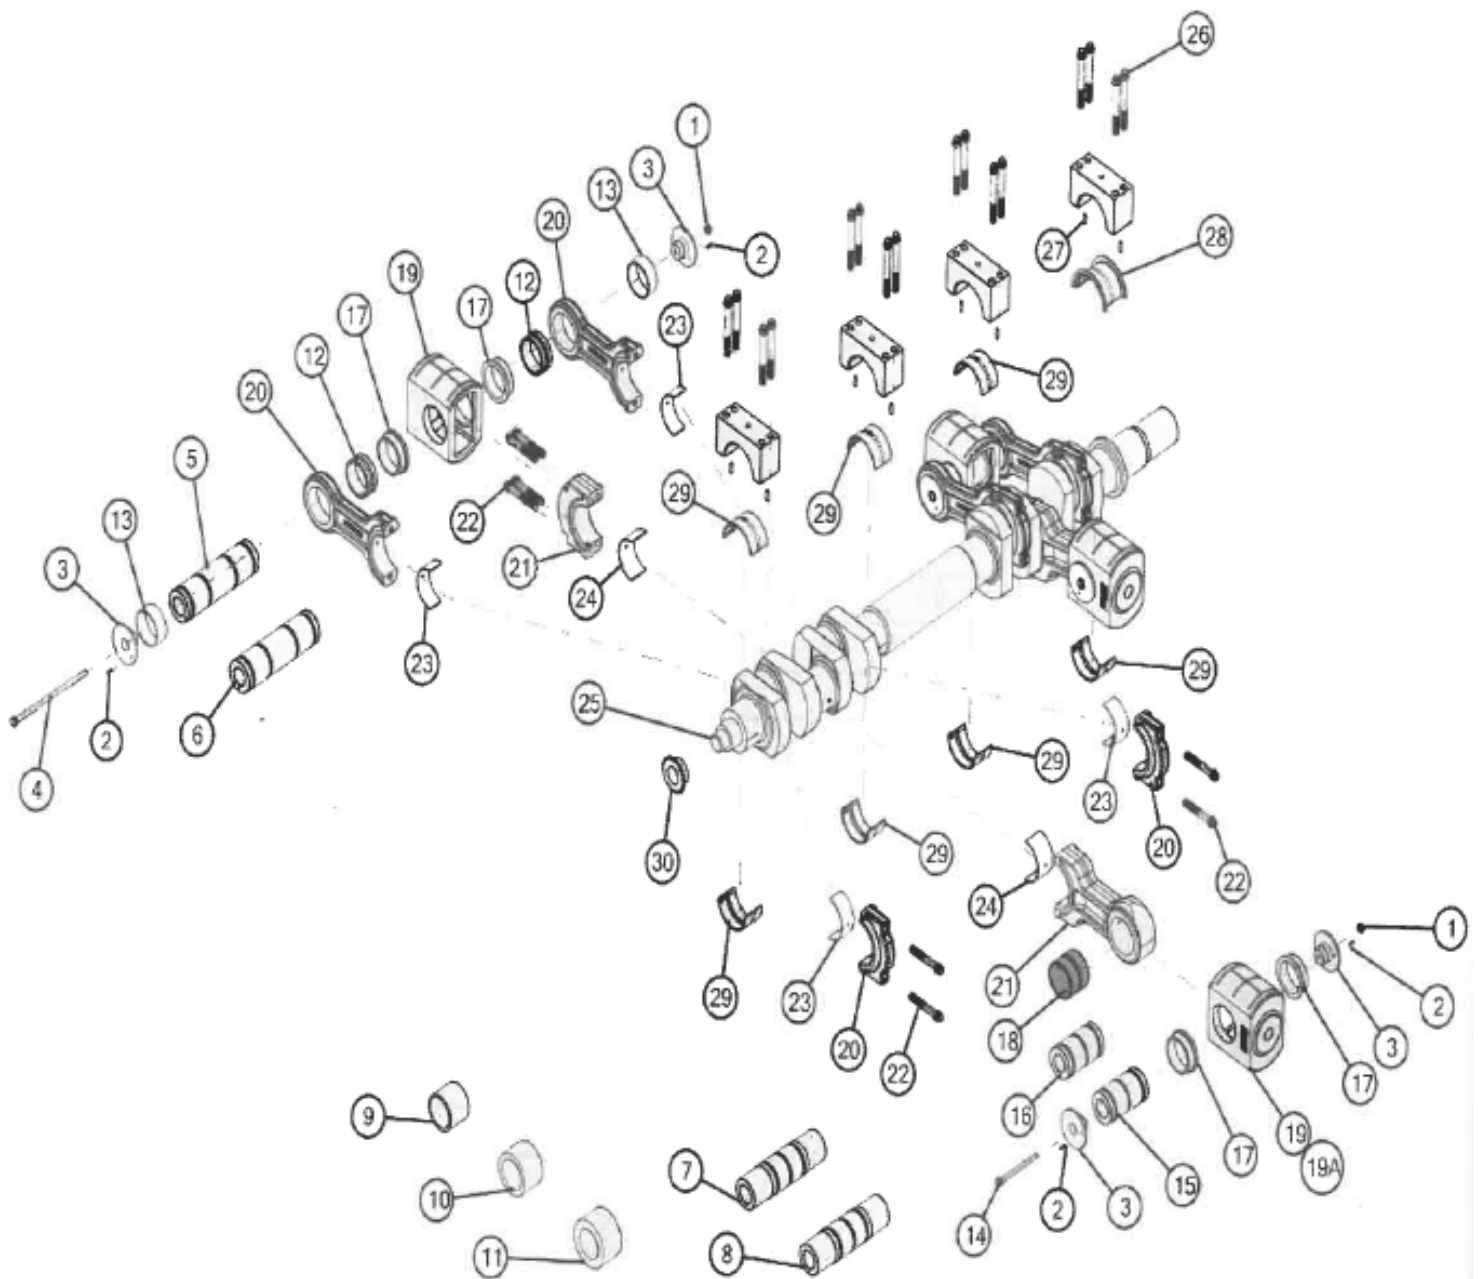

SINGLE AND DOUBLE CONNECTING ROD ASSEMBLY						
NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
1	177299A	NUT, CROSSHEAD PIN RETAINER BOLT	4		4	4
2	VRC22206	PIN, ROLL, CROSSHEAD CAP	8			4
3	VRS22200	CAP, RETAINER, CROSSHEAD PIN	8			4
4	VRS22128	BOLT, CROSSHEAD PIN RETAINER, LONG	2			1
5	VRS22120	PIN, CROSSHEAD, LONG, HEAVYWEIGHT, 10.75# *	2			
6	VRS22125	PIN, CROSSHEAD, LONG, LIGHTWEIGHT, 8.40# *	2			
7	VRS22135	PIN, CROSSHEAD, LONG BALANCE, LIGHTWEIGHT, 7.85# *	2			
8	VRS22130	PIN, CROSSHEAD, LONG BALANCE, HEAVYWEIGHT, 10.15# *	2			
9	VRS22301	WEIGHT, CROSSHEAD PIN, 2 AT 2.20# **	4			
10	VRS22302	WEIGHT, CROSSHEAD PIN, 2 AT 5.18# **	4			2
11	VRS22303	WEIGHT, CROSSHEAD PIN, 2 AT 8.20# **	4			
12	VRS21222	BUSHING, CONNECTING ROD, LIGHT (INCLUDED W/ROD)	4			
13	VRS22420	SPACER, PIN, CROSSHEAD, LONG	4			2
14	VRS22118	BOLT, CROSSHEAD PIN RETAINER, SHORT	2			2
15	VRS22110	PIN, CROSSHEAD, SHORT, HEAVYWEIGHT, 4.90# *	2			1
16	VRS22115	PIN, CROSSHEAD, SHORT, LIGHTWEIGHT, 4.15# *	2			
17	VRS22002	BUSHING, CROSSHEAD (INCLUDED WITH CROSSHEAD)	8			
18	VRS21212	BUSHING, CONNECTING ROD, HEAVY (INCLUDED W/ROD)	2			
19	VRS22000A	CROSSHEAD, VRS-2, ASSEMBLY W/BUSHING AND BABBITT	4			
19A	VRS22000L	CROSSHEAD, LIGHTWEIGHT, VRS-2, ASSEMBLY WITH BUSHING AND BABBITT	4			
20	VRS21220	ROD, CONNECTING, LIGHT, ASSEMBLY WITH BUSHING AND SCREWS	4			
21	VRS21210	ROD, CONNECTING, HEAVY, ASSEMBLY WITH BUSHING AND SCREWS	2			
22	VRS21217	SCREW, CONNECTING ROD CAP (INCLUDED WITH ROD)	16			
23	VRS21221	BEARING, CONNECTING ROD, LIGHT	4			
24	VRS21211	BEARING, CONNECTING ROD, HEAVY	2			
25	VRS-41100	CRANKSHAFT, VRS-4 COMPRESSOR	1			
26	VRS-41217	SCREW, 12-POINT, 1/2-13 X 4-1/4	16			
27	VRS-41106	PIN, DOWEL 1/4 X 3/4 LG	8			
28	VRS-41102	BEARING, MAIN, THRUST	1			
29	VRS-41101	BEARING, MAIN	7			
30	VRS-48248	SPROCKET, CRANKSHAFT	1			
* Pins are determined as required to balance opposing throw according to cylinder configuration.						
** Weights to be determined by cylinder configuration.						

4.9 Crankshaft Installation

4.9.1 Remove Tie-bolt Spacers

IMPORTANT:

Prior to removal of frame tie-bolt spacers (VRS-41043), it is necessary to mark each tie-bolt spacer and corresponding frame position, 1 thru 6 (1 is drive end), for proper reassembly later.



4.9.2 Remove Crankshaft Main Bearing Caps

IMPORTANT:

Prior to removal of main bearing caps, it is necessary to mark each main cap for orientation and corresponding journal position, 1 thru 4 (1 is drive end), for proper reassembly later.

NOTE: Main bearing No. 1 is the thrust bearing.




4.9.3 Install Lower Main Bearings

Instructions

1. Clean main bearing saddles using a clean, lint-free cloth and contact cleaner to remove all residual contaminants.



2. Align bearing tab with notch in bearing saddle. Be sure not to touch surface of bearing to avoid damage and/or contamination.

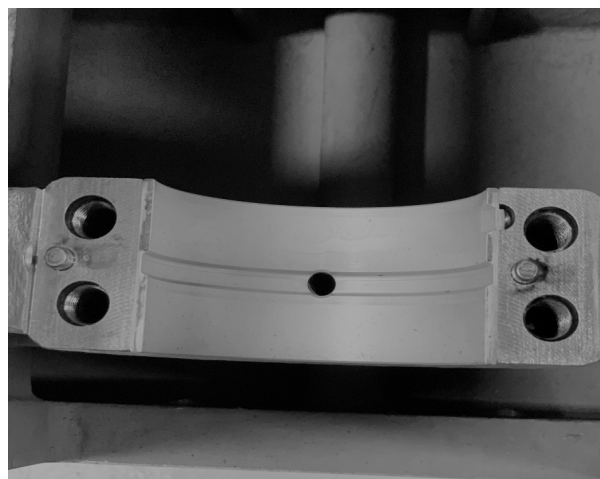


4.9.4 Radial Clearance Inspection of Main Bearings

Instructions

1. Mark main bearing cap for orientation and position and remove.
2. Clean upper main bearing and crankshaft bearing journal with a clean, lint-free cloth and contact cleaner to remove all residual contaminants.
3. Using a .002"-.006" range plastigauge, cut a length of plastic and lay across the main bearing journal of the crankshaft.
4. Install the main bearing cap and torque as shown in previous steps.

NOTE: Do not rotate the crankshaft or the reading will be invalid.

5. Remove the main bearing cap and measure the width of the compressed plastic strip using the plastigauge packaging.

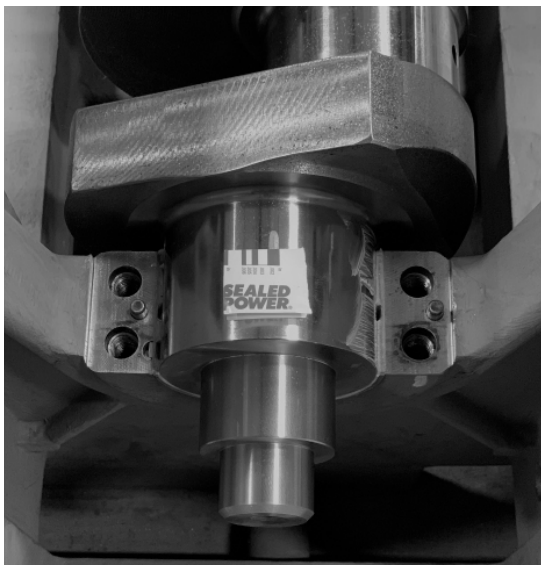

6. Acceptable radial clearance is .002"-.004"

7. Remove the main bearing cap and remove the plastigauge material with a clean, lint-free cloth and contact cleaner.

8. Lubricate the main bearing, journal and main bearing cap screws and reinstall following the torque procedure defined in previous steps.


4.9.5 Install Crankshaft

Instructions


1. Clean crankshaft using a clean, lint-free cloth and contact cleaner to remove all residual contaminants.



2. Lubricate lower main bearings with fresh SAE 30 oil prior to crankshaft installation.

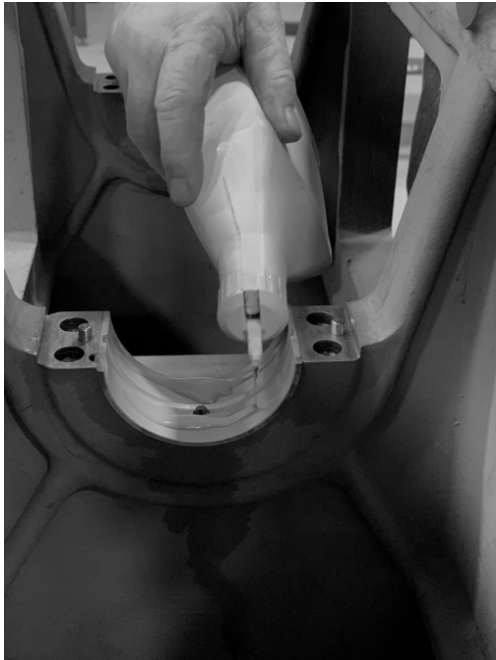

3. Install crankshaft and check for free rotation before installing main caps.

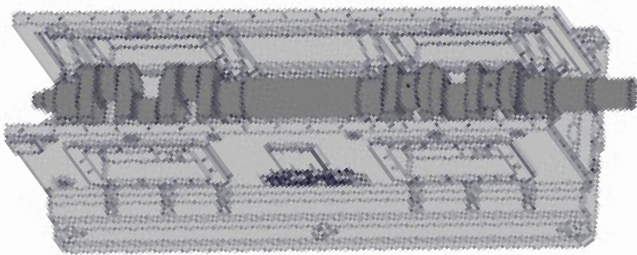


4.9.6 Install Main Bearing Caps

Instructions

1. Clean main bearing cap with a clean, lint-free cloth and contact cleaner to remove all residual contaminants.
2. Install upper main bearings into bearing cap. Align bearing tab with notch in cap.

NOTE: Main bearing cap No. 1 (marked from previous step) will receive the thrust bearing. Be sure not to touch surface of bearing to avoid damage and/or contamination.

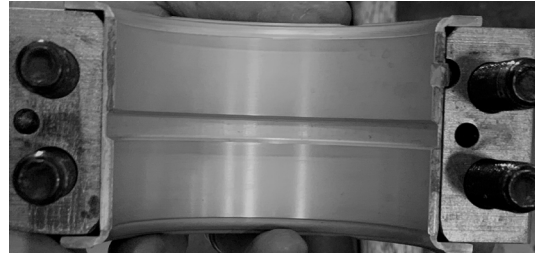

3. Lubricate upper main bearings with SAE 30 oil prior to installation.

4. Install main bearing caps with their corresponding position and orientation as marked from previous steps.

NOTE: Ensure dowel pins are in place before installation.

5. Lubricate main bearing cap screws with fresh oil and install.

NOTE: This step is important for proper clamp load of the main bearing caps.

6. Torque the main bearing cap screws in a two-step crisscross pattern. Use this procedure in the following order of main bearing caps: 3-2-4-1.

- a. Step 1 Torque (ft.-lbs.): 75-80
- b. Step 2 Torque (ft.-lbs.): 105-110



7. Check for free rotation of crankshaft.

4.9.7 Install Tie-bolt Spacers

Instructions

1. Reinstall tie-bolt spacers in the same position and orientation as marked during disassembly.
2. It is recommended to replace all tie-bolt sealing washers (VRS-41044).
3. Fasten tie-bolt spacers using existing or new tie-bolt screws (VRS-41048).
4. Torque fasteners in a two-step crisscross pattern working from center outward.
 - a. Step 1 Torque (ft.-lbs.): 40–45
 - b. Step 2 Torque (ft.-lbs.): 85–90

NOTE: This torque specification is for dry threads.

4.9.8 Drive-end Cover Plate installation

Instructions


1. Install two dowel pins (VRS21506) into frame.
2. Install gasket (VRS-41115).
3. Align dowel pin holes and install drive-end cover plate (VRS-41130) with tapped holes for oil seal retainer facing outward.
4. Tighten cover plate screws (VRS-41327).




4.9.9 Oil Seal and Retainer Installation

Instructions

1. Install O-ring (VRC25502) on oil seal retainer (VRS-41110).

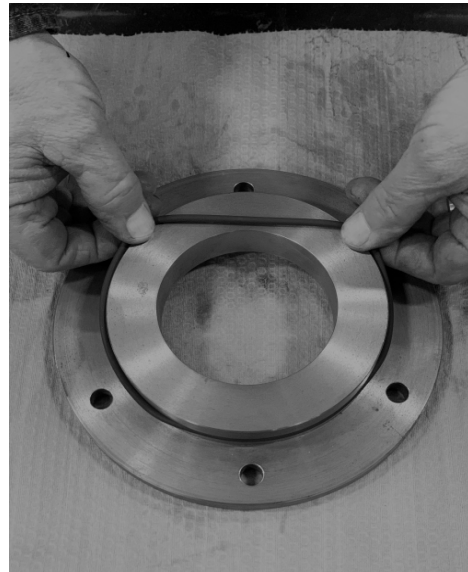

2. Press oil seal (VRS28024) into retainer using a bench press or a block and mallet.
3. Press until seal fully seats in the retainer and seal lip is toward the inside of the retainer.
4. Apply lubricant to the oil seal and O-ring.

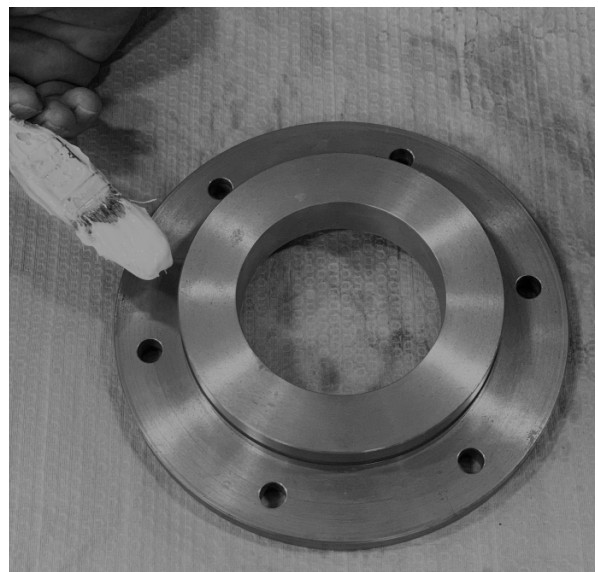

5. Tap seal retainer into place on drive-end cover plate.


6. Tighten the six seal retainer screws (VRS-48027) and check to make sure the crankshaft still rotates freely.



4.9.10 Crankshaft End-play Check Procedure

Instructions

1. Set dial indicator base on the end of the frame with dial indicator touching the end of the crankshaft.
2. Push or tap crankshaft either direction to its limit of travel. Set dial indicator to zero and pull or tap crankshaft to the opposite limit of travel.
3. Crankshaft endplay reading should fall within .013"-.020".

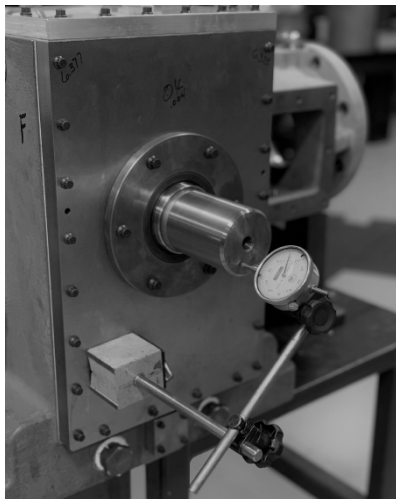


4.10 Piston and Piston Rod Assembly Preparation

1. Clean the piston making sure the all surfaces are free from dirt and metal shavings.
2. Clean piston rod and remove any excessive corrosion inhibitor oil from the threaded area.
3. Inspect both piston and rod making sure both are clean and free from debris and metal shavings.

4.10.1 Piston and Rod Assembly


NOTE: Dirt in this area will cause excessive packing wear and cylinder bore abrasion damage.

1. Place the piston on its side and insert the piston rod in the piston. The piston rod should be inserted through the piston's smallest hole end.
2. Carefully insert the piston rod until it bottoms out.

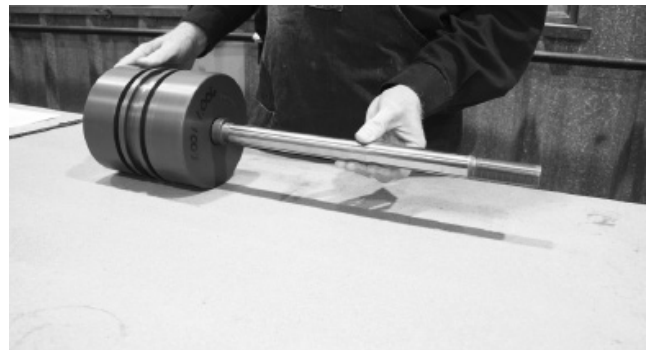

3. Thread the piston nut (VRC24919) on to the piston rod.

NOTE: DO NOT lubricate the piston nut-threads.

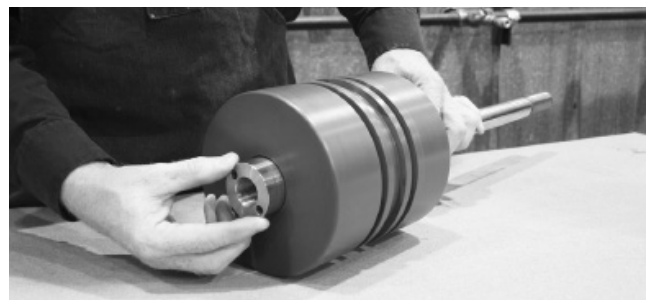

4. Using the piston nut adapter tool (VRC29490) tighten the piston nut by hand.



5. Insert the piston rod into the rod clamp (VRC29494) and place both into a vise and tighten firmly.



6. Using the piston nut adapter tool (VRC29490) and a 1" socket and torque wrench, torque the piston nut to 330 ft.-lbs.




7. Remove piston rod assembly from vise.

8. Remove piston rod clamp by tightening the setscrews to open the jaws of the clamp.

9. Install piston rings. Stand the piston and rod assembly on the end. Expand the ring with your fingers and slide the ring over the piston to the ring land. (Some pistons may have more rings.)



10. Next install the rider band by expanding the band with your fingers and sliding it over the piston inserting it in the rider groove.

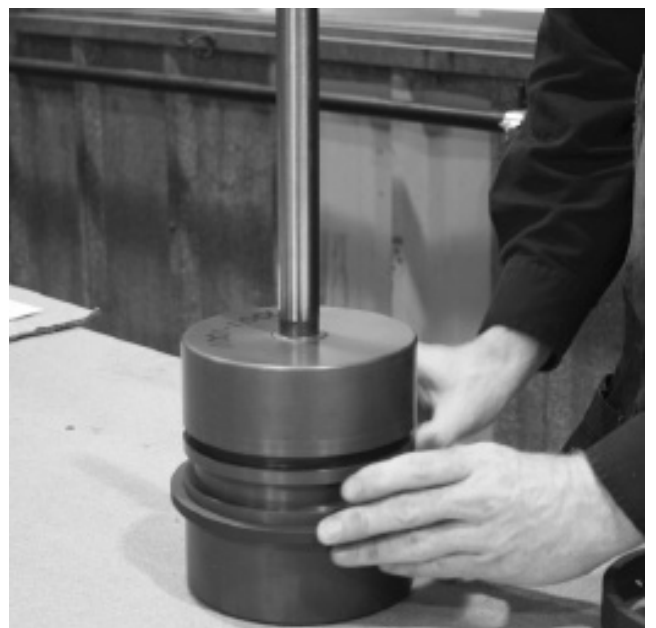

4.10.2 Piston and Piston Rod Installation

After the piston and piston rod assembly is complete and the cylinder has been mounted on the frame, you may install the piston rod assembly into the cylinder.

1. Apply lubricant to the piston, rings and piston rod assembly.
2. Apply lubricant in the cylinder bore.
3. Install the piston rod assembly with piston rings into the cylinder. The threaded crosshead end of the rod is 1/8" (3 mm) smaller than the inside diameter of the packing. It's preferred to use an entering sleeve. This piston rod entering sleeve tool (VRC29492) is available from Arrow.



4. Stagger the piston ring gaps and then compress the piston rings with your fingers as you slide the piston rod assembly into the cylinder. Be careful not to pinch your fingers.





5. While your fingers are compressing the piston rings, carefully insert the piston and piston rod assembly into the cylinder bore (the cylinder is normally mounted to the frame prior to this step).

6. Make sure the crosshead is all the way back of its travel.



7. Remove entering sleeve tool from rod.


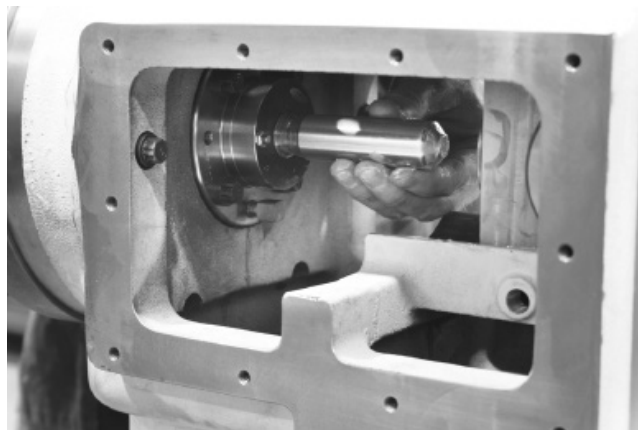


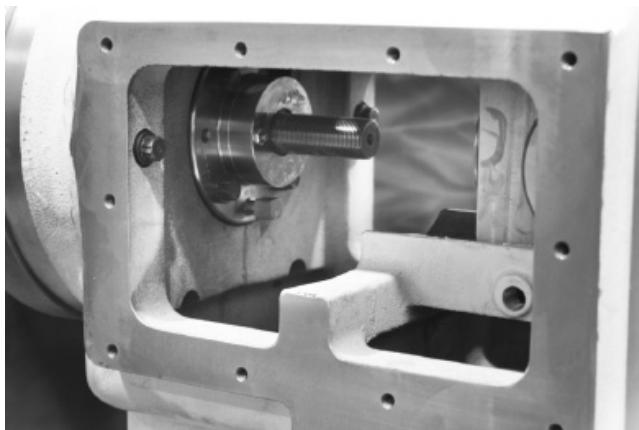

8. Install piston rod jam nut (VRC24909) or other extra heavy nuts as required for proper balancing on the piston rod. Make sure that the raised flat surface of the nut will be against the crosshead.

NOTE: Screw piston rod jam nut to end of thread.

9. Continue to insert piston and piston rod assembly until it begins to thread into crosshead.

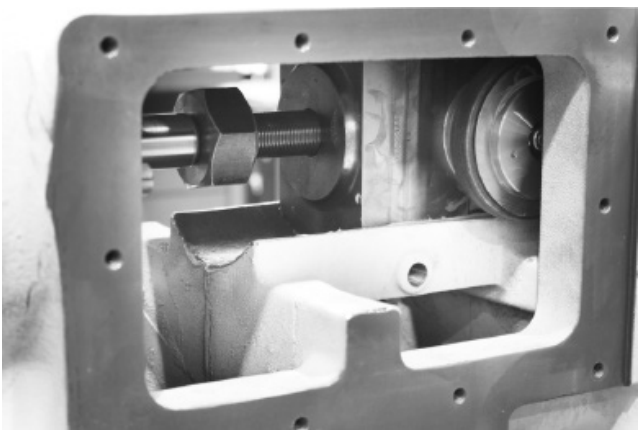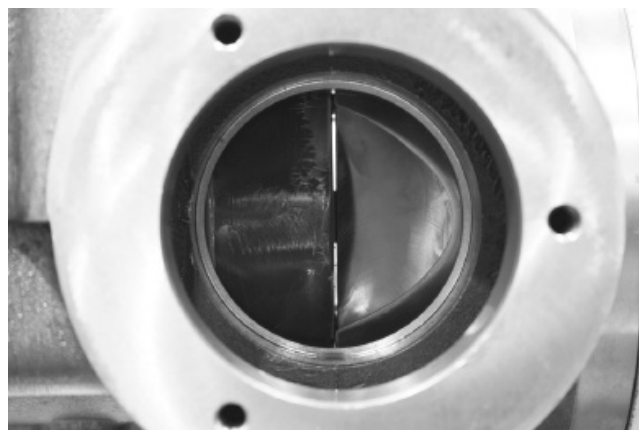


After assembly and installation of the outer head/variable volume clearance pocket (VVCP), refer to section 4.10.12, Setting Final Piston Clearance.

10. Using the piston nut adapter tool VRC29490 screw the piston and piston rod assembly into the crosshead while the crosshead is all the way to the back of its travel.

NOTE: Continue this process until the crank-end of the piston is approximately 0.050" from the crank-end head.

4.10.3 Variable Volume Clearance Pocket (VVCP)

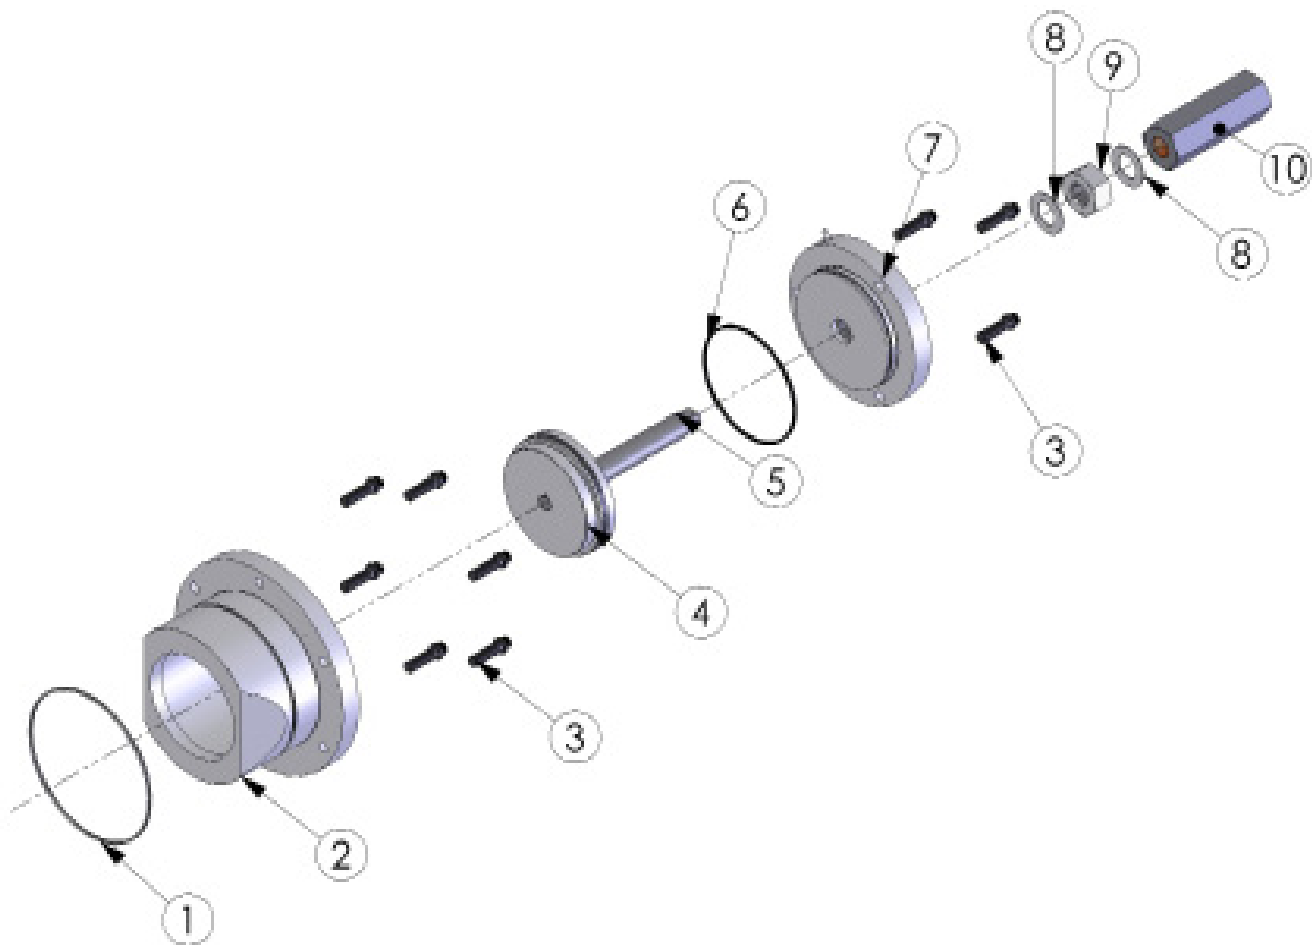

VARIABLE VOLUME CLEARANCE POCKET (VVCP)			
ITEM NO.	PART NO.*	DESCRIPTION	QTY.
1	VRC2XXXX*	O-RING, HEAD, CRANK, OUTER END CYLINDER BORE	1
2	VRC2XXXX*	POCKET, OUTER HEAD, X.X INCH VVCP	1
3	VRC2XXXX*	SCREW, VVCP POCKET AND COVER	9
4	VRC2XXXX*	PISTON, X.X - X.X INCH VVCP	1
5	VRC2XXXX*	STEM, VVCP ADJUSTING	1
6	VRC2XXXX*	O-RING, POCKET COVER, X.X - X.X INCH VVCP	1
7	VRC2XXXX*	COVER POCKET, X.X - X.X INCH VVCP	1
8	VRC2XXXX*	GASKET, VVCP ADJUSTING STEM COVER	2
9	VRC2XXXX*	NUT, JAM, VVCP ADJUSTING STEM	1
10	VRC2XXXX*	COVER, VVCP ADJUSTING STEM	1

* For specific size and part numbers, see Section 5.3, 3.5-inch Double-acting Cylinder and 40 Piston Parts.

4.10.4 VVCP Installation – Assembly of the Adjustment Stem to the Piston

NOTE: The complete assembly (VVCP adjustment stem) may be purchased from Arrow.

1. Insert VVCP adjusting stem (VRC27100) into the flat end of the piston so that the stepped end piece is opposite of the stem.



2. Using a 3/16" drill bit, drill a 3/16" hole halfway into the piston and halfway into the stem.
3. Insert spring pin (VRC27106) into the hole just drilled.



4. Insert the piston ring by sliding the ring over the piston into the ring groove.



5. Lubricate the O-ring and rolling into the ring groove in the VVCP pocket cover.



6. Screw the adjusting stem into the VVCP pocket cover in the end that has the O-ring groove.



7. Lubricate the piston, piston ring, and VVCP pocket.




8. Insert the piston carefully into the VVCP pocket making sure the piston ring and O-ring insert evenly into the VVCP pocket.



9. Insert three VVCP pocket cover screws (VRC25017) and torque to 82 ft.-lbs.



10. Run the adjusting stem all the way into the VVCP pocket until the piston seats at the bottom of the VVCP pocket (at base clearance).

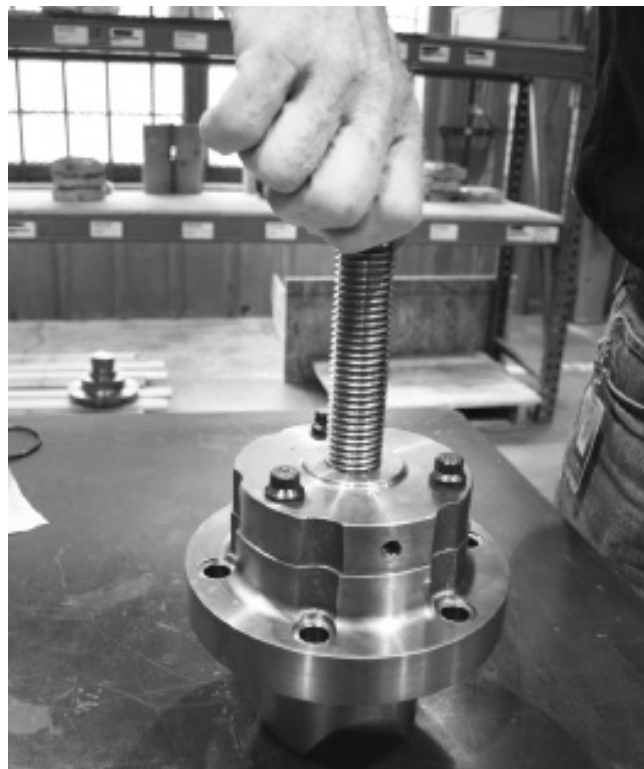


11. Insert the first of two VVCP adjusting stem cover gaskets (VRC27105).



13. Insert second VVCP adjusting stem cover gasket (VRC27105).



12. Insert VVCP adjusting stem jam nut (VRC27103).

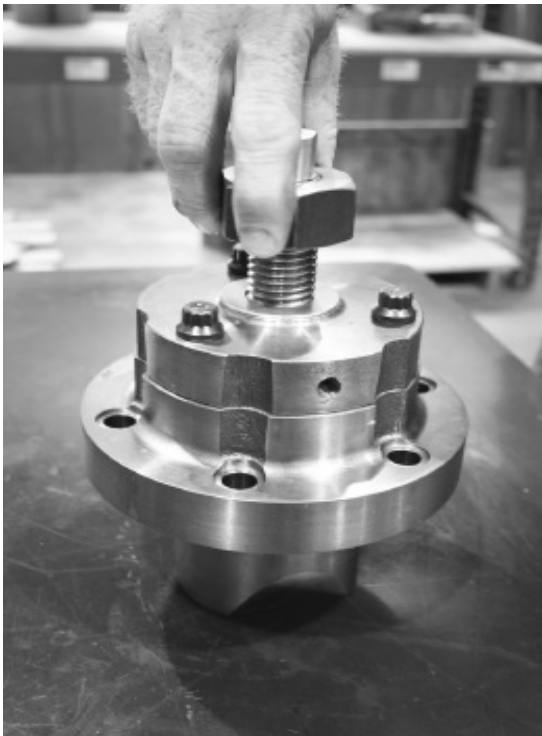

14. Install VVCP adjusting stem cover (VRC27101).



15. Lubricate the crank-end outer head O-ring (VRC27101).

16. Insert the O-ring in the O-ring groove in the head end of the VVCP pocket.



18. Using a grease gun, full the VVCP with grease via the grease zerk.




17. Insert VVCP grease zerk (VRC27109) into the hole located in the VVCP pocket cover.




4.10.5 Installing VVCP to the Cylinder

1. Apply grease to the cylinder head bore.

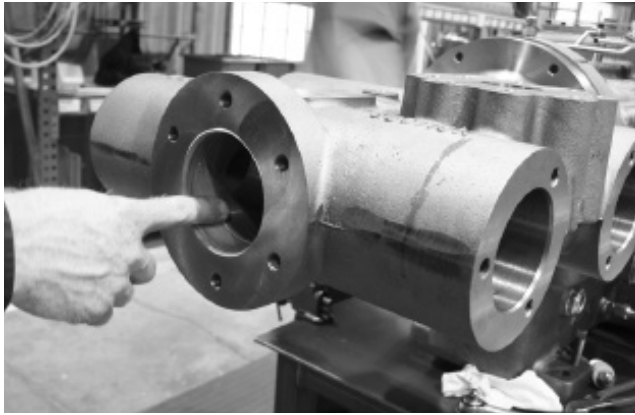

2. Insert VVCP into cylinder making sure the flats on the VVCP head align with valve ports.

NOTE: You may use a rubber hammer or mallet to help with inserting the head into the cylinder.

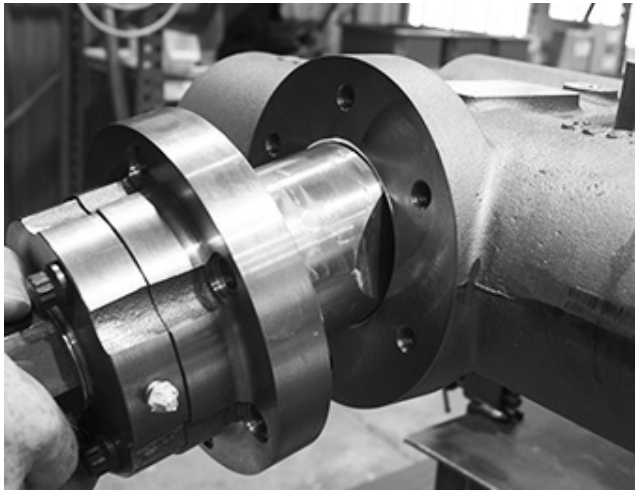


3. Push the VVCP into the cylinder.



4. Insert six VVCP pocket cover screws (VRC25017) into the holes in the VVCP and attach to the cylinder.



5. Torque screws to 82 ft.-lbs.

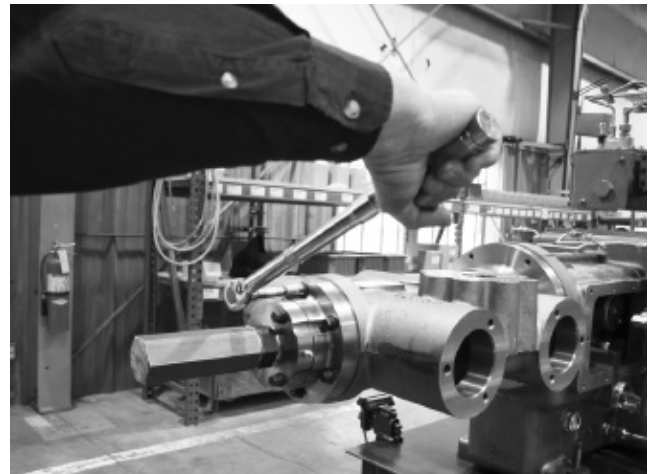

4.10.6 VVCP Removal

1. Remove variable volume clearance pocket from the cylinder by unscrewing the six variable volume clearance pocket (VVCP) cover screws.
2. Pull the VVCP from the cylinder after all the pocket cover screws are removed.

CAUTION: Make sure that the head is loose and the cylinder has been properly vented and all pressure and trapped gas is relieved.

4.10.7 VVCP Disassembly

1. Remove the O-ring in the O-ring groove from the head end of the VVCP pocket.
2. Remove the VVCP adjusting stem cover.
3. Remove the VVCP adjusting stem cover gasket.

NOTE: This would be the gasket that would be inserted SECOND during the VVCP assembly and installation process.

4. Remove VVCP adjusting stem jam nut.
5. Remove VVCP adjusting stem cover gasket. This would be the gasket that would be inserted FIRST during the VVCP assembly and installation process.
6. Unscrew the three VVCP pocket cover screws.
7. Remove the piston and cover from the VVCP pocket.
8. Unscrew the adjusting stem from the VVCP pocket cover.
9. Remove O-ring from the ring groove in the VVCP pocket cover.
10. Remove the piston ring that is seated in the ring groove on the piston.

4.10.8 VVCP Adjustments

CAUTION: VVCP clearance volume should be changed only with the compressor STOPPED!

VVCP clearance volume should be changed only with the compressor stopped. Refer to the performance run for the specific field operating conditions for the percentage of clearance required to set the VVCP. Consult the table below for VVCP clearance specifications.

Most Arrow variable volume clearance pockets have three inches of total travel on a stem that has seven threads per inch, therefore, it takes 21 turns to go from base clearance to 100% total added clearance available.

It is recommended that you start at base clearance (stem screwed all the way in) and count the number of turns out until desired clearance is achieved. Refer to the following table or the VRC-SIM compressor sizing program output for the required number of turns.

VVCP CLEARANCE			
CYLINDER SIZE (INCHES)	MAXIMUM ADDED CLEARANCE %	% CLEARANCE PER TURN	MAXIMUM NUMBER OF TURNS
3.5"	56.7%	2.7%	21
4.0"	42.0%	2.0%	21
4.5"	52.5%	2.5%	21
5.0"	42.0%	2.0%	21
5.5"	52.5%	2.5%	21
6.0"	44.1%	2.1%	21
6.5"	58.8%	2.8%	21
7.0"	52.5%	2.5%	21
7.5"	58.8%	2.8%	21
8.0"	52.5%	2.5%	21
9.5"	100.0%	3.6%	28
10.0"	96.0%	3.4%	28

The VVCP piston ring is not designed to be gas tight, but to allow a nearly balanced gas pressure for ease of VVCP adjustment with the cylinder pressurized. Gas pressure behind the VVCP piston normally vents when the cylinder is vented.

If gas is trapped behind the piston the VVCP can be adjusted when the cylinder is pressurized, but will be difficult to turn when the cylinder is vented.


4.10.9 Adjust VVCP Volume

CAUTION: Volume adjustments are NOT to be made while the compressor is running.

1. Remove the VVCP adjustment stem cover (VRC27101).
2. Loosen the stem jam nut (VRC27103) so that the stem (VRC27100) is free to turn.
3. Turn the stem with a wrench on the flats of the stem.
4. Refer to table above, VVCP Clearance, for the number of turns required to achieve the percentage clearance required for specific operating conditions.
5. After making the appropriate VVCP adjustment, tighten the jam nut and replace the adjusting stem cover.

4.10.10 Setting Initial Piston Clearance (Crank-end Head)

1. Using long feeler gauges, insert .050 feeler gauge between piston and crank-end head. Continue to screw the rod into the crosshead until .050 clearance is achieved. The crosshead must be all the way to the back of its travel at this time.

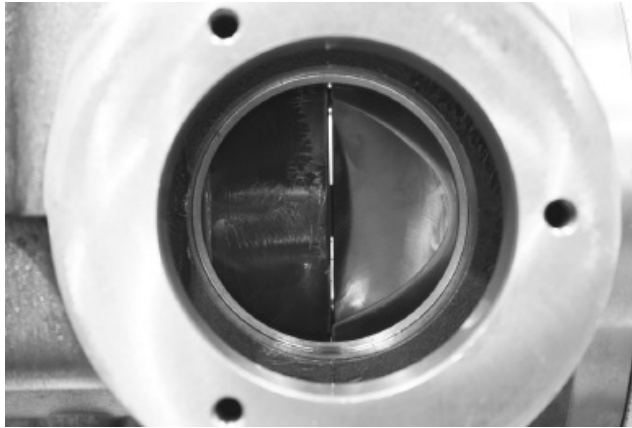

2. Tighten the piston rod jam nut using a 2" open-end wrench.

NOTE: Bring crosshead to the end of its travel allowing access with the wrench to tighten the piston rod jam nut.

NOTE: The objective is to achieve 70% of total clearance at the head-end and 30% of total clearance at the crank-end.

3. Turn crankshaft to make sure all installed parts are free and moving properly.

NOTE: Piston clearance should be checked again after installing outer-end head.

4. Replace the crosshead side covers and tighten all screws. Before installing side covers apply anti-seize lubricant to the gaskets. This will help when removing them later during maintenance.

4.10.11 Outer Head/VVCP Pocket Assembly to Cylinder

1. Clean and lubricate the outer head and O-ring.
2. Insert the outer head O-ring into the O-ring groove.



3. Carefully work the outer-end head into the cylinder paying special attention to make sure the flat surfaces face the valve ports in the cylinder.

NOTE: You may use a rubber hammer or mallet to help with inserting the head into the cylinder.

4. Insert the 12-point screws into the outer end head and torque to 82 ft.-lbs.

4.10.12 Setting Final Piston Clearance (Outer Head/VVCP Installed)

1. With the outer head/VVCP installed, rotate the crankshaft until the piston is at the end of its travel.
2. Insert feeler gauge through the valve port to determine what the clearance is between the piston and outer end head. Add this measurement to the clearance set at .050 on the crank-end this is the total clearance. Make sure that you have approximately 70% of the total clearance on the outer head end and approximately 30% of the total clearance on the crank end head.
3. After final adjustment is made tighten the piston rod jam nut as tight as possible, or to the specified torque of 255 ft.-lbs.
4. Replace the crosshead side covers and tighten all screws.

NOTE: Before installing side covers apply anti-seize lubricant to the gaskets. This will help when removing them later during maintenance.

5. Replace the valve seat gaskets, valve assemblies, the retainers and valve covers. Tighten all valve cover screws evenly to the proper torque value of 82 ft.-lbs.

4.10.13 Piston Rod Run-out


It is important to check piston run-out after installing a new unit, relocating a unit or when performing any maintenance that could affect piston run-out.

4.10.14 Horizontal Piston Rod Run-out Reading


1. Using a magnetic base with flexible arm dial indicator, position the magnetic base on the valve cover on the ACCESSORY SIDE of the frame and position the dial indicator so that the indicator is touching the side of the rod close to the packing case.



NOTE: An extra long extension on the dial indicator will make it easier to read the dial.

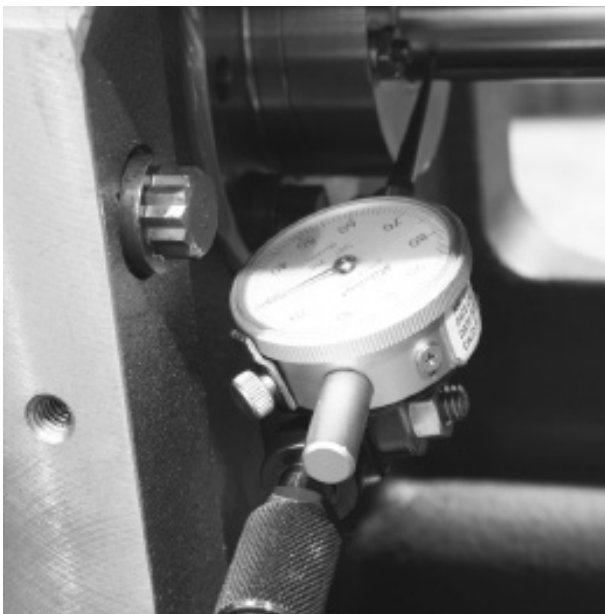


2. Once the dial indicator is in the proper position and is zeroed out, check to make sure the dial indicator is not touching anything that might give an incorrect reading.
3. Using the crankshaft adapter tool and a 1-1/16" wrench, turn the crankshaft one full turn (360°).

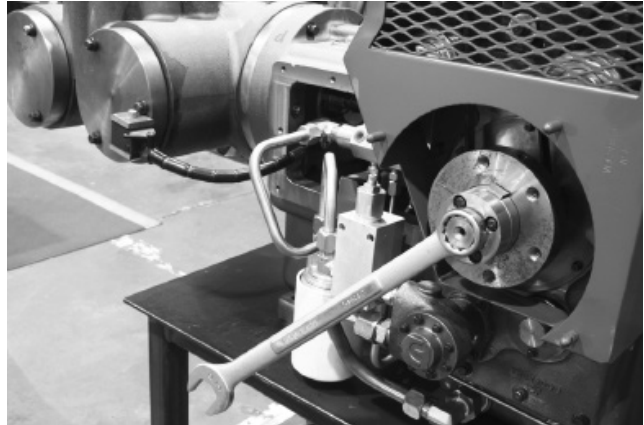

4. While the rod completes a full stroke, observe the dial indicator and record the highest reading. This reading is the maximum HORIZONTAL rod run-out reading (see Table, Maximum Acceptable Piston Rod Run-out Readings, at end of this section).

4.10.15 Vertical Piston Rod Run-out Reading

1. Position the magnetic base and attach it to the area where the side cover is placed on the DRIVE SIDE of the frame.

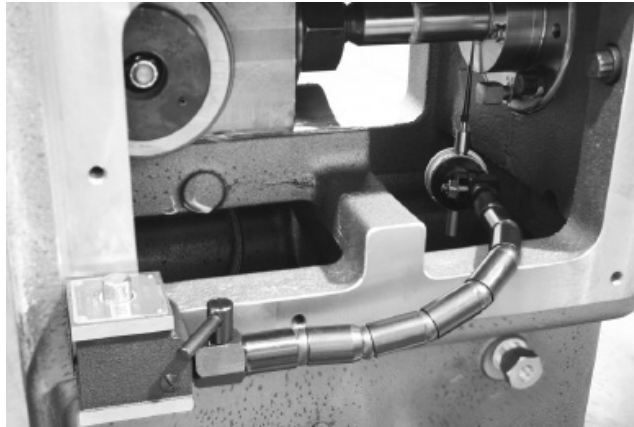

2. With the magnetic base attached, position the dial indicator on the bottom side of the rod and zero out the dial indicator.
3. From the accessory side of the frame and using the crankshaft adapter tool and 1-1/16 wrench, turn the crankshaft one full turn (360°).
4. While the rod completes a full stroke, observe the dial indicator and record the highest reading. This reading is the maximum VERTICAL rod run-out reading (see Table, Maximum Acceptable Piston Rod Run-out Readings, on following page).



MAXIMUM ACCEPTABLE PISTON ROD RUN-OUT READINGS		
DIRECTION	INCHES	(mm)
VERTICAL	0.002	(0.0508)
HORIZONTAL	0.001	(0.0254)

If the piston rod run-out readings are not within acceptable limits after maintenance or replacing worn or damaged parts and correcting any misalignment, the piston rod should be replaced.

4.10.16 Piston Rings

The VRS-4 Compressor cylinders use one-piece angle-cut carbon-filled PTFE (Teflon) piston rings.

4.10.17 Determining Ring Wear

Arrow recommends replacing rings when the end gap has increased three times the new dimension (see Table 3.9, Piston to Bore Clearance and Conventional Piston Ring End Gap for Double-acting and Steeple Cylinders).

To measure the end gap, with piston removed, insert the ring in the cylinder bore in the area of piston ring travel. Expand the ring so that it is snug against the inside of the cylinder bore and measure the ring gap.

NOTE: Excessive ring gap may be an indication of cylinder bore wear.

4.10.18 Piston Ring Removal

Take care when handling the piston rings. Despite the piston rings toughness, rings should still be considered fragile when removing them from the piston. Always handle them with clean tools and hands so as to protect the rings from dirt, nicks, marring and bending.

1. Pull the piston out of the cylinder until the first ring clears the cylinder.
2. Place fingers in the ring gap and gently pull gap apart just enough to expand the ring so that it clears the ring land. Carefully remove the rings from the piston.

Use these procedure to remove all remaining piston rings and rider band.

4.10.19 Rider Bands

The VRS-4 compressor cylinders use two one-piece straight-cut carbon-filled Teflon rider bands.

4.10.20 Determining Rider Band Wear

Because the rider band does not work as a seal ring, end gap is not a concern. The rider band projection beyond the outer diameter of the piston is important. Rider band projection can be checked by measuring the piston to cylinder bore clearance at the bottom of the bore. This is done without removing the piston from the cylinder.

Replace the rider band before it becomes worn. A worn rider band will allow the piston to touch the cylinder bore and cause damage to the piston and to the cylinder bore. For acceptable piston to bore clearance, see Table 3.9, Piston to Bore Clearance and Conventional Piston Ring End Gap for Double-acting and Steeple Cylinders.

4.10.21 Piston Ring(s) Installation

1. Place the rings over the grooves in the piston. Compress the one-piece carbon-filled Teflon rings by hand.
2. With the rings fully compressed in the grooves of the piston, insert the piston rod and piston into the cylinder.


NOTE: Ring gaps are to be staggered around the piston, rather than in line.

3. Continue by following the procedures found in section 4.11.3, Piston and Piston Rod Installation.

Rider Band Installation


The procedure for installing the rider ring is exactly like the procedure for installing the piston ring. The rider bands are used on all Arrow cylinders.

4.11 Pressure Packing, Piston Rod

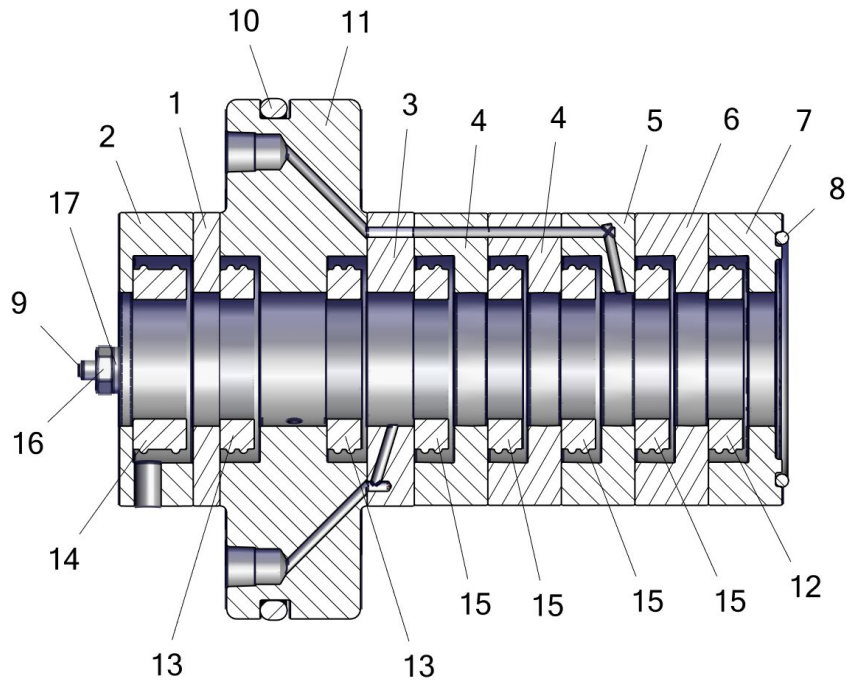

PACKING CASE			
ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	VRC23321	SPACER, PACKING CASE	1
2	VRC23351	CUP, PACKING, WIPER	1
3	VRC23311	SPACER, PRIMARY VENT	1
4	VRC23241	CUP, PACKING, CENTER	2
5	VRC23231	CUP, PACKING, LUBE	1
6	VRC23221	CUP, PACKING, PLAIN	1
7	VRC23211	CUP, PACKING, BOTTOM	1
8	VRC23106	GASKET, WIRE, PACKING CASE NOSE	1
9	VRC23118	STUD, PACKING CASE	3
10	VRC23104	O-RING, PACKING CASE MOUNTING FLANGE	1
11	VRC23201	FLANGE, PACKING CASE	1
12	VRC23411	RING, PACKING, PRESSURE BREAKER	1
13	VRC23431	RING, PACKING, DOUBLE-ACTING	2
14	VRC23441	RING, PACKING, WIPER	1
15	VRC23421	RING, PACKING, SINGLE-ACTING	4
16	VRC23109	NUT, LOCK, PACKING CASE STUD	3
17	VRC23001A	CASE, PACKING ASSEMBLY	1

4.11.1 Piston Rod Packing Ring Arrangement

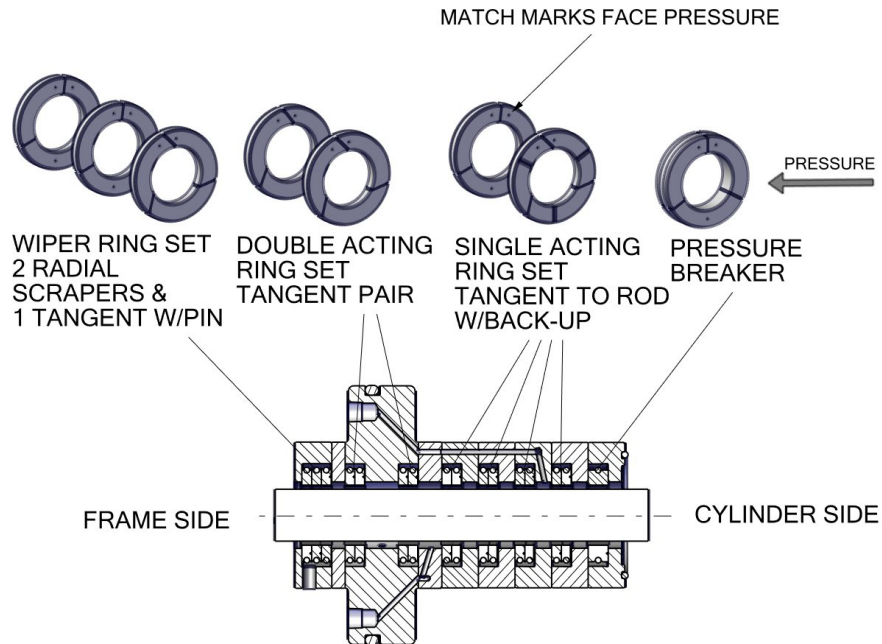

IMPORTANT: Packing rings are to be installed with the punch mark pointing toward the pressure side.

Frame Side	Wiper Ring (1) Set of (3) (VRC23441)	Double-acting Ring Set (2) (VRC23431)	Primary Vent	Single-acting Ring Sets (3) (VRC23421)	Oil Supply	Single-acting Ring Set (1) (VRC23421)	Pressure Breaker Ring (VRC23411)	Pressure Side
------------	---	--	--------------	---	------------	--	-------------------------------------	---------------

Arrow part numbers for ordering renewal ring kits are:

VRC23501 – Ring Kit, Packing Renewal with parts (include O-ring, nose gasket, nuts, and washers)

VRC23551 – Ring Kit, Packing Renewal (rings only).

4.11.2 Piston Rod Pressure Packing Removal

1. Remove the piston and piston rod.
2. Disconnect the lube oil line from the top of the packing case and primary vent line from the bottom of the packing case.
3. Remove the four screws that hold the pressure packing case to the cylinder.
4. Do not remove the small nuts from the studs. These studs hold the entire packing case together so it can be removed as an assembly.
5. Pull the entire pressure packing case out into the crosshead guide. It will come out through the side opening. The pressure packing case may now be taken to a clean place for disassembly.
6. Set the pressure packing on a clean surface. Three long tie studs hold the pressure packing case together. The stud holes are not equally spaced. This prevents the stack of parts from being aligned incorrectly. Remove the stud nuts and pressure packing; the pressure packing can be unstacked. It is recommended that you replace lock-washers, O-ring and nose gasket each time the pressure packing is serviced.
7. Parts kits are available from Arrow for this. Contact your Arrow sales representative for more information regarding the parts kits. See section 4.11.1, Piston Rod Packing Ring Arrangement, for part numbers.
8. Ring wear can be determined by placing the assembled rings on the piston rod. Check end gap clearance. If the ends knock against each other, or nearly hit, they should be replaced.
9. Any wire edges on the rings due to wear should be filed off allowing all matching edges to be square.
10. If necessary, replace aluminum gasket prior to reassembling. Be careful not to scratch the sides of the gasket groove when removing the old gasket.
11. It is important to be sure that all parts are cleaned thoroughly before reassembly.
12. Refer to the packing case drawing, section 4.11, for proper orientation of packing rings. Arrow Pressure Packing Replacement kits are available.

4.11.3 Piston Rod Pressure Packing Reassembly and Installation


1. Be sure to refer to the exploded view drawing of the pressure packing assembly (see section 5.16, Piston Rod Pressure Packing Kits). A pressure packing assembly drawing is also included in each pressure packing renewal kit.
2. When installing a new set of rod packing rings in an existing packing case, the case parts need to be inspected for wear. Cups should be smooth and flat on the back side where the rod packing rings must seal. If the grooves have worn or tapered, they should be re-ground or re-lapped. It is rarely necessary to alter the crosshead side of the cups, however, if this is found necessary, care must be taken so that the correct side clearance is not destroyed or compromised.

3. Before a packing case is installed, it should be disassembled and cleaned using an appropriate solvent.
4. Make sure that each rod packing ring and cup is properly positioned and the rings are coated with a clean lubricant before reassembly. Examining all the parts for nicks or burrs is important. Imperfections such as these can interfere with the free movement of the rod packing ring in the cup. Extreme care should be taken with rod packing rings made of soft material like Teflon. It is also important to carefully handle and install the wiper rings as to prevent damage to the scraping edges.
5. Parts should be laid out on a table so that they can be properly installed in the proper progression. Each in its correct position and their rod packing rings with their proper faces toward the pressure.
6. Regarding new installations, it is important to clean all dirt that may have accumulated in the lines and in the compressor. If you do not inspect and clean the lines, dirt and other foreign material will lodge in the packing and become destructive to the compressor.
7. Prior to installing the packing case into the cylinder, the end cup wire gasket (VRC23106) must be inspected for nicks or any other damage that could cause leaks in service. It is a good practice if you are in doubt, to replace the wire gasket with a new one.
8. Clean and inspect the gasket surface in the packing counter bore on the crank end of the cylinder for scratches before you install the packing case into the cylinder.
9. Reinstall the complete packing case assembly making sure the oil supply point is on top. Pull the packing into place by using the packing case screws (VRC23107).
10. Reinstall the piston and piston rod.
11. After the crosshead jam nut has been tightened, tighten the rod packing screws evenly to the recommended torque of 45 ft.-lbs. This procedure will ensure that the pressure packing comes up square on its nose gasket.
12. Retighten the small packing case stud nuts. Reinstall the tubing connections for the oil supply and primary vent. Be careful not to cross-thread the fittings.


NOTE: After installing the new pressure packing rings, refer to section 9.6, Filling and Operating The Lubrication System, for instructions for priming the cylinder lube system.

For normal lubrication rates recommended for a normal running compressor, see Table 9.7.2, Divider Block Technical Data and Cycle Time. Break-in lube rates are twice the normal rates or one-half the normal indicator pin cycle time. For fitting and tubing connections, refer to section 9.5, Tubing and Distance Piece Venting.

4.12 Valves

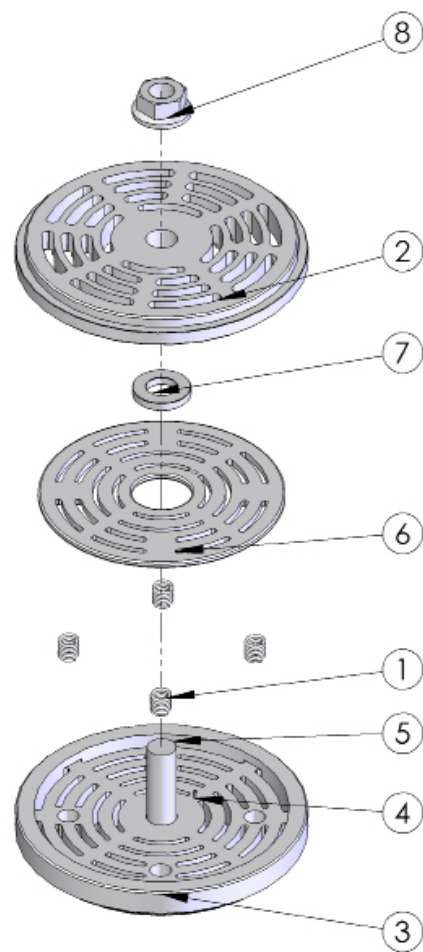

SUCTION VALVE			
ITEM NO.	PART NO.*	DESCRIPTION	QTY.
1	VRC2XXXX*	SPRING, CLOSING, VALVE	3-6
2	VRC2XXXX*	SEAT, VALVE, SUCTION	1
3	VRC2XXXX*	GUARD, VALVE, SUCTION	1
4	VRC2XXXX*	PIN, LOCATING, VALVE	1
5	VRC2XXXX*	BOLT, CENTER, VALVE	1
6	VRC2XXXX*	PLATE, VALVE, SUCTION	1
7	VRC2XXXX*	RING, GUIDE, VALVE	1
8	VRC2XXXX*	NUT, LOCK, VALVE	1
* Part numbers are specific to each model valve depending on what size cylinder they are for. The springs can be light, medium or heavy depending on the operating conditions. Contact Arrow Engine Company if you need replacement parts.			

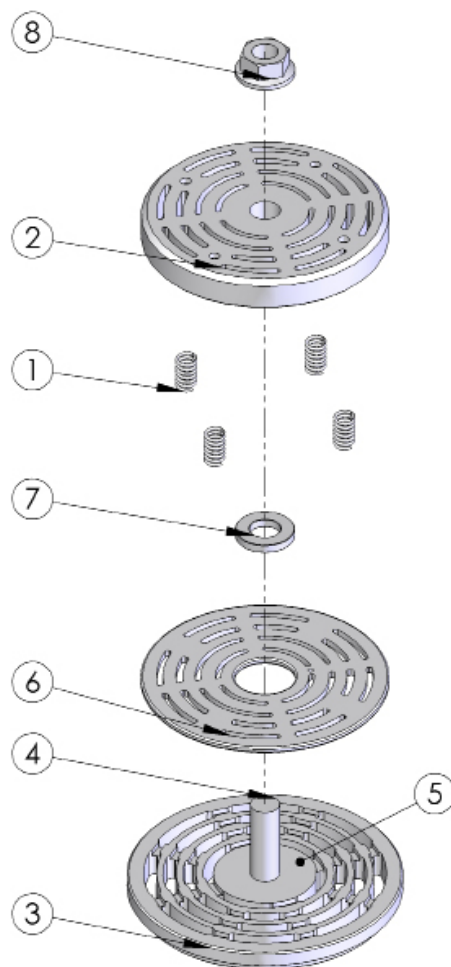

DISCHARGE VALVE

ITEM NO.	PART NO.*	DESCRIPTION	QTY.
1	VRC2XXXX*	SPRING, CLOSING, VALVE	3-6
2	VRC2XXXX*	GUARD, VALVE, DISCHARGE	1
3	VRC2XXXX*	SEAT, VALVE, DISCHARGE	1
4	VRC2XXXX*	BOLT, CENTER, VALVE	1
5	VRC2XXXX*	PIN, LOCATING, VALVE (NOT SHOWN)	1
6	VRC2XXXX*	PLATE, VALVE, DISCHARGE	1
7	VRC2XXXX*	RING, GUIDE, VALVE	1
8	VRC2XXXX*	NUT, LOCK, VALVE	1

* Part numbers are specific to each model valve depending on what size cylinder they are for. The springs can be light, medium or heavy depending on the operating conditions. Contact Arrow Engine Company if you need replacement parts.

4.12.1 Removing Valves

CAUTION: Before removing any valve cover, be sure that ALL pressure from the compressor cylinder has been vented.

The pressure must be completely vented from both the suction and discharge passages of the cylinder.

1. Slightly loosen all the screws on each valve cover. With all the screws loosened, the cover should stay in its original position. If there are signs of the cover pushing out on its own STOP IMMEDIATELY! You must take steps to completely vent the cylinder before proceeding. (See CAUTION above.)
2. After the pressure from the cylinder has been discharged, remove the valve cover screws.
3. Remove the valve. Remove the valve by hand or use a valve tool that threads on to the valve center screw.

NOTE: The size of the valve tool will depend on the size of the cylinder. See table below for the different sized valve installation tools and part numbers.

VALVE INSTALLATION TOOL SIZE	
PART NO.	TOOL, VALVE INSTALLATION
VRC29463	2.25" - 4.0" CYLINDERS 1/4" AND 5/16" THREADS
VRC29464	4.5" - 10.0" CYLINDERS 3/8" AND 1/2" THREADS

4. The valve seat gasket will remain in the pocket. The gasket may fall into the gas passage. The gasket should be replaced after several uses or each time the valves are replaced.

Valve Maintenance

Arrow Engine Company does not have a compressor valve repair facility. Arrow does stock and sell new Hoerbiger replacement valves and valve repair kits. Valve repair kits can be ordered by finding the appropriate valve part number in the VRS-4 Replacement Parts manual and then substituting the "A" suffix (used to designate a complete valve assembly) with a "K" suffix (used to designate a valve repair kit).

For valve repair, contact your local authorized Hoerbiger valve repair facility. For assistance locating an authorized Hoerbiger valve repair facility in your area please contact customer service at Hoerbiger Corporation of America Inc. at 1-800-327-8961 or contact Arrow Engine Company for a referral.

4.12.2 Valve Reassembly in Cylinder

1. The 1/32" (0.8 mm) thick soft metallic flat gasket should be coated with an anti-seize lubricant. It then can be inserted into the valve pocket. Be careful not to let the gasket fall into the gas passage.
2. Using the valve tool insert the valve and the retainer into the pocket together.

3. Inspect the valve cover O-ring for any cuts, gashes or splits and replace it if necessary. Lubricate the O-ring and the nose of the valve cover.
4. Insert the cover and tighten the screws evenly to the recommended torque of 82 ft.-lbs. If the assembly is correct, the distance from the underside of the cover to the valve boss surface on the cylinder will be approximately 1/8" (3 mm).

NOTE: Be certain all parts, gasket faces, and mating surfaces are absolutely clean and always use clean oil on all the threads before reinstalling screws.


4.12.3 Screw Tightening for Valve Covers

Proper tightening technique is essential for sealing of the valve covers. It is important to draw screws upward to full torque in even and gradual steps.

1. Install the valve assembly with the flat gasket and valve retainer, in the valve pocket.
2. Lubricate threads and screws with petroleum-type lubricant and install screws. Do not use anti-seize compounds on the valve cover screws. Tighten each screw until snug using a crisscross pattern.
3. Next tighten each screw to full torque, moving across from screw to screw, in a crisscross pattern.

CAUTION: *Severe personal injury and property damage can result if valve cover screws are not installed to the proper torque of 82 ft.-lbs.*

4.13 Lubrication System Installation Chain Drive

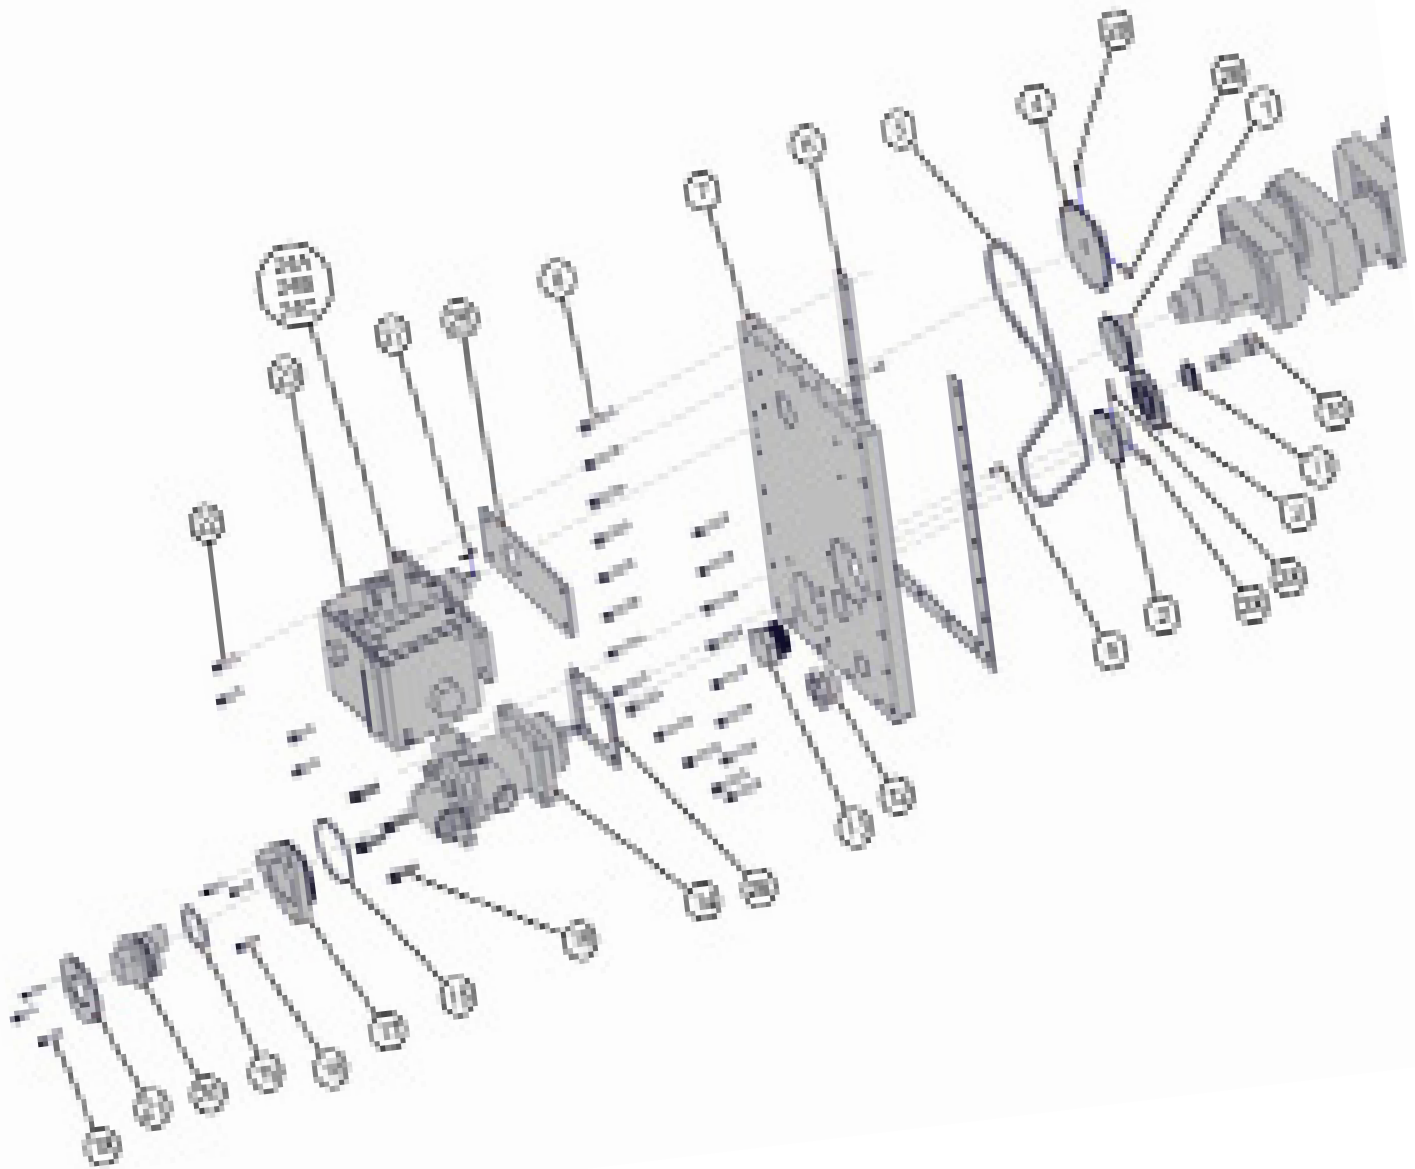

LUBRICATION SYSTEM – CHAIN DRIVE						
NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
1	VRS-48248	SPROCKET, CRANKSHAFT DRIVE	1			1
2	VRS-48232	SPROCKET, DRIVE, FRAME OIL PUMP	1		1	1
3	VRS28220	SPROCKET, IDLER, CHAIN	1	1	1	1
4	VRS-48258	SPROCKET, DRIVE, LUBE PUMP	1		1	1
5	VRS-48200	CHAIN DRIVE	1	1	1	1
6	VRS-41115	GASKET, END PLATE	1			
7	VRS-41120	END PLATE, FRAME ACCESSORY END	1	1		2
8	VRS-41327	SCREW, 12-POINT, 5/16-18 X 1-1/2	20			
9	VRS-41106	PIN, DOWEL 1/4 X 3/4	2			
10	VRC21117	SCREW, IDLER SPROCKET W/SHOULDER	1			
11	VRS28255	RETAINER, BEARING	1			
12	VRC21400	SIGHTGLASS	1			2
13	VRS-41519	PLUG, SOCKET HEX 1-1/4" NPT, CS	1			
14	VRS-48300	PUMP, FRAME OIL	1	1	1	2
15	VRC28467	SCREW, 12-POINT, 3/8-16 X 1-1/4	4			1
16	VRC25504	O-RING, PUMP ADAPTER	1			2
17	VRS28252	BUSHING, ADAPTER IDLER	1			1
18	VRC28557	SCREW, 12-POINT, 1/4-20 X 1	6		1	1
19	VRS28254	O-RING, IDLER CHAIN	1			3
20	VRS28250	IDLER CHAIN FRAME OIL PUMP	1			3
21	VRS28253	CLAMP, IDLER CHAIN	1			
22	VRCC4127	SCREW, 12-POINT, 5/16-18 X 1-1/4	4	1	1	1
23	VRS-48530	LUBRICATOR RESERVOIR	1			
24A	VRC28510B	PUMP, OIL CYLINDER LUBE, 3/16"	1		1	1
24B	VRC28512B	PUMP, OIL CYLINDER LUBE, 1/4"	1			
24C	VRC28514B	PUMP, OIL CYLINDER LUBE, 3/8"	1			
25	VRS-48310	SPACER, LUBE PUMP	1			
26	VRS-48305	GASKET, OIL PUMP	1			
27	209277	KEY, SQUARE 1/8 X 1	1			
28	19A-1/420X3/4	SCREW, SOCKET SET 1/4-20 X .75	4			

4.13.1 Lubrication System Drive Gear Installation

The lubrication system drive gear (VRS-48248) is heated prior to installation on the crankshaft. Arrow recommends purchasing a new crankshaft assembly with drive gear installed.

IMPORTANT: This is a difficult procedure and may result in damage to the crankshaft. Arrow recommends using a professional repair facility to perform this procedure.



Arrow offers crankshaft assemblies with drive gear installed and recommends the purchase of the crankshaft assemblies rather than trying to repair or replace the drive gear yourself.

NOTE: When installing the drive gear, orient so that the shoulder is facing the crankshaft.



4.13.2 Install Frame Oil Pump

1. Install frame oil pump (VRS48300) and gasket (VRS48305) to end plate (VRS41120) using fasteners (VRC28467) as shown here.

NOTE: Orientation of frame oil pump and pressure relief valves is critical for proper flow direction and pressure. A new pump may require rotating the relief valve 180° prior to


installation. Refer to image here for proper orientation.

2. Loosely install oil pump drive sprocket (VRS48259).
3. Position sprocket so that the outer face of the sprocket is .86-inch from the surface of the end plate and tighten setscrews.
4. Apply medium-strength removable threadlocker (Loctite Blue 242) on 1/4-20 UNC setscrews. Apply 75 in.-lbs. (6 ft.-lbs.) torque to setscrews to fasten drive sprocket to pump shaft.

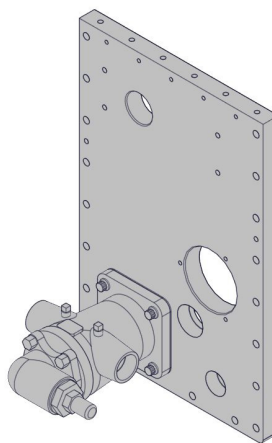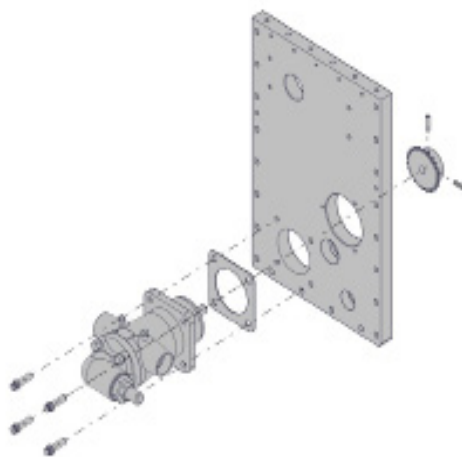

4.14 Chain Idler Assembly

1. Apply lubricant to the O-ring groove of the chain idler (VRS28250) and slip on the idler O-ring (VRS28254).

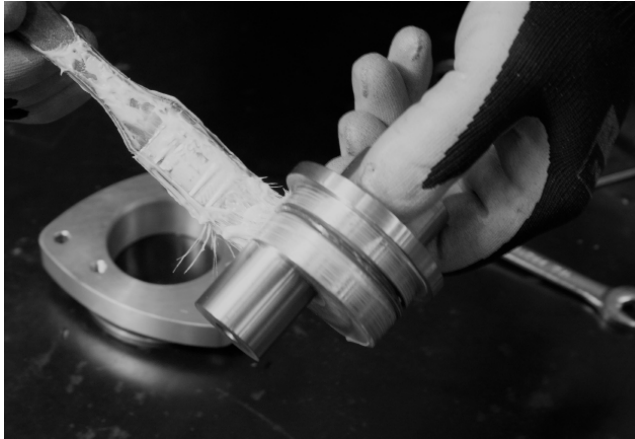

2. Insert the idler into the second adaptor bushing (VRS28252).



3. Install the idler clamp (VRS28253) and three idler clamp screws (VRS28257) and tighten them finger-tight.




4. On the end of the idler shaft install the idler sprocket (VRS28220) using the idler sprocket retainer (VRS28255) and the idler sprocket screw (VRC21117) and tighten.



4.15 Chain Idler Assembly Installation


Apply lubricant to O-ring and install chain idler assembly as shown below. Insert mounting screws (VRC28557) and tighten.

NOTE: Orient so that the indicator dot is at the 11 o'clock position.

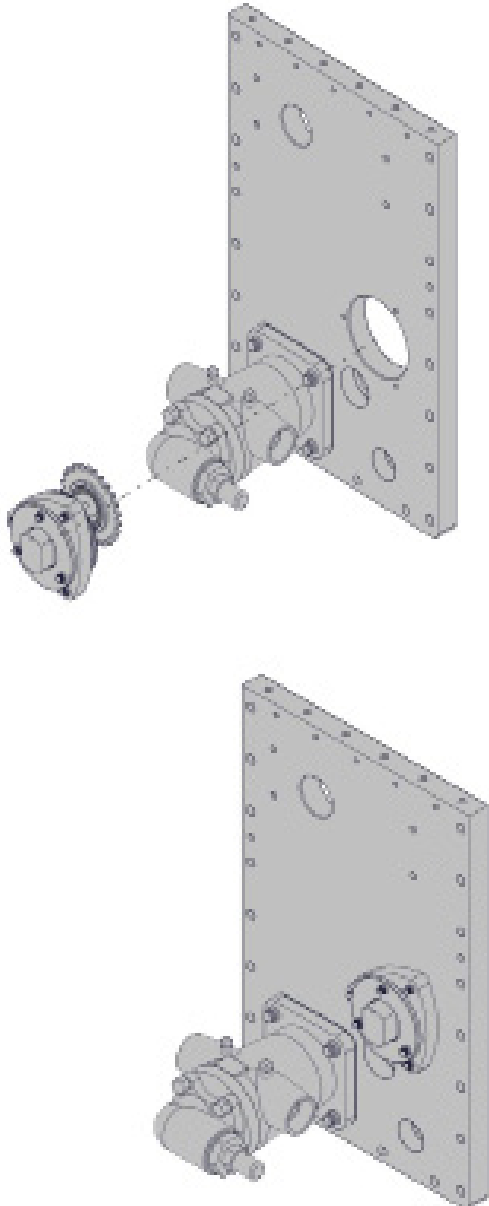

4.16 Cylinder Lubricator Installation

1. Install cylinder lubricator (VRS-48530) and spacer (VRS-48310) to end plate (VRS-41120) using fasteners (VRCC4127) as shown below. **NOTE:** Apply lubricant to O-ring of lubricator before installation.
2. Loosely install lubricator pump drive sprocket (VRS-48258), square key (209277) and setscrews (19A-1/420X3/4) onto pump shaft as shown below. **NOTE:** Do not tighten setscrews at this point. Sprocket position will be set and setscrews tightened after chain installation.

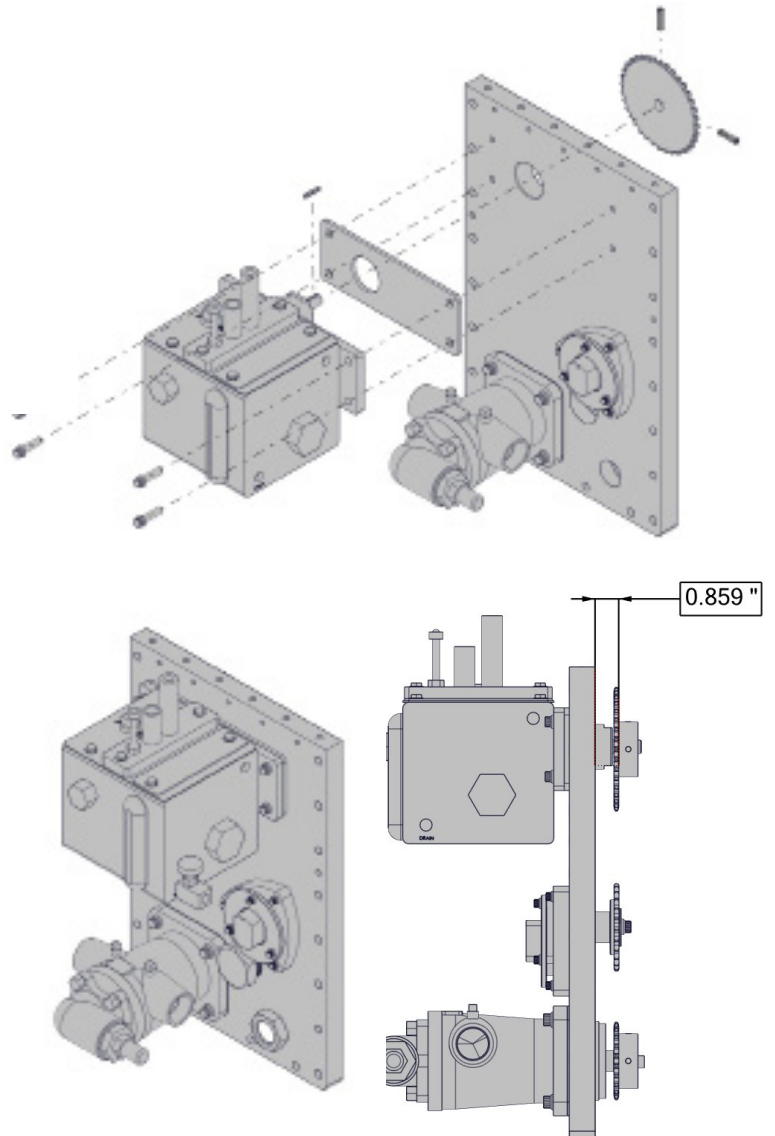

4.17 Accessory End Plate Subassembly and Drive Chain Installation

It is recommended to use a lifting device and have a second person available when installing the accessory end plate subassembly and drive chain. There are two possible methods to install the drive chain.

Method 1: Install chain AFTER accessory end plate subassembly

1. Install accessory end plate dowel pins (VRS-41106) and gasket (VRS-41115) onto frame.

2. Install accessory end plate subassembly by first aligning dowel pins with mating holes and then tighten fasteners (VRS-41317).

IMPORTANT: Position the reference dot of the chain tensioner to 11 o'clock.

3. Install drive chain (VRS-48200) routed as shown. The lubricator pump drive sprocket will need to be loosened to install the chain.

4. Reset lubricator pump drive sprocket position and tighten setscrews.

Method 2: Install chain WITH accessory end plate subassembly.

1. Install accessory end plate dowel pins (VRS-41106) and gasket (VRS-41115) onto frame.

2. Loosely install drive chain (VRS-48200) onto sprockets of the end plate subassembly.

IMPORTANT: Position the reference dot of the chain tensioner to 11 o'clock.



3. Facing the accessory end of the frame, move end plate sub assembly into position while securing the slack portion of the chain similar to its final routing.

4. Before installing end plate onto dowel pins, shift the subassembly to the right approximately .5 inches. In this position it is

possible to install the slack portion of the chain onto the crank sprocket.

5. After installing chain onto crank sprocket, align the end plate sub assembly with the dowel pins and install on the frame

6. Tighten end plate fasteners (VRS-41317).

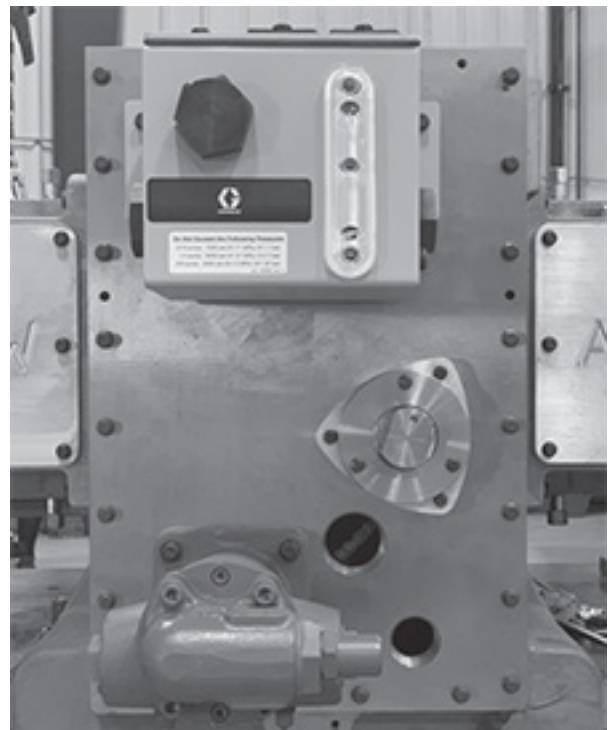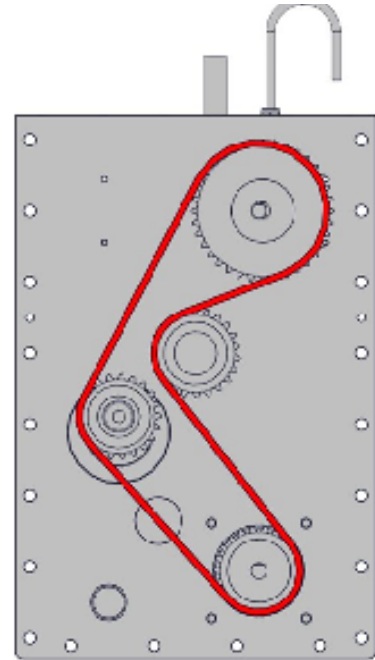

4.18 Setting Chain Tension



1. With the screws on the idler clamp loosened, adjust tensioner clockwise until 1/2" total slack is observed.

2. Chain tension is checked through the inspection window just below the chain idler assembly.

IMPORTANT: It is better to have a little extra slack in the chain than to have too little slack. Running the chain too tight can cause premature wear and failure of the chain idler bearing.

3. Rotate the crankshaft several revolutions while feeling the chain tension and making sure there are no tight spots throughout a complete revolution.

4. Once complete, install the chain inspection plug (VRS-41519). Coat threads with a Teflon sealant prior to installation.

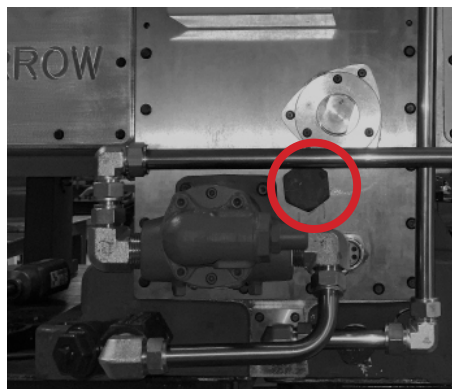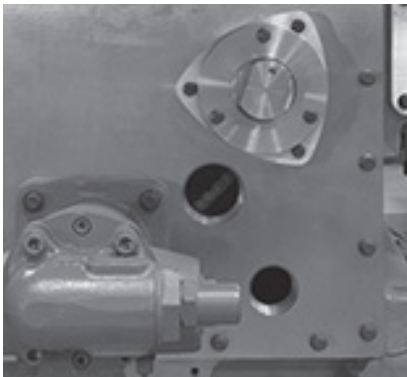


4.19 Y-type Oil Strainer Installation

The Y-type oil strainer (VRS-48340) is located on the accessory side of the frame as shown below.

Instructions

1. Coat the threads of the oil strainer with a Teflon sealant.
2. Install the Y-type oil strainer in the location and orientation shown below.
3. Tighten with wrench.

NOTE: The oil strainer should be removed and cleaned using the proper solvents whenever oil is changed.

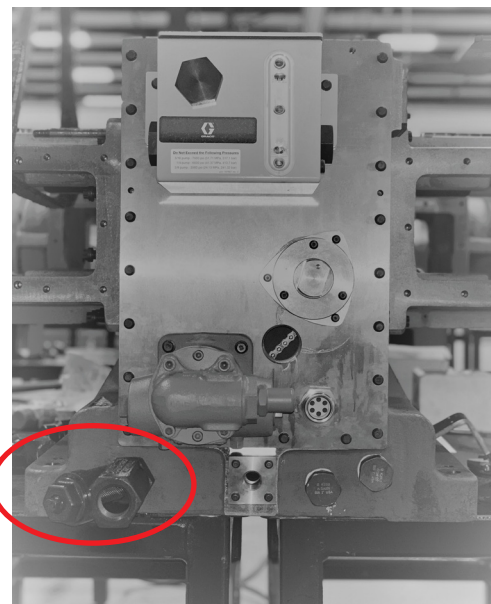


4.20 Sight Glass Installation

The sight glass (VRC21400) is located on the accessory end of the frame. The sight glass allows the operator to see the oil level within the compressor. Oil level should be in the center of the sight glass.

Instructions

1. Coat the threads of the sight glass with a Teflon sealant.
2. Insert the sight glass and tighten.

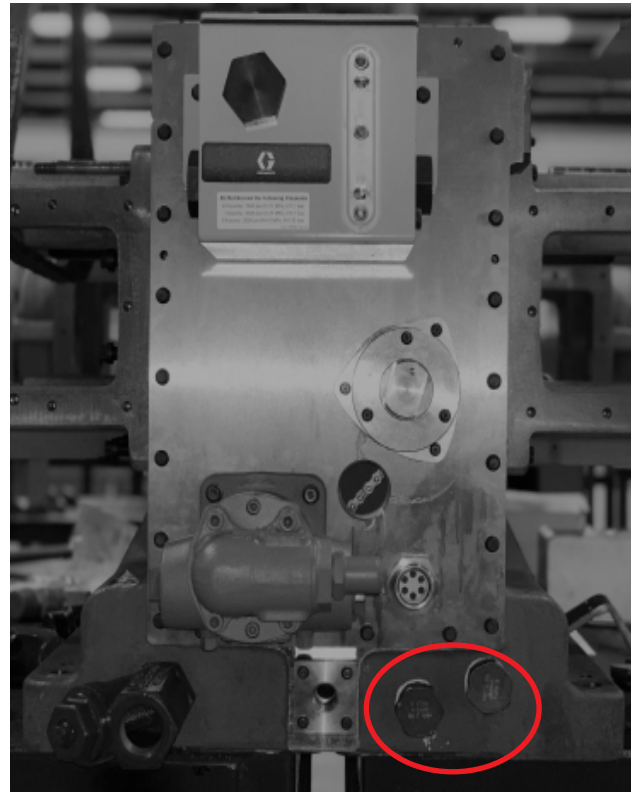


4.21 Plug Installation

There are four 1" NPT plugs (HP-3000-1) to be mounted on the frame. Two plugs on the drive-end of the frame and two on the accessory-end.


Instructions

1. Coat the threads of the plugs with Teflon sealant.
2. Insert the plugs in the frame and tighten.

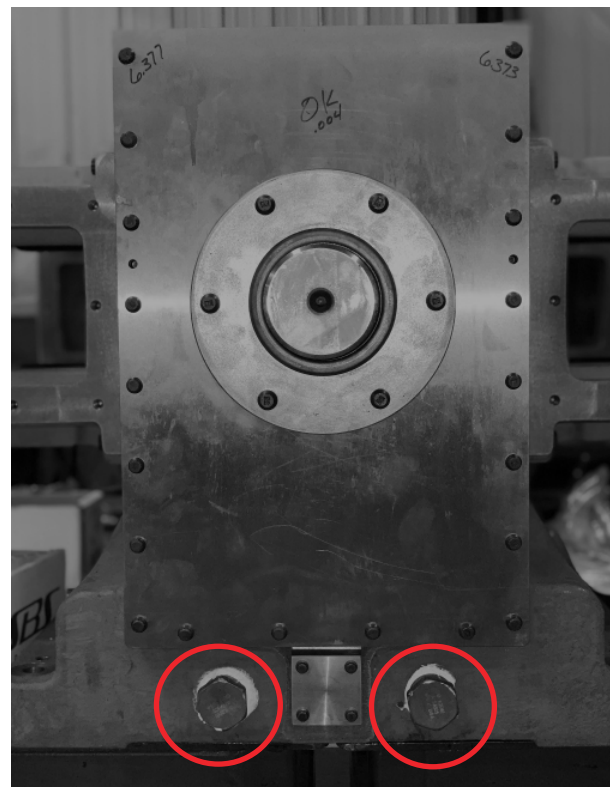

5 DOUBLE-ACTING CYLINDER AND PISTON

5.1 2.5-inch Double-acting Cylinder and Piston Parts

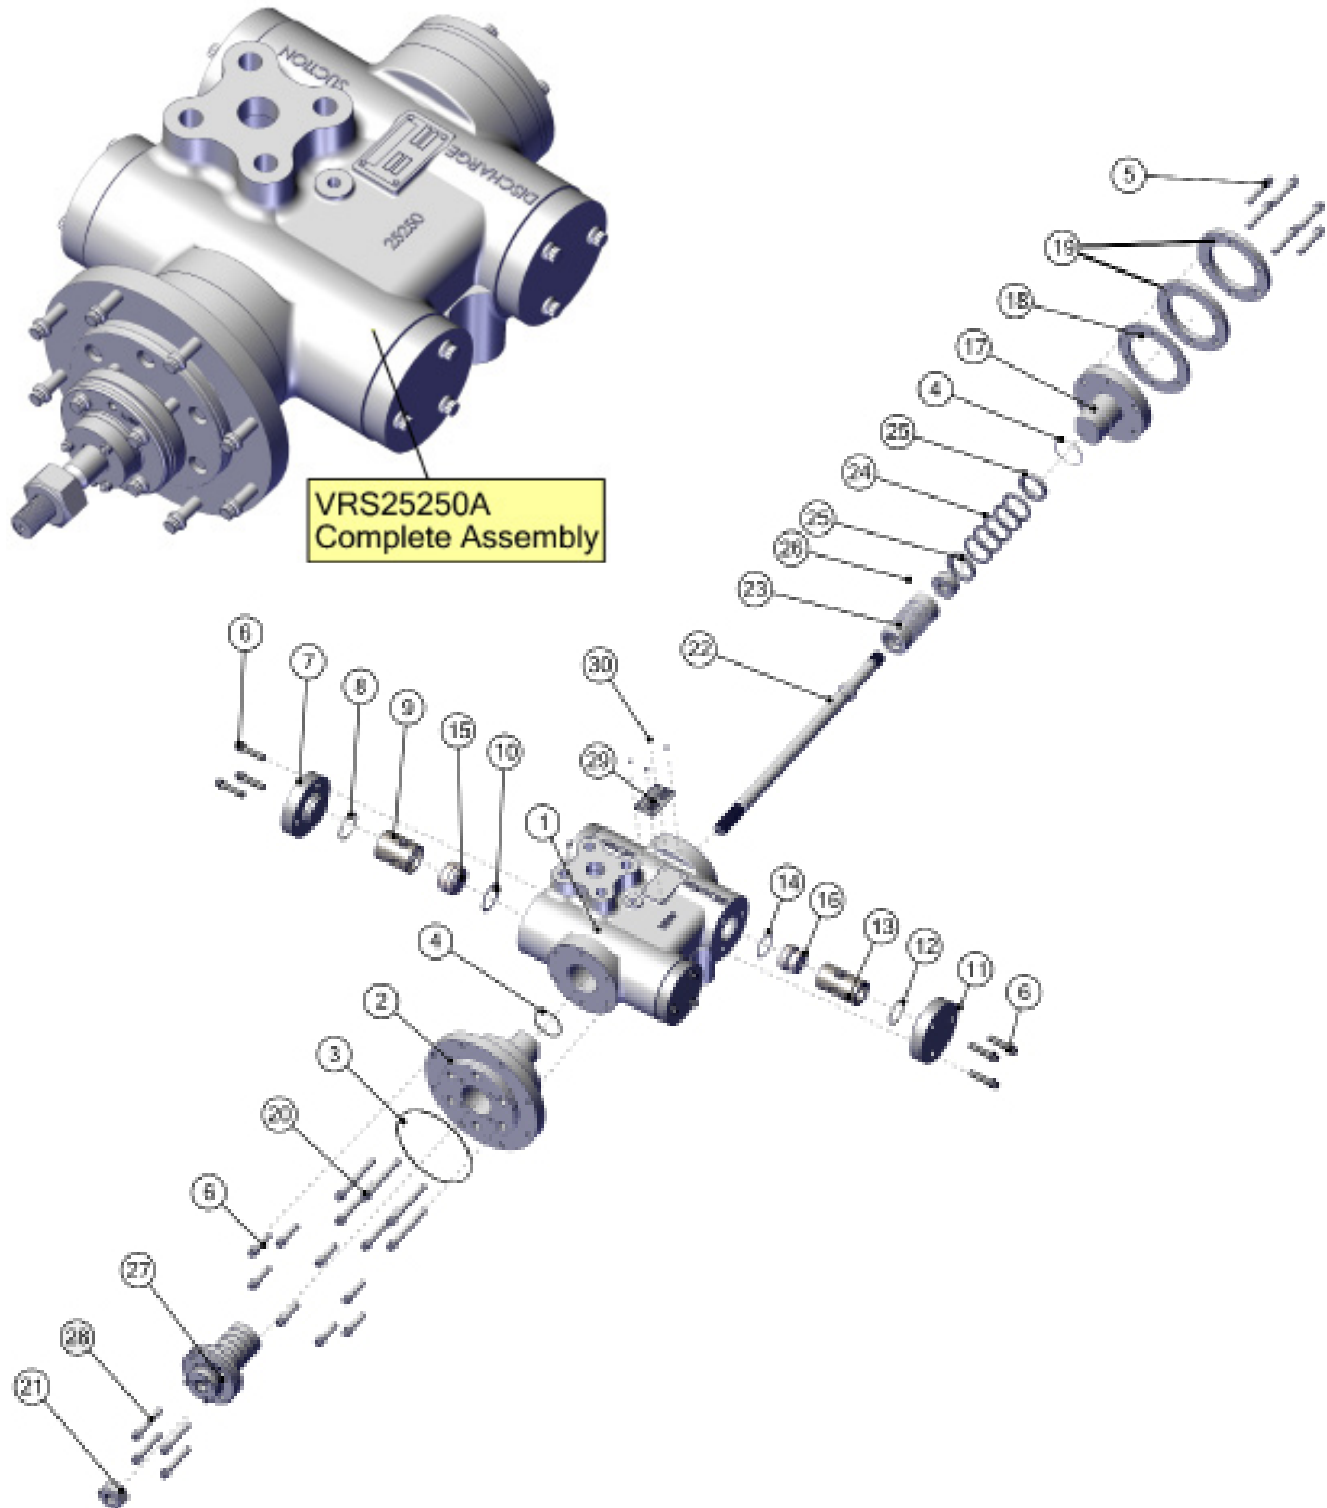

2.5-INCH DOUBLE-ACTING CYLINDER AND PISTON

NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25250A	CYLINDER, 2.5" DA, ASSEMBLY				
1	VRS25250	CYLINDER, 2.5" DA	1			
2	VRS25251	HEAD, CRANK END, 2.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25252	O-RING, HEAD, CRANK AND OUTER END, 2.5" CYLINDER	2	1	1	2
5	VRC25027	SCREW, CYLINDER TO FRAME, SHORT	6			
6	VRC25077	SCREW, VALVE COVER	20			
7	VRC25253	COVER, VALVE, SUCTION, 2.5"-3.0" CYLINDER	2			
8	VRC25254	O-RING, COVER, SUCTION VALVE, 2.25"-3.0" CYLINDER	2	2	2	2
9	VRS25256	RETAINER, VALVE, SUCTION, 2.5" DA CYLINDER	2			
10	VRC25255	GASKET, SUCTION VALVE SEAT, 2.25"-3.0" CYLINDER	2	2	2	2
11	VRC25303	COVER, VALVE, DISCHARGE, 2.25"-3.0" CYLINDER	2			
12	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.25"-3.0" CYLINDER	2	2	2	2
13	VRS25258	RETAINER, VALVE, DISCHARGE, 2.5" DA CYLINDER	2			
14	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.25-3.0" CYLINDER	2	2	2	2
15	VRS26315A	VALVE, SUCTION, 2.5"-3.0" CYLINDER, MEDIUM *	2	2		2
16	VRS26325A	VALVE, DISCHARGE, 2.5"-3.0" CYLINDER, MEDIUM *	2	2		2
17	VRC27256	HEAD, OUTER-END, 2.5" CYLINDER	1			
18	VRC27253	SPACER, HEAD, OUTER-END 1/4" **	1			
19	VRC27254	SPACER, HEAD, OUTER-END 1/2" **	2			
20	VRC25087	SCREW, HEAD, CRANK-END, LONG	6			
21	VRC24909	NUT, JAM, PISTON ROD ***	1			1
22	VRC24130	ROD, PISTON, 2.5"-3.0" PISTONS	1			1
23	VRS24250	PISTON, 2.5" DA CYLINDER, CI	1			1
24	VRS24251	RING, 2.5" PISTON	5		5	5
25	VRS24252	BAND, RIDER, 2.5" PISTON	2		2	2
26	VRC24919	NUT, PISTON	1			1
27	VRC23001A	CASE, PACKING, ASSEMBLY ****	1			1
28	VRC23107	SCREW, PACKING CASE	4			
29	VRS25110	NAMEPLATE, VRS CYLINDER	1			
30	VRC21606	PIN, NAMEPLATE	4			


* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** Spacer location inside or outside of head will be determined by site conditions.

*** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

**** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.2 3.0-inch Double-acting Cylinder and Piston Parts

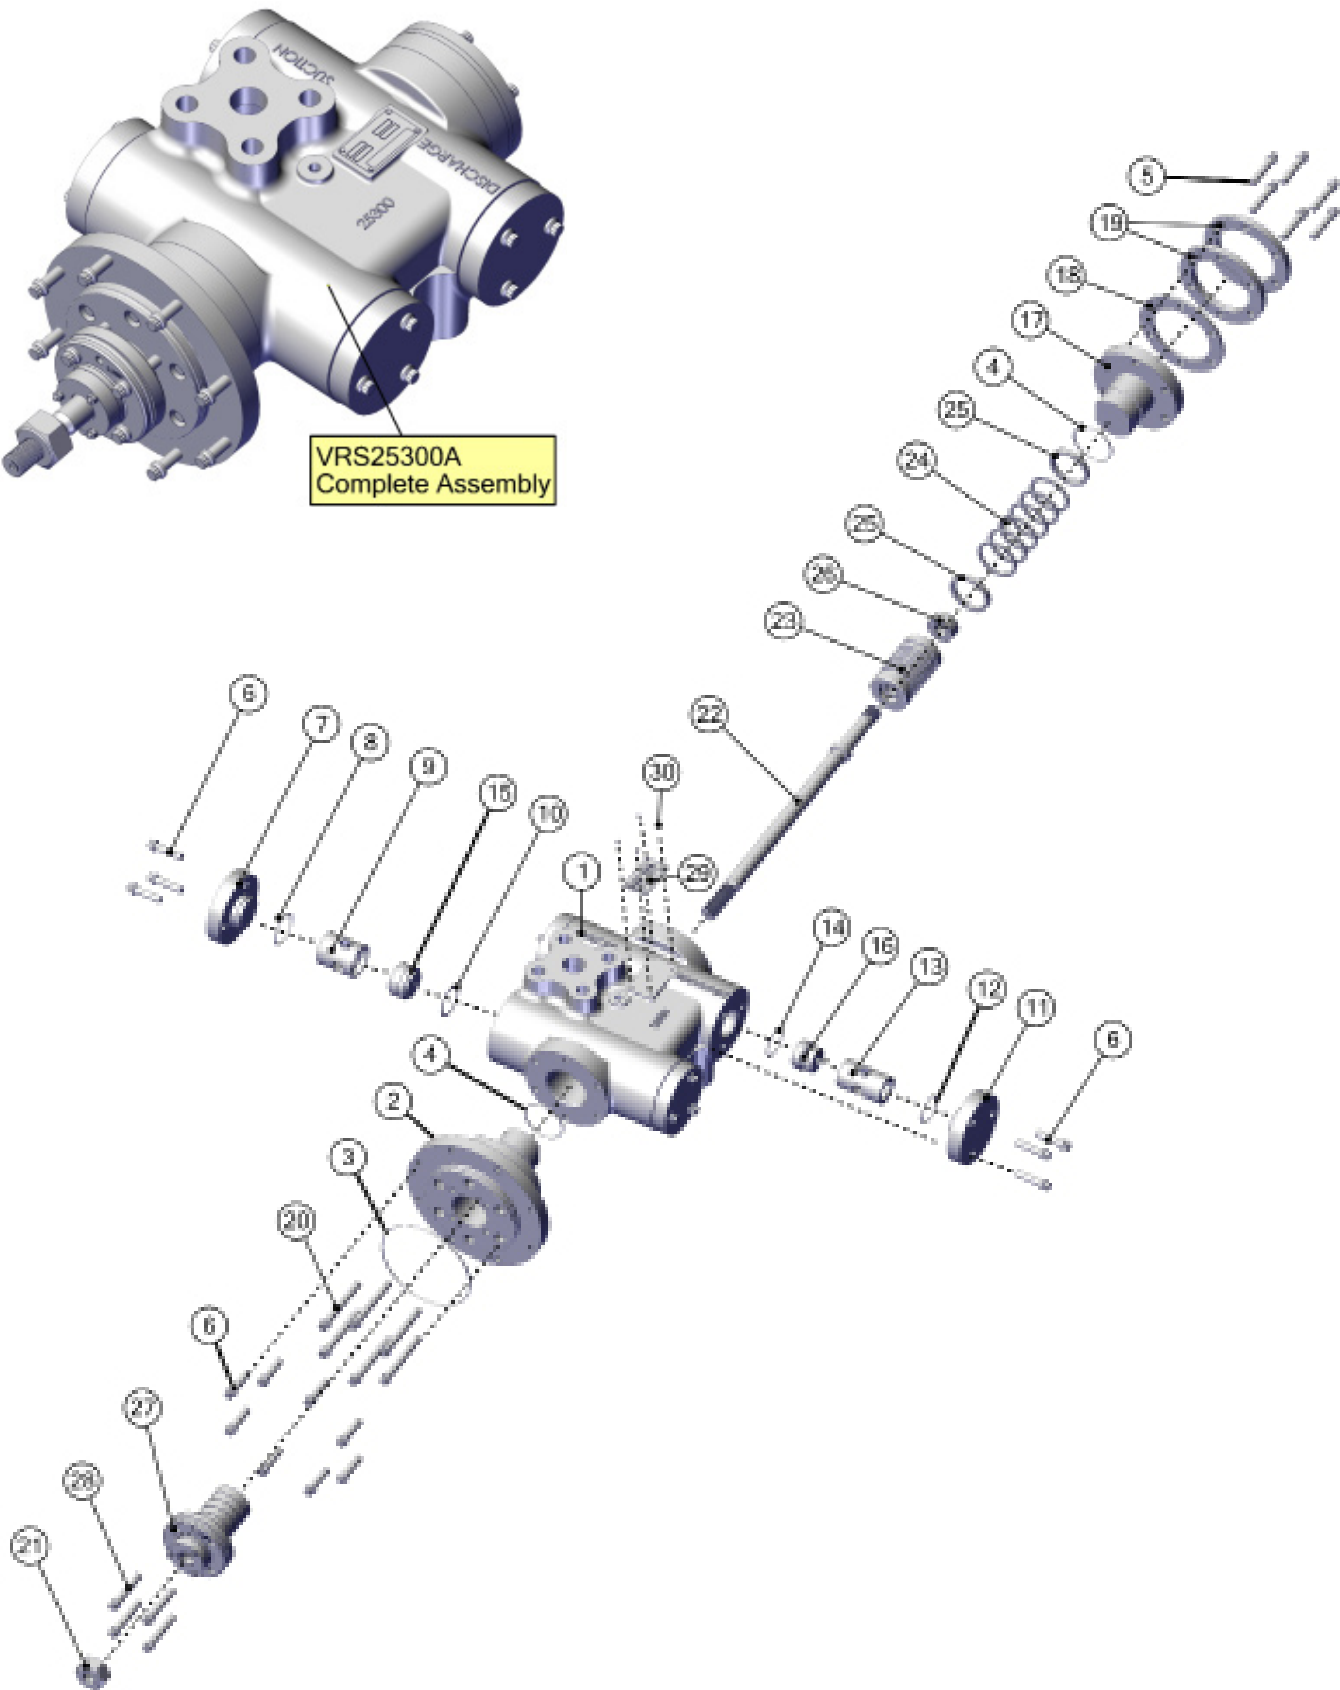

3.0-INCH DOUBLE-ACTING CYLINDER AND PISTON

NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25300A	CYLINDER, 3.0" DA, ASSEMBLY				
1	VRS25300	CYLINDER, 3.0" DA	1			
2	VRS25301	HEAD, CRANK END, 3.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25302	O-RING, HEAD, CRANK, OUTER END AND SAHE 3.0" CYLINDER	2	1	1	2
5	VRC25027	SCREW, CYLINDER TO FRAME, SHORT	6			
6	VRC25077	SCREW, VALVE COVER	20			
7	VRC25253	COVER, VALVE, SUCTION, 2.25"-3.0" CYLINDER	2			
8	VRC25254	O-RING, COVER, SUCTION VALVE, 2.25"-3.0" CYL.	2	2	2	2
9	VRS25306	RETAINER, VALVE, SUCTION, 3.0" DA CYLINDER	2			
10	VRC25255	GASKET, SUCTION VALVE SEAT, 2.25"-3.0" CYL.	2	2	2	2
11	VRC25303	COVER, VALVE, DISCHARGE, 2.25"-3.0" CYLINDER	2			
12	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.25"-3.0" CYLINDER	2	2	2	2
13	VRS25308	RETAINER, VALVE, DISCHARGE, 3.0" DA CYLINDER	2			
14	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.25"-3.0" CYL.	2	2	2	2
15	VRS26315A	VALVE, SUCTION, 2.5"-3.0" CYLINDER, MEDIUM *	2	2		2
16	VRS26325A	VALVE, DISCHARGE, 2.5"-3.0" CYL., MEDIUM *	2	2		2
17	VRC27306	HEAD, OUTER-END, 3.0" CYLINDER	1			
18	VRC27253	SPACER, HEAD, OUTER-END 1/4" **	1			
19	VRC27254	SPACER, HEAD, OUTER-END 1/2" **	2			
20	VRC25087	SCREW, HEAD, CRANK-END, LONG	6			
21	VRC24909	NUT, JAM, PISTON ROD ***	1			1
22	VRC24130	ROD, PISTON, 2.5"-3.0" PISTONS	1			1
23	VRS24300	PISTON, 3.0" DA CYLINDER, CI	1			1
24	VRS24301	RING, 3.0" PISTON	6		6	6
25	VRS24302	BAND, RIDER, 3.0" PISTON	2		2	2
26	VRC24919	NUT, PISTON	1			1
27	VRC23001A	FLANGE, PACKING CASE ****	1			1
28	VRC23107	SCREW, PACKING CASE	4			
29	VRS25110	NAMEPLATE, VRS CYLINDER	1			
30	VRC21606	PIN, NAMEPLATE	4			


* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** Spacer location inside or outside of head will be determined by site conditions.

*** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

**** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.3 3.5-inch Double-acting Cylinder and Piston Parts

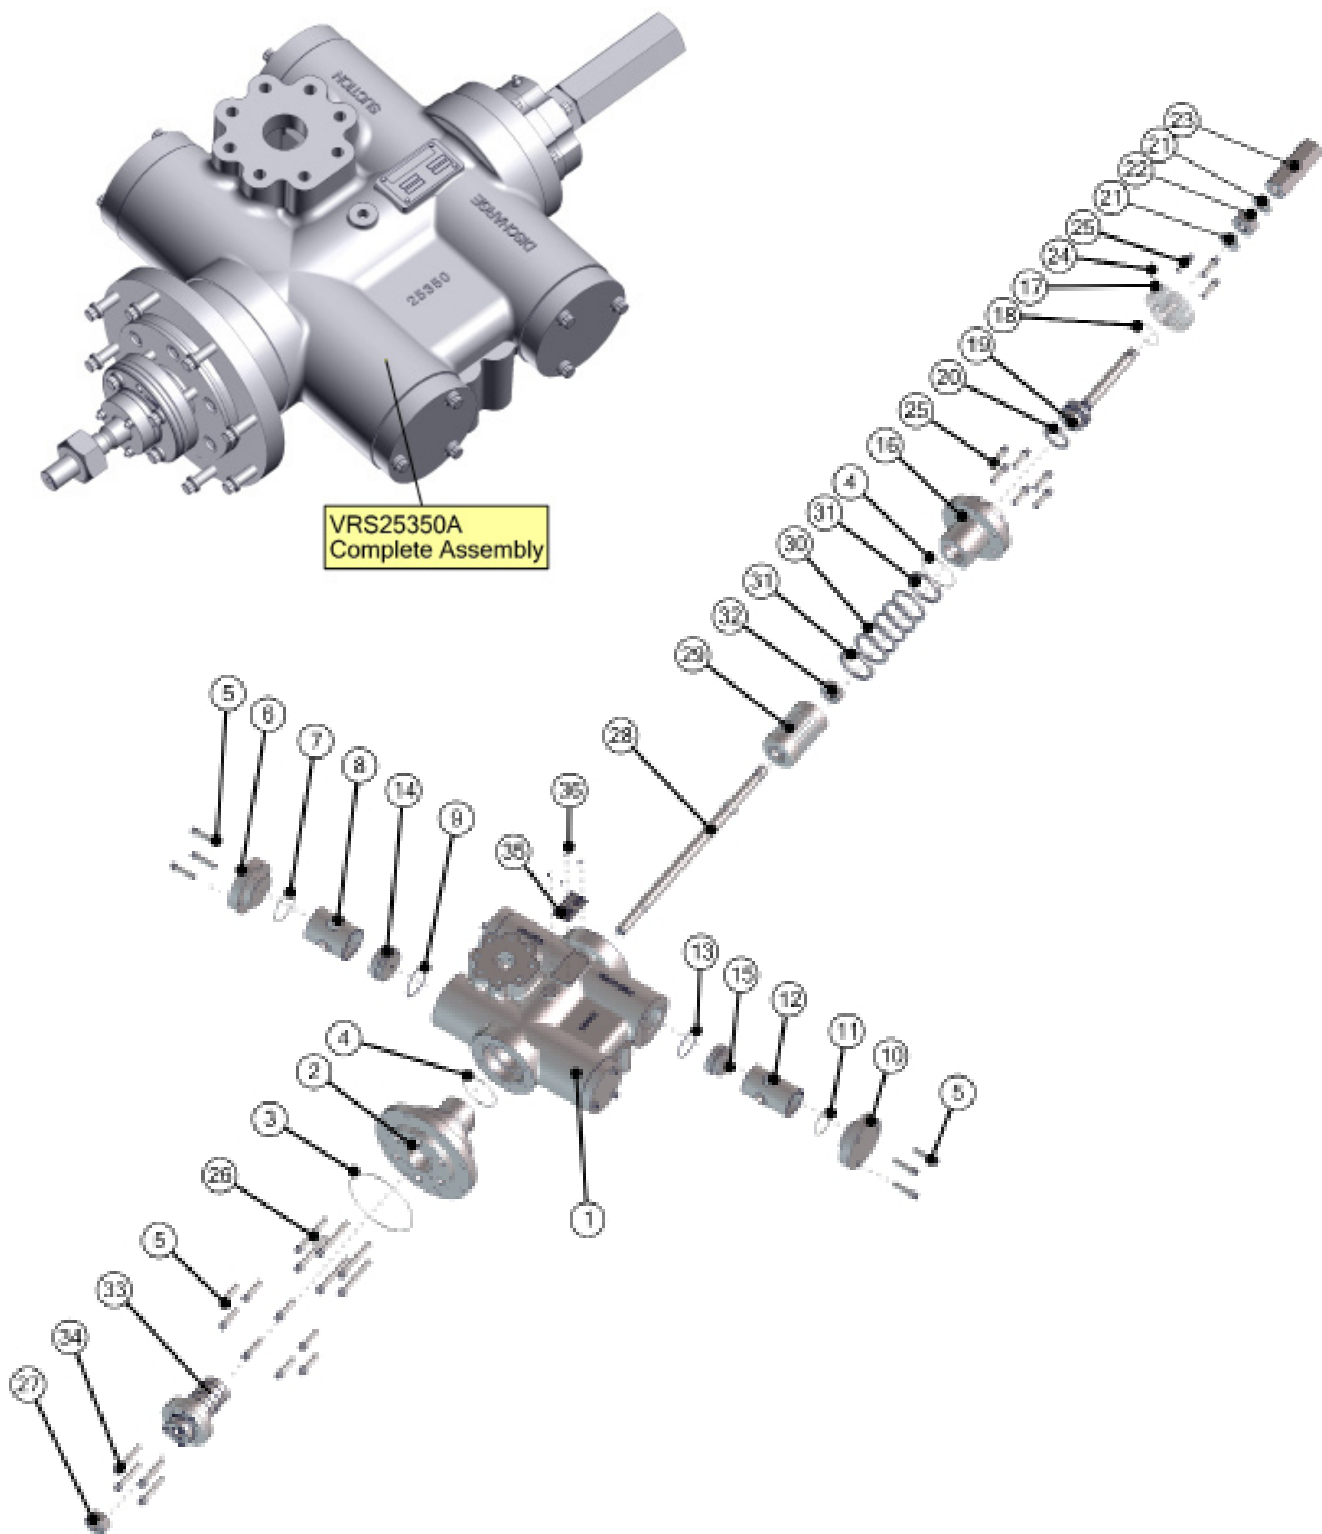

3.5-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25350A	CYLINDER, 3.5" DA, ASSEMBLY				
1	VRS25350	CYLINDER, 3.5" DA	1			
2	VRS25351	HEAD, CRANK END, 3.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25352	O-RING, HEAD, CRANK AND OUTER END, 3.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
7	VRC25354	O-RING, COVER, SUCTION VALVE 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
8	VRS25356	RETAINER, VALVE, SUCTION, 3.5" DA CYLINDER	2			
9	VRC25355	GASKET, SUCTION, VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
10	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
11	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
12	VRS25358	RETAINER, VALVE, DISCHARGE, 3.5" DA CYLINDER	2			
13	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
14	VRS26415A	VALVE, SUCTION, 3.5"-4.0" CYLINDER, MEDIUM *	2	2		2
15	VRS26425A	VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, MEDIUM *	2	2		2
16	VRC27351	POCKET, OUTER HEAD, 3.5" VVCP	1			
17	VRC27353	COVER, POCKET, 3.5"-4.0" VVCP	1			
18	VRC27354	O-RING,POCKET COVER, 3.5"-4.0" VVCP	1			1
19	VRC27357A	PISTON AND STEM ASSEMBLY, 3.5"-4.0" VVCP	1			1
20	VRC27358	RING, PISTON, 3.5"-4.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25047	SCREW, HEAD, CRANK-END, LONG	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24140	ROD, PISTON, 3.5-4.0" PISTON	1			1
29	VRS24350	PISTON, 3.5" DA CYLINDER, CI	1			1
30	VRC24351	RING, 3.5" PISTON	5		5	5
31	VRS24352	BAND, RIDER, 3.5" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	2			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.4 4.0-inch Double-acting Cylinder and Piston Parts

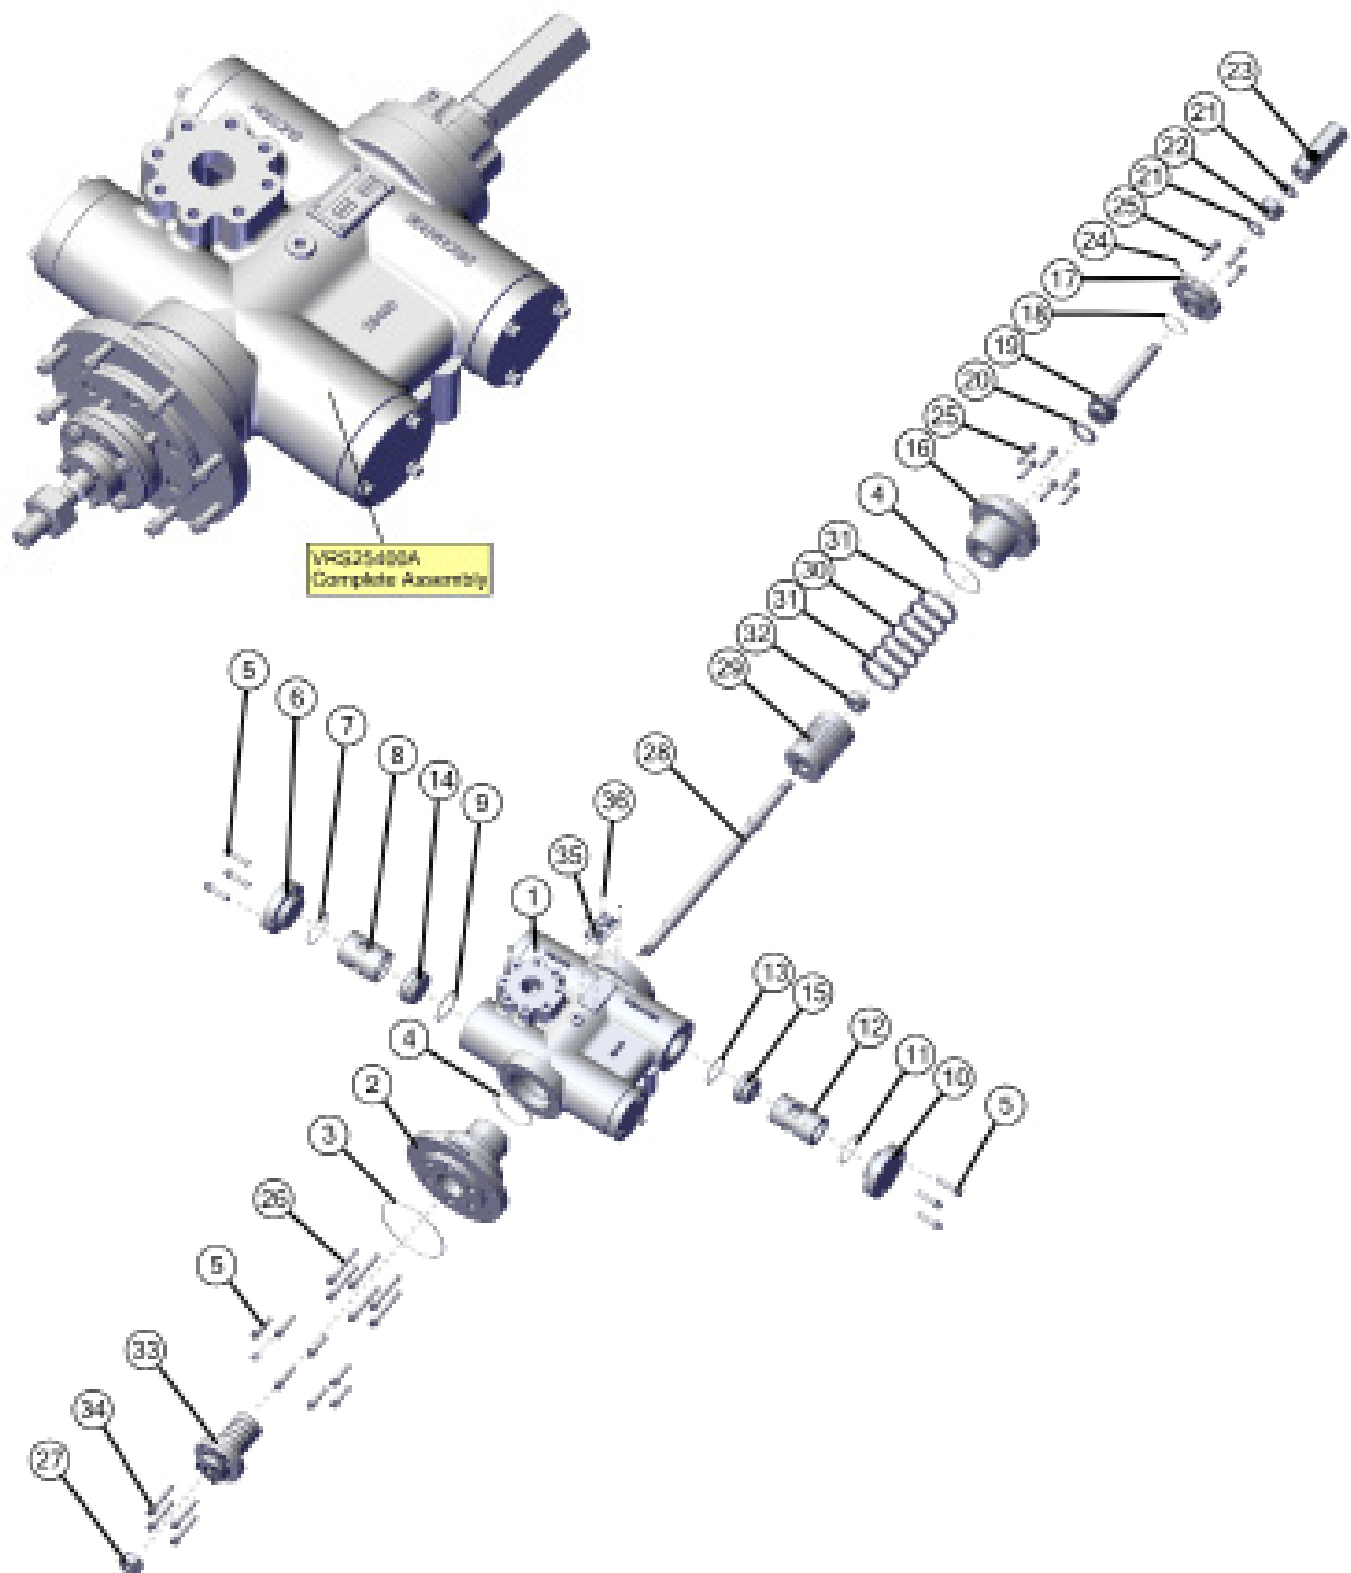

4.0-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25400A	CYLINDER, 4.0" DA, ASSEMBLY				
1	VRS25400	CYLINDER, 4.0" DA	1			
2	VRS25401	HEAD, CRANK-END, 4.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25402	O-RING, HEAD, CRANK AND OUTER END, 4.0" DA CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
7	VRC25354	O-RING, COVER, SUCTION VALVE 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2	2	2	2
8	VRS25406	RETAINER, VALVE, SUCTION, 4.0" DA CYLINDER	2			
9	VRC25355	GASKET, SUCTION, VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2	2	2	2
10	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
11	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
12	VRS25408	RETAINER, VALVE, DISCHARGE, 4.0" CYLINDER	2			
13	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
14	VRS26415A	VALVE, SUCTION, 3.5"-4.0" CYLINDER MEDIUM *	2	2		2
15	VRS26425A	VALVE, DISCHARGE, 3.5"-4.0" CYLINDER MEDIUM *	2	2		2
16	VRC27401	POCKET, OUTER HEAD, 4.0" VVCP	1			
17	VRC27353	COVER, POCKET, 3.5"-4.0" VVCP	1			
18	VRC27354	O-RING, POCKET COVER, 3.5"-4.0" VVCP	1			1
19	VRC27357A	PISTON AND STEM ASSEMBLY, 3.5"-4.0" VVCP	1			1
20	VRC27358	RING, PISTON, 3.5"-4.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25037	SCREW, CYLINDER TO FRAME, LONG	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24140	ROD, PISTON, 3.5-4.0" PISTON	1			1
29	VRS24400	PISTON, 4.0" DA CYLINDER, CI, VRC24400	1			1
30	VRC24401	RING, 4.0" PISTON	5		5	5
31	VRS24402	BAND, RIDER, 4.0" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.5 4.5-inch Double-acting Cylinder and Piston Parts

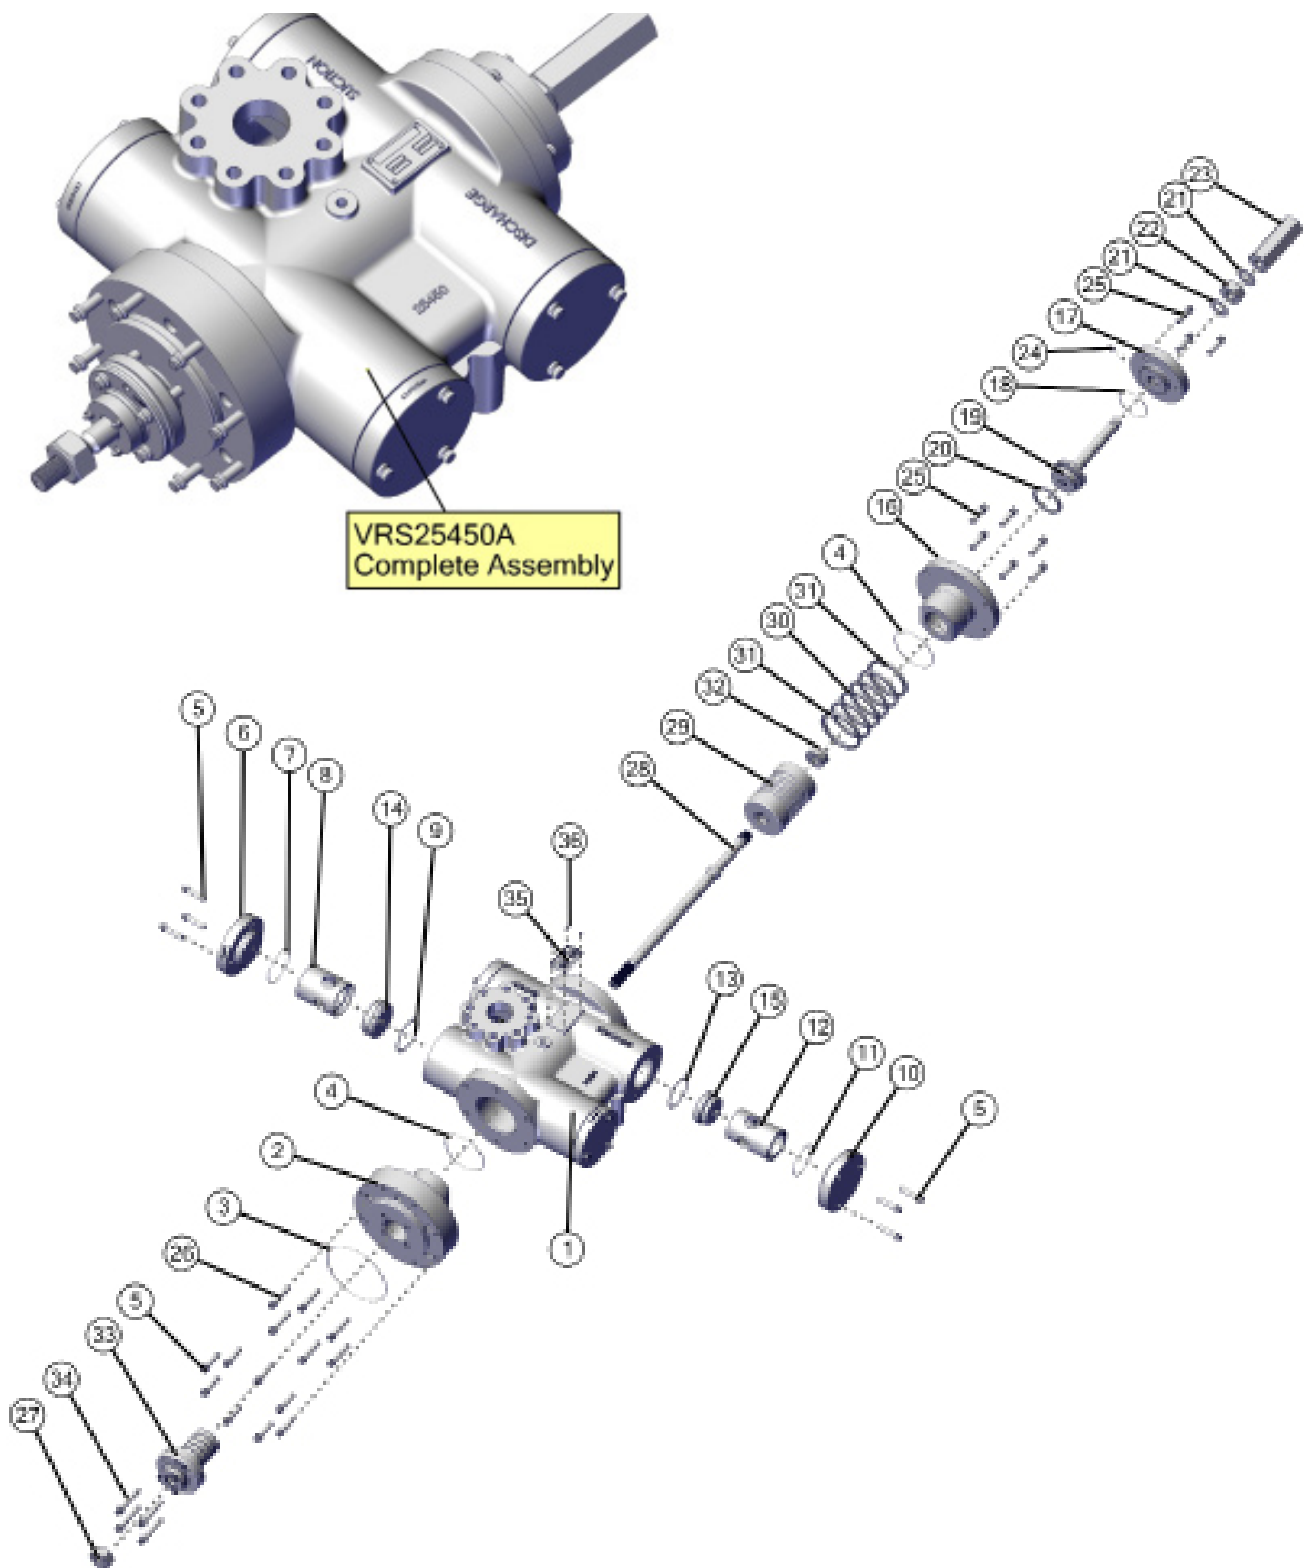

4.5-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25450A	CYLINDER, 4.5" DA, ASSEMBLY				
1	VRS25450	CYLINDER, 4.5" DA	1			
2	VRS25451	HEAD, CRANK-END, 4.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25452	O-RING, HEAD, CRANK AND OUTER END 4.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER	2			
7	VRC25454	O-RING, COVER, SUCTION, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25456	RETAINER, VALVE, SUCTION, 4.5" DA CYLINDER	2			
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
10	VRS25503	COVER, VALVE, DISCHARGE, 4.5"-5.0" CYLINDER	2			
11	VRC25504	O-RING, COVER, DISCHARGE, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25458	RETAINER, VALVE, DISCHARGE, 4.5" DA CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER, MEDIUM *	2	2		2
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER, MEDIUM *	2	2		2
16	VRC27451	POCKET, OUTER HEAD 4.5" VVCP	1			
17	VRC27453	COVER, POCKET, 4.5"-5.0" VVCP	1			
18	VRC27454	O-RING, POCKET COVER, 4.5"-5.0" VVCP	1			1
19	VRC27457A	PISTON AND STEM ASSEMBLY, 4.5"-5.0" VVCP	1			1
20	VRC27458	RING, PISTON, 4.5"- 5.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25027	SCREW, CYLINDER TO FRAME, SHORT	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24150	ROD, PISTON, 4.5"-5.0" PISTONS	1			1
29A	VRS24450	PISTON, 4.5" DA CYLINDER, CI	1			1
29B	VRS24455	PISTON, 4.5" DA CYLINDER, AL (MAY BE USED FOR BALANCING)	1			1
30	VRC24451	RING, 4.5" PISTON	4		4	4
31	VRS24452	BAND, RIDER, 4.5" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.0-inch Double-acting Cylinder and Piston Parts



5.0-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25500A	CYLINDER, 5.0" DA, ASSEMBLY				
1	VRS25500	CYLINDER, 5.0" DA	1			
2	VRS25501	HEAD, CRANK-END, 5.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC27654	O-RING, HEAD, CRANK AND OUTER END, 5.0" CYL	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYL	2			
7	VRC25454	O-RING, COVER, SUCTION, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25506	RETAINER, VALVE, SUCTION, 5.0" DA CYLINDER	2			
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
10	VRS25503	COVER, VALVE, DISCHARGE, 4.5"-5.0" CYLINDER	2			
11	VRC25504	O-RING, COVER, DISCHARGE, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25508	RETAINER, VALVE, DISCHARGE, 5.0" DA CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER MEDIUM *	2	2		2
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER MEDIUM *	2	2		2
16	VRC27501	POCKET, OUTER HEAD, 5.0" VVCP	1			
17	VRC27453	COVER, POCKET, 4.5"-5.0" VVCP	1			
18	VRC27454	O-RING, POCKET COVER, 4.5"-5.0" VVCP	1			1
19	VRC27457A	PISTON AND STEM ASSEMBLY, 4.5"-5.0" VVCP	1			1
20	VRC27458	RING, PISTON, 4.5"-5.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25027	SCREW, CYLINDER TO FRAME, SHORT	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24150	ROD, PISTON, 4.5"-5.0" PISTONS	1			1
29A	VRS24500	PISTON, 5.0" DA CYLINDER, CI	1			1
29B	VRS24505	PISTON, 5.0" DA CYLINDER, AL (MAY BE USED FOR BALANCING)	1			1
30	VRC24501	RING, 5.0" PISTON	4		4	4
31	VRS24502	BAND, RIDER, 5.0" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.7 5.5-inch Double-acting Cylinder and Piston Parts

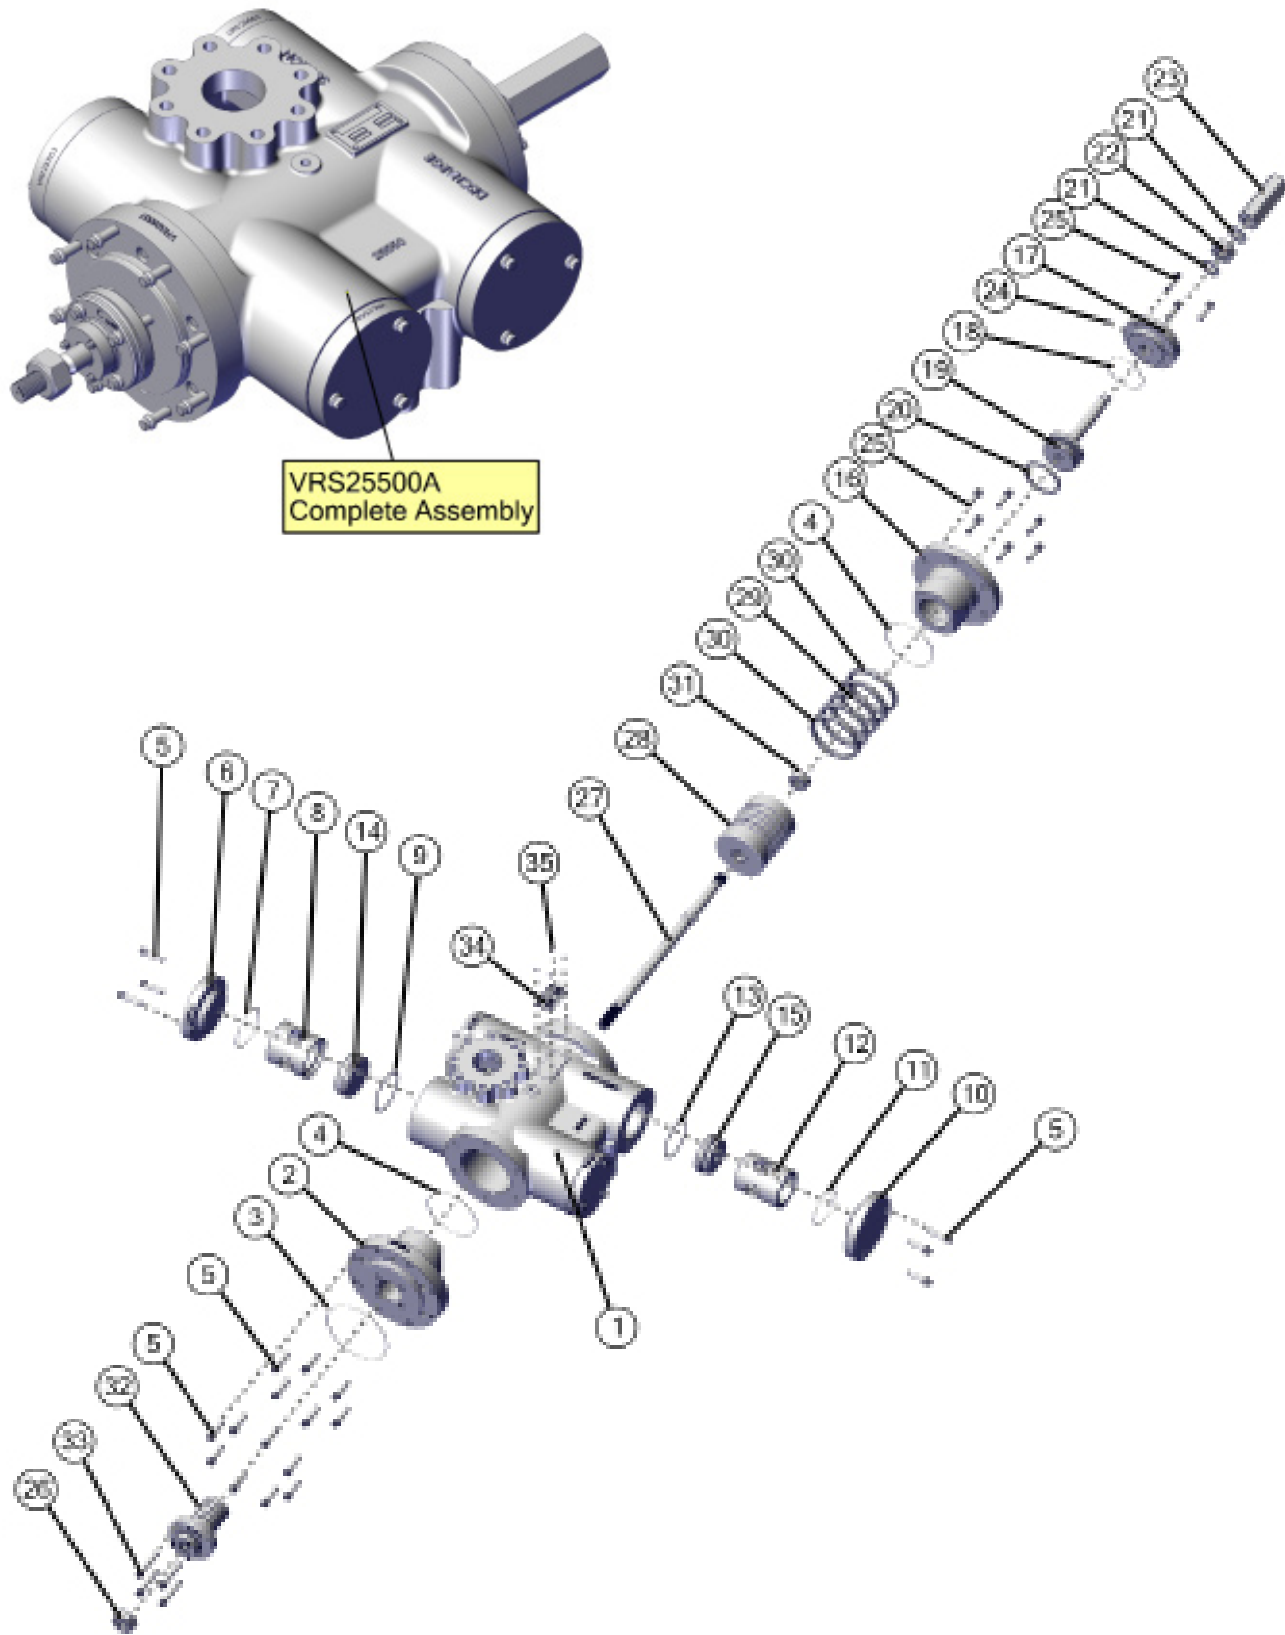

5.5-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25550A	CYLINDER, 5.5" DA, ASSEMBLY				
1	VRS25550	CYLINDER, 5.5" DA	1			
2	VRS25551	HEAD, CRANK END, 5.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25552	O-RING, HEAD, CRANK AND OUTER END, 5.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	26			
6	VRC25553	COVER, VALVE, SUCTION, 5.5"-6.0" CYLINDER	2			
7	VRC25554	O-RING, COVER, SUCTION VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
8	VRS25556	RETAINER, VALVE, SUCTION, 5.5" DA CYLINDER	2			
9	VRC25555	GASKET, SUCTION VALVE SEAT, 5.5"-6.0" CYLINDER	2	2	2	2
10	VRC25603	COVER, VALVE, DISCHARGE, 5.5"-6.0" CYLINDER	2			
11	VRC25604	O-RING, COVER, DISCHARGE, VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
12	VRS25558	RETAINER, VALVE, DISCHARGE, 5.5" DA CYLINDER	2			
13	VRC25605	GASKET, DISCHARGE VALVE SEAT, 5.5"-6.0" CYLINDER	2	2	2	2
14	VRS26615A	VALVE, SUCTION, 5.5"-6.0" CYLINDER, MEDIUM *	2	2		2
15	VRS26625A	VALVE, DISCHARGE, 5.5"-6.0" CYLINDER, MEDIUM *	2	2		2
16	VRC27551	POCKET, OUTER HEAD, 5.5" VVCP	1			
17	VRC27553	COVER, POCKET, 5.5"-6.0" VVCP	1			
18	VRC27554	O-RING, POCKET COVER, 5.5"-6.0" VVCP	1			1
19	VRC27557A	PISTON AND STEM ASSEMBLY, 5.5"-6.0" VVCP	1			1
20	VRC27558	RING, PISTON, 5.5"-6.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC24909	NUT, JAM, PISTON ROD **	1			1
27	VRC24160	ROD, PISTON, 5.5"-6.0" PISTONS	1			1
28	VRS24550	PISTON, 5.5" DA CYLINDER, AL	1			1
29	VRC24551	RING, 5.5" PISTON	3		3	3
30	VRS24552	BAND, RIDER, 5.5" PISTON	2		2	2
31	VRC24919	NUT, PISTON	1			1
32	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
33	VRC23107	SCREW, PACKING CASE	4			
34	VRS25110	NAMEPLATE, VRS CYLINDER	1			
35	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.8 6.0-inch Double-acting Cylinder and Piston Parts

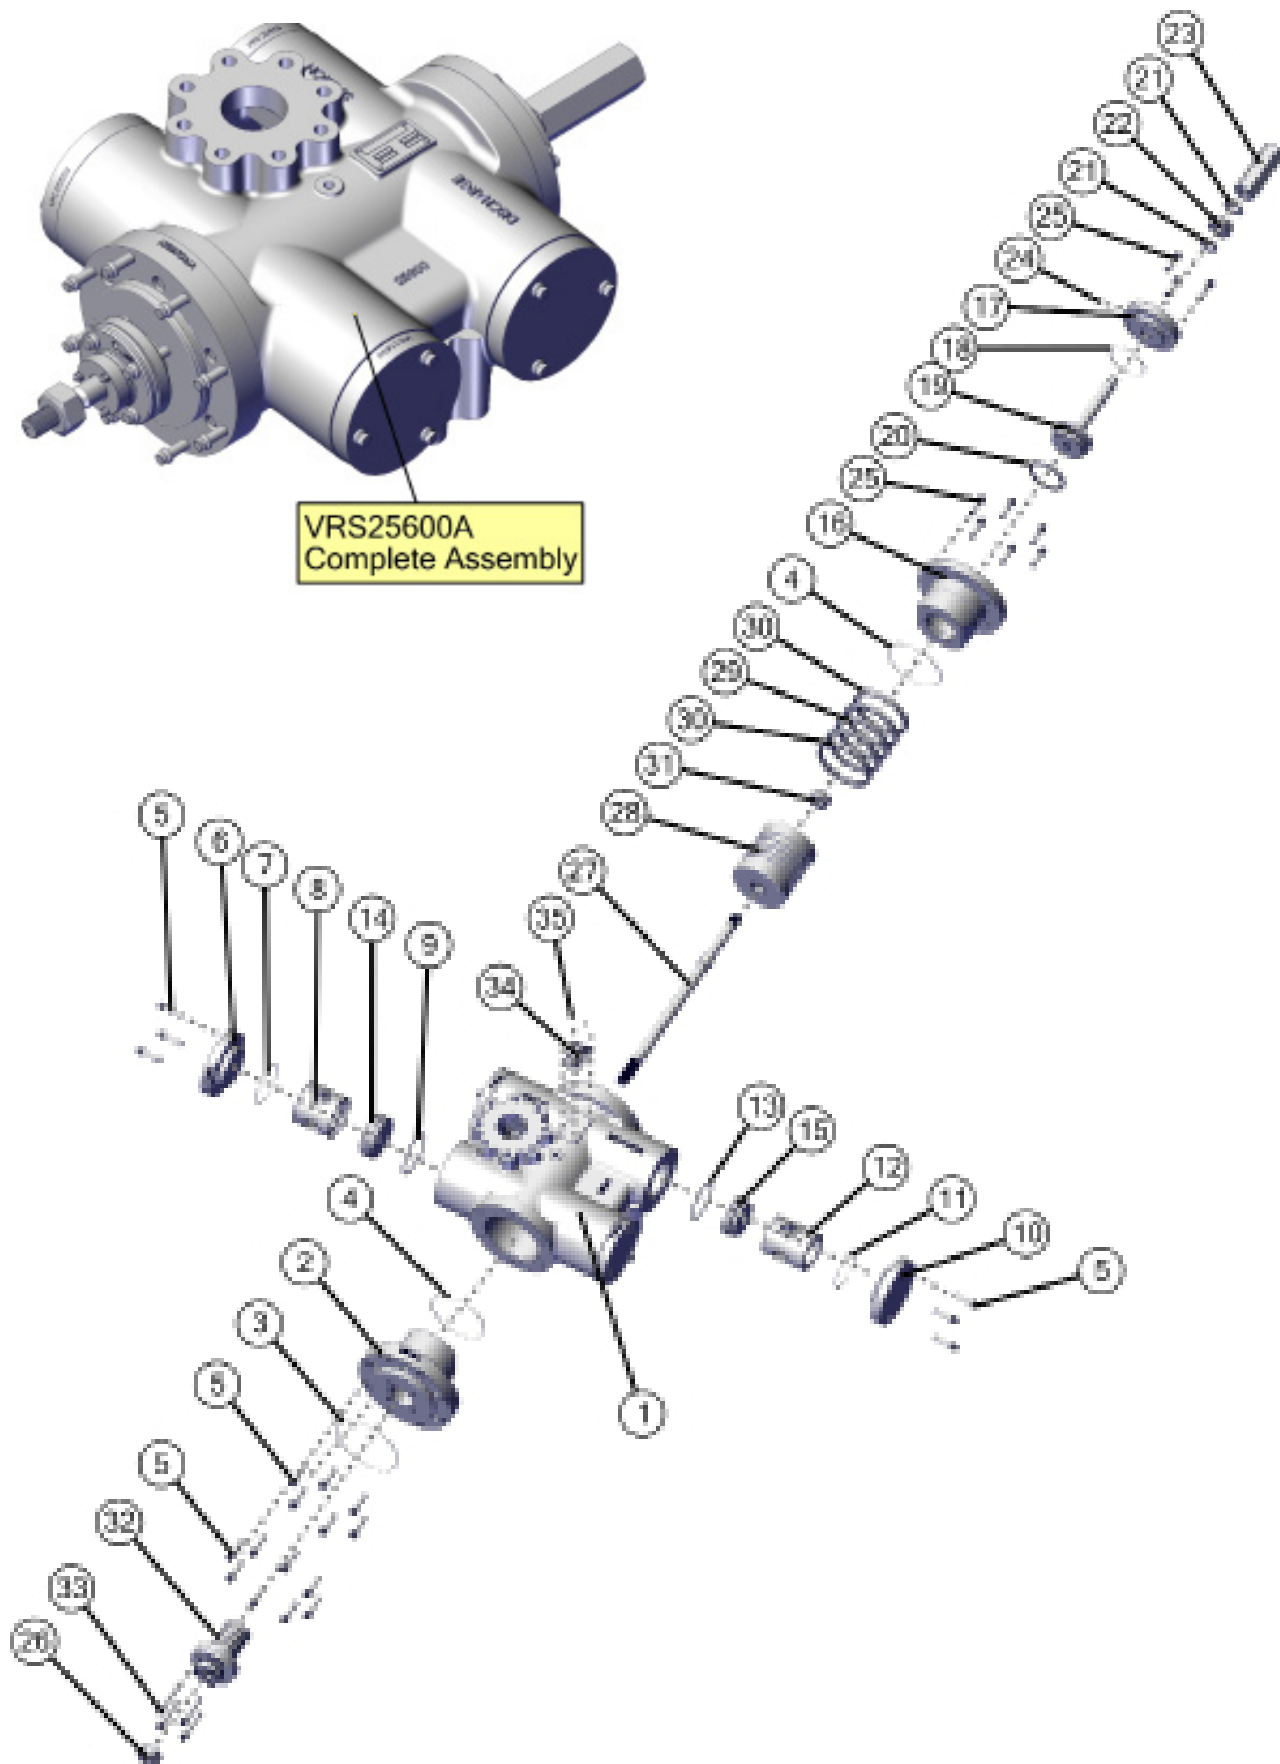

6.0-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25600A	CYLINDER, 6.0" DA, ASSEMBLY				
1	VRS25600	CYLINDER, 6.0" DA	1			
2	VRS25601	HEAD, CRANK-END, 6.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25602	O-RING, HEAD, CRANK AND OUTER END, 6.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	26			
6	VRC25553	COVER, VALVE, SUCTION, 5.5"-6.0" CYLINDER	2			
7	VRC25554	O-RING, COVER, SUCTION VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
8	VRS25606	RETAINER, VALVE, SUCTION, 6.0" DA CYLINDER	2			
9	VRC25555	GASKET, SUCTION VALVE SEAT, 5.5"-6.0" CYLINDER	2	2	2	2
10	VRC25603	COVER, VALVE, DISCHARGE, 5.5"-6.0" CYLINDER	2			
11	VRC25604	O-RING, COVER, DISCHARGE, VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
12	VRS25608	RETAINER, VALVE, DISCHARGE, 6.0" DA CYLINDER	2			
13	VRC25605	GASKET, DISCHARGE VALVE SEAT, 5.5"-6.0" CYLINDER	2	2	2	2
14	VRS26615A	VALVE, SUCTION, 5.5"-6.0" CYLINDER, MEDIUM *	2	2		2
15	VRS26625A	VALVE, DISCHARGE, 5.5"-6.0" CYLINDER, MEDIUM *	2	2		2
16	VRC27601	POCKET, OUTER HEAD, 6.0" VVCP	1			
17	VRC27553	COVER, POCKET, 5.5"-6.0" VVCP	1			
18	VRC27554	O-RING, POCKET COVER, 5.5"-6.0" VVCP	1			1
19	VRC27557A	PISTON AND STEM ASSEMBLY, 5.5"-6.0" VVCP	1			1
20	VRC27558	RING, PISTON, 5.5"-6.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC24909	NUT, JAM, PISTON ROD **	1			1
27	VRC24160	ROD, PISTON, 5.5"-6.0" PISTONS	1			1
28	VRS24600	PISTON, 6.0" DA CYLINDER, AL	1			1
29	VRC24601	RING, 6.0" PISTON	3		3	3
30	VRS24602	BAND, RIDER, 6.0" PISTON	2		2	2
31	VRC24919	NUT, PISTON	1			1
32	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
33	VRC23107	SCREW, PACKING CASE	4			
34	VRS25110	NAMEPLATE, VRS CYLINDER	1			
35	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.9 6.5-inch Double-acting Cylinder and Piston Parts

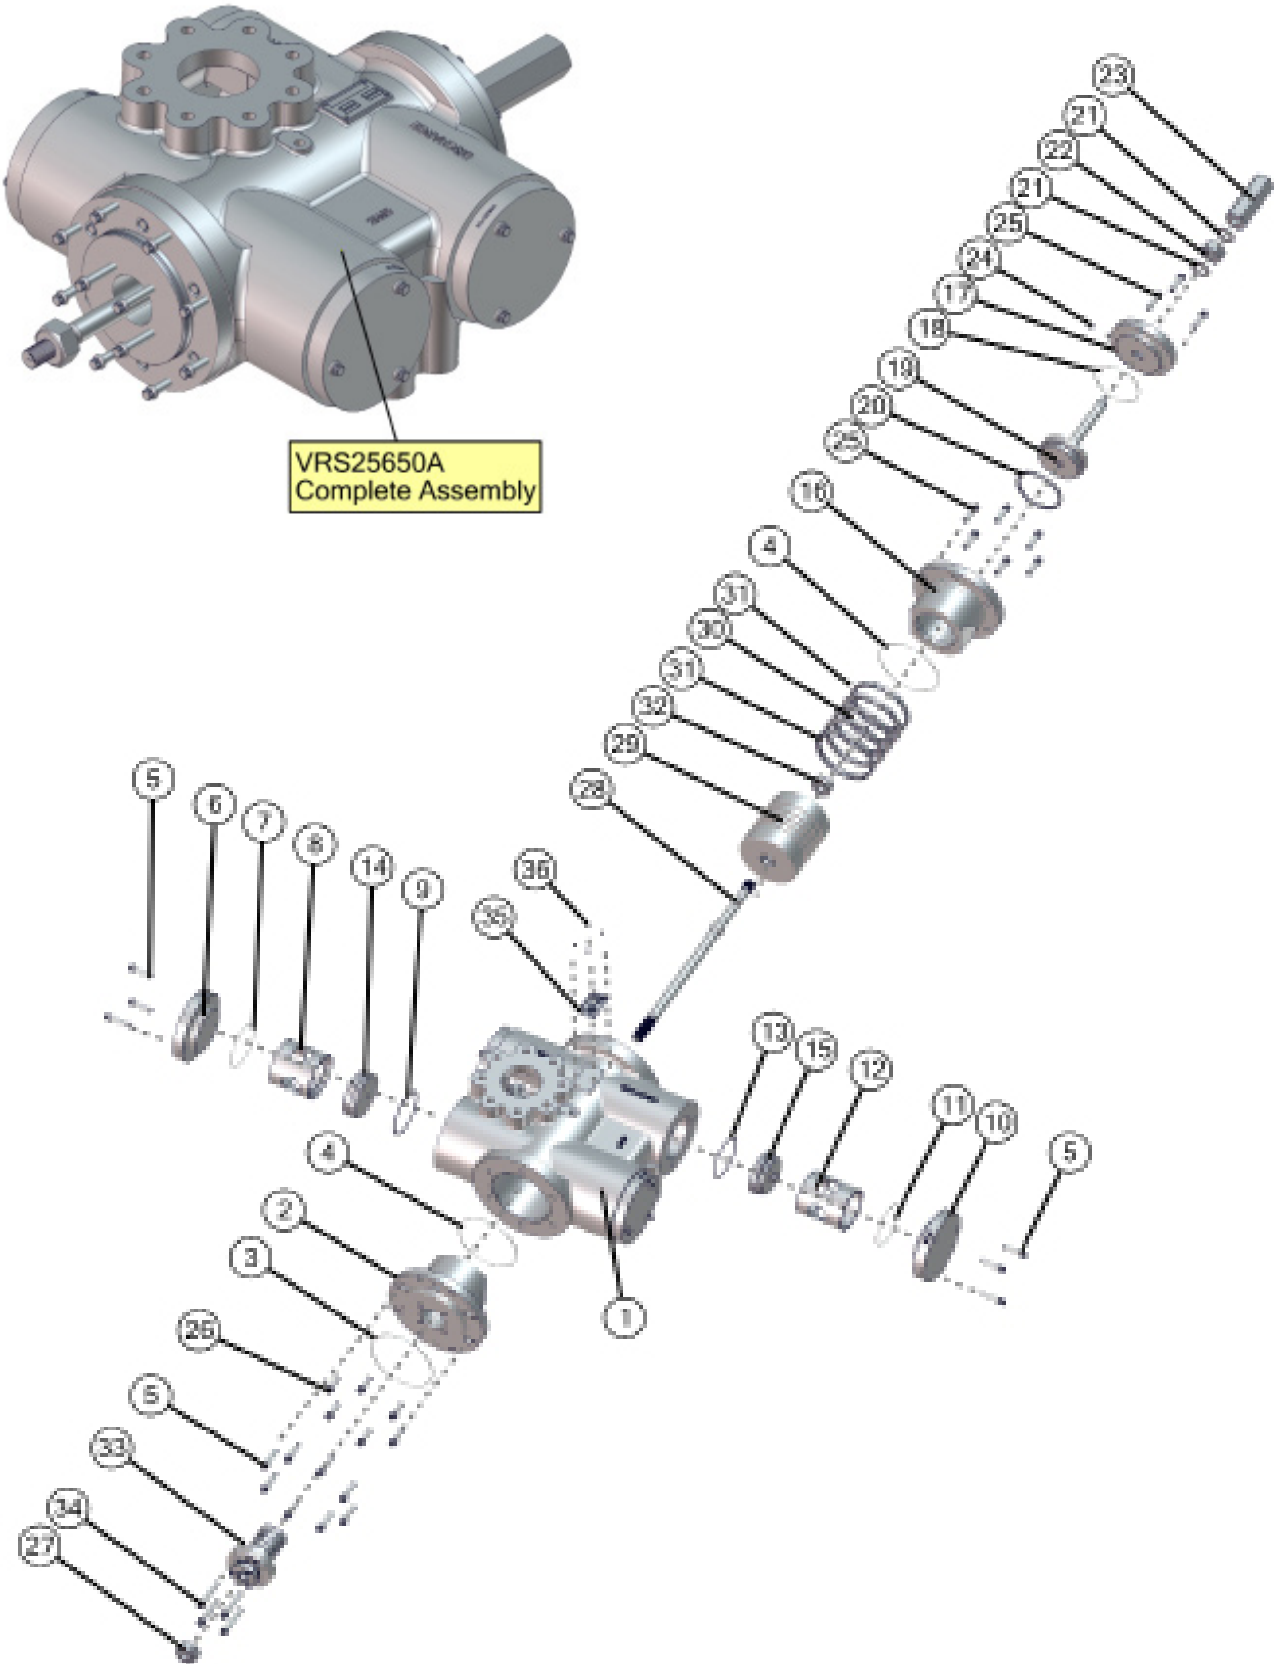

6.5-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25650A	CYLINDER, 6.5" DA, ASSEMBLY				
1	VRS25650	CYLINDER, 6.5" DA	1			
2	VRS25651	HEAD, CRANK END, 6.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25652	O-RING, HEAD, CRANK AND OUTER END, 6.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	2			
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
8	VRS25656	RETAINER, VALVE, SUCTION, 6.5" DA CYLINDER	2			
9	VRS25655	GASKET, SUCTION VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL.	2			
11	VRS25704	O-RING, COVER, DISCHARGE VALVE, 6.5", 7.0", 9.5", 10.0" CYL.	2	2	2	2
12	VRS25658	RETAINER, VALVE, DISCHARGE, 6.5" DA CYLINDER	2			
13	VRS25705	GASKET, DISCHARGE VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	2	2		2
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	2	2		2
16	VRC27651	POCKET, OUTER HEAD, 6.5" VVCP	1			
17	VRC27653	COVER, POCKET, 6.5"-7.0" VVCP	1			
18	VRC27654	O-RING, POCKET AND COVER, 6.5"-7.0" VVCP	1			1
19	VRC27657A	PISTON AND STEM ASSEMBLY, 6.5"-7.0" VVCP	1			1
20	VRC27658	RING, PISTON, 6.5"-7.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25007	SCREW, HEAD, CRANK-END	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24180	ROD, PISTON, 6.5 - 8.0" PISTONS	1			1
29	VRS24650	PISTON, 6.5" DA CYLINDER, AL	1			1
30	VRC24651	RING, 6.5" PISTON	3		3	3
31	VRS24652	BAND, RIDER, 6.5" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.10 7.0-inch Double-acting Cylinder and Piston Parts

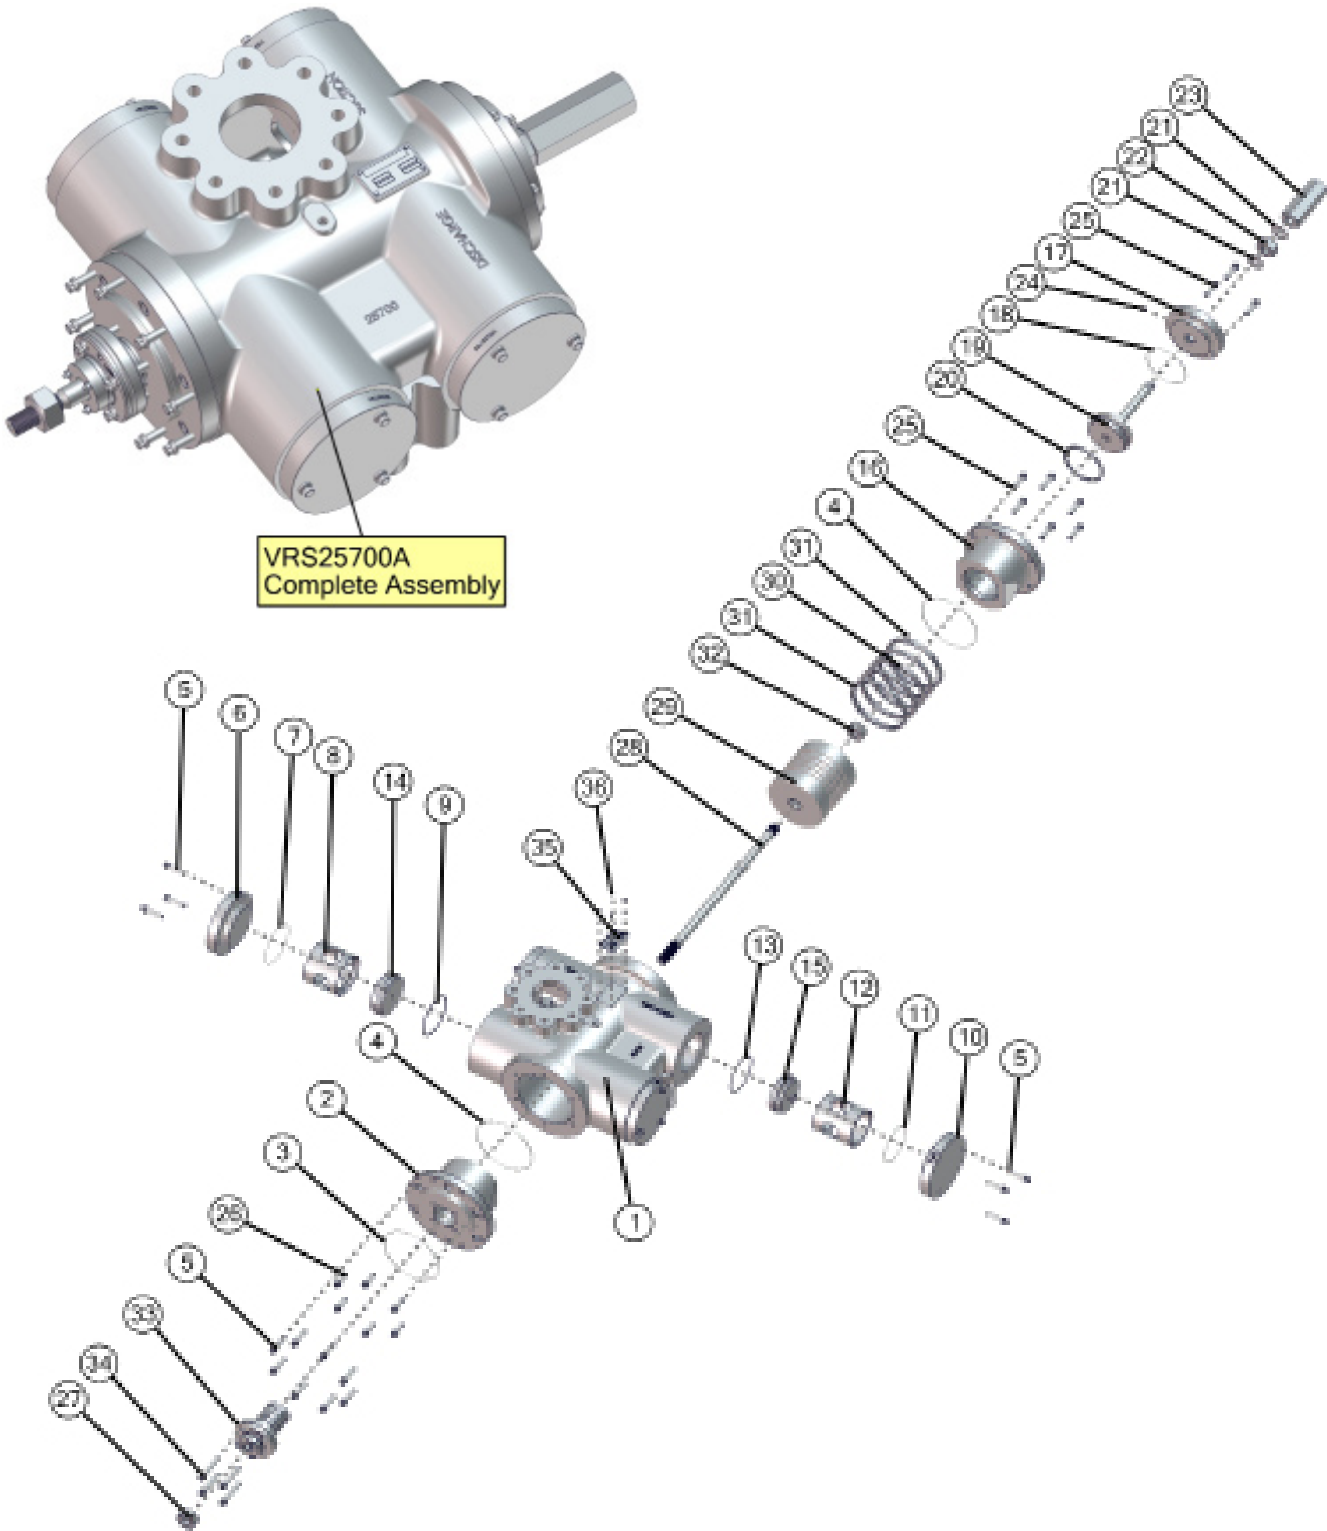

7.0-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25700A	CYLINDER, 7.0" DA, ASSEMBLY				
1	VRS25700	CYLINDER, 7.0" DA	1			
2	VRS25701	HEAD, CRANK END, 7.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25702	O-RING, HEAD, CRANK AND OUTER-END, 7.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	2			
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
8	VRS25706	RETAINER, VALVE, SUCTION, 7.0" DA CYLINDER	2			
9	VRS25655	GASKET, SUCTION VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL.	2			
11	VRS25704	O-RING, COVER, DISCHARGE VALVE, 6.5", 7.0", 9.5", 10.0" CYL.	2	2	2	2
12	VRS25708	RETAINER, VALVE, DISCHARGE, 7.0" DA CYLINDER	2			
13	VRS25705	GASKET, DISCHARGE VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	2	2		2
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	2	2		2
16	VRC27701	POCKET, OUTER HEAD, 7.0" VVCP	1			
17	VRC27653	COVER, POCKET, 6.5"-7.0" VVCP	1			
18	VRC27654	O-RING, POCKET AND COVER, 6.5"-7.0" VVCP	1			1
19	VRC27657A	PISTON AND STEM ASSEMBLY, 6.5"-7.0" VVCP	1			1
20	VRC27658	RING, PISTON, 6.5"-7.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25007	SCREW, HEAD, CRANK-END	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24180	ROD, PISTON, 6.5 - 8.0" PISTONS	1			1
29	VRS24700	PISTON, 7.0" DA CYLINDER, AL	1			1
30	VRC24701	RING, 7.0" PISTON	3		3	3
31	VRS24702	BAND, RIDER, 7.0" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.11 7.5-inch Double-acting Cylinder and Piston Parts

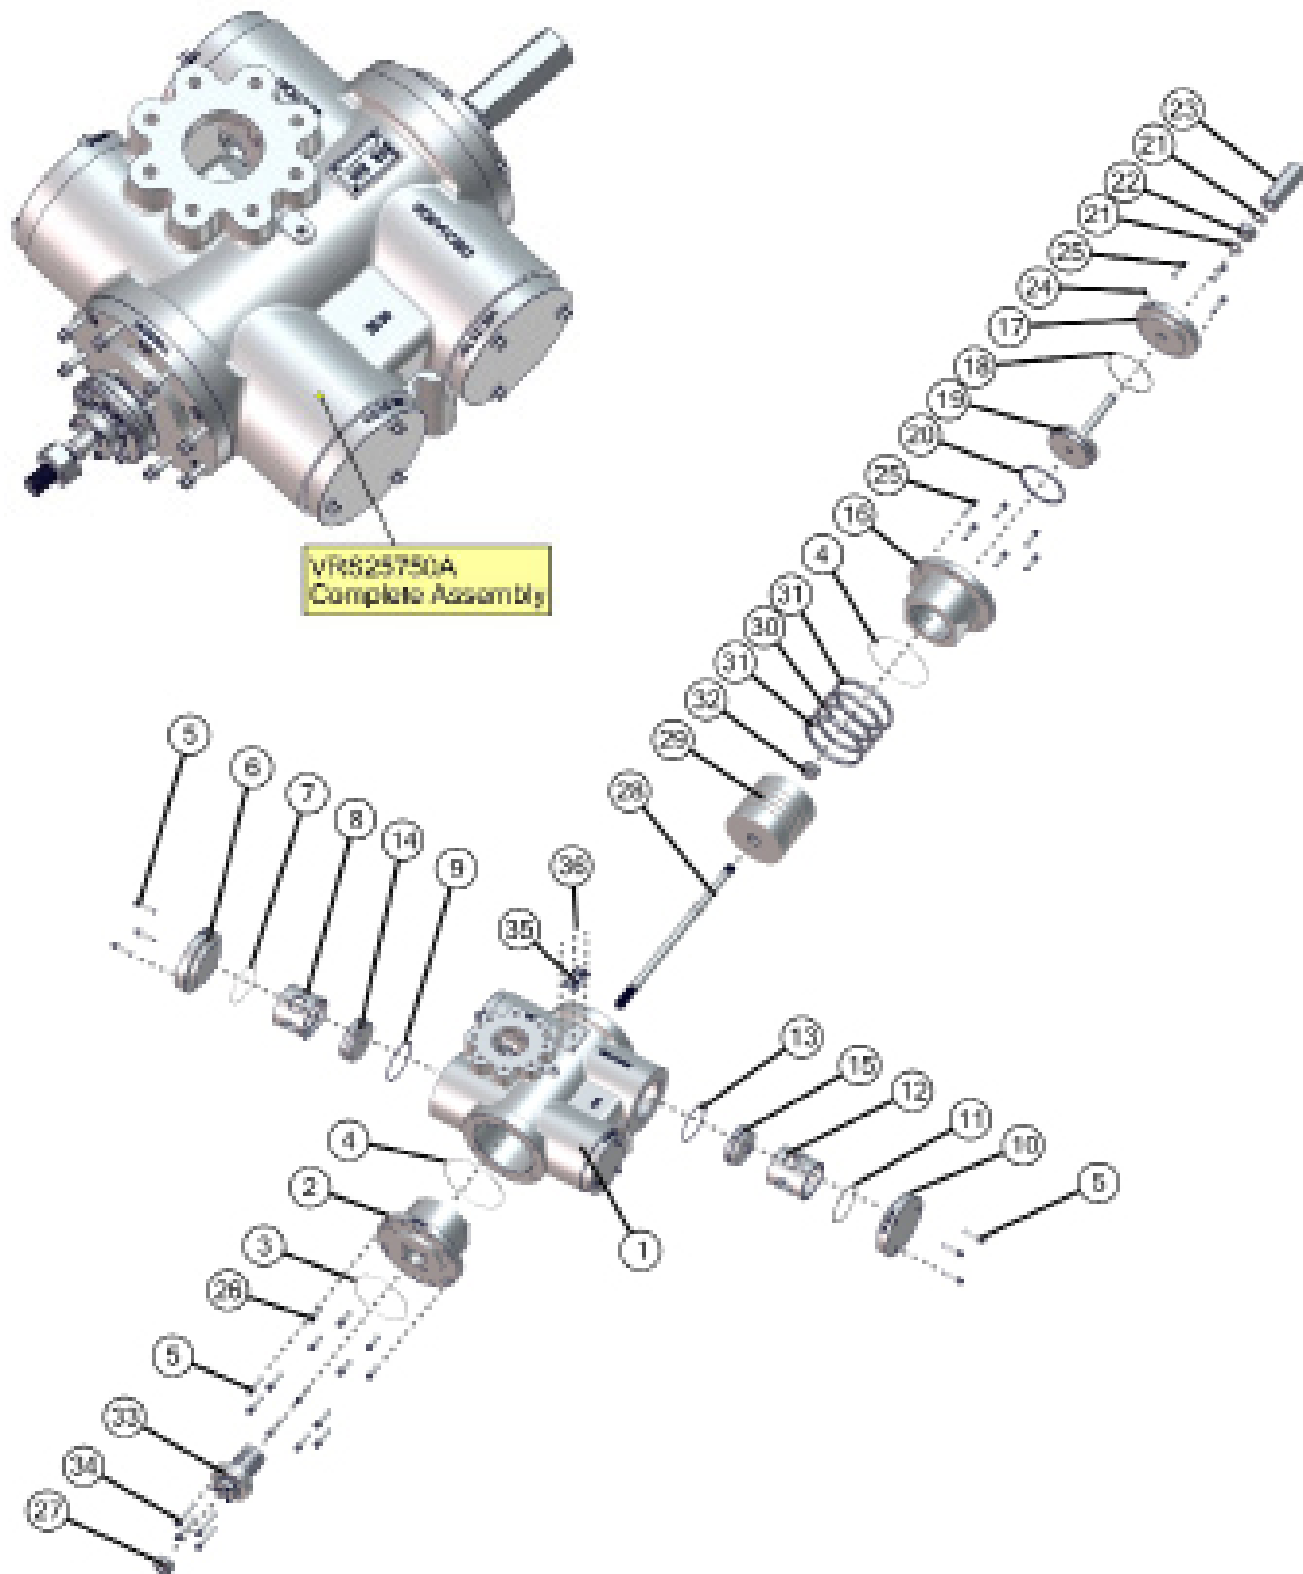

7.5-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25750A	CYLINDER, 7.5" DA, ASSEMBLY				
1	VRS25750	CYLINDER, 7.5" DA	1			
2	VRS25751	HEAD, CRANK END, 7.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25752	O-RING, HEAD, CRANK AND OUTER END, 7.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRC25653	COVER, VALVE, SUCTION, 6.5"-8.5" VRC AND 7.5"-8.0" VRS	2			
7	VRC27654	O-RING, COVER, SUCTION VALVE, 6.5"-8.5" VRC. 7.5"-8.0" VRS	2	2	2	2
8	VRS25756	RETAINER, VALVE, SUCTION, 7.5" DA CYLINDER	2			
9	VRC25655	GASKET, SUCTION VALVE SEAT, 6.5"-8.5" VRC AND 7.5"-8.0" VRS	2	2	2	2
10	VRC25703	COVER, VALVE, DISCHARGE, 6.5"-8.5" VRC AND 7.5"-8.0" VRS	2			
11	VRC25704	O-RING, COVER, DISCHARGE VALVE, 6.5"-8.5" VRC, 7.5"-8.0" VRS	2	2	2	2
12	VRS25758	RETAINER, VALVE, DISCHARGE, 7.5" DA CYLINDER	2			
13	VRC25705	GASKET, DISCHARGE VALVE SEAT, 6.5"-8.5" VRC, 7.5"-8.0" VRS	2	2	2	2
14	VRS26815A	VALVE, SUCTION, 7.5"-8.0" CYLINDER, MEDIUM *	2	2		2
15	VRS26825A	VALVE, DISCHARGE, 7.5"-8.0" CYLINDER, MEDIUM *	2	2		2
16	VRC27751	POCKET, OUTER HEAD, 7.5" VVCP	1			
17	VRC27753	COVER, POCKET, 7.5"-8.0" VVCP	1			
18	VRC27754	O-RING, POCKET COVER, 7.5"-8.0" VVCP	1			1
19	VRC27757A	PISTON AND STEM ASSEMBLY, 7.5"-8.0" VVCP	1			1
20	VRC27758	RING, PISTON, 7.5"-8.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25007	SCREW, HEAD, CRANK-END	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24180	ROD, PISTON, 6.5"-8.0" PISTONS	1			1
29	VRS24750	PISTON, 7.5" DA CYLINDER, AL	1			1
29A	VRS24750LA	PISTON, 7.5" DA CYLINDER, 2-PIECE ASSEMBLY, AL	1			1
30	VRC24751	RING, 7.5" PISTON	2		2	2
31	VRS24752	BAND, RIDER, 7.5" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.12 8.0-inch Double-acting Cylinder and Piston Parts

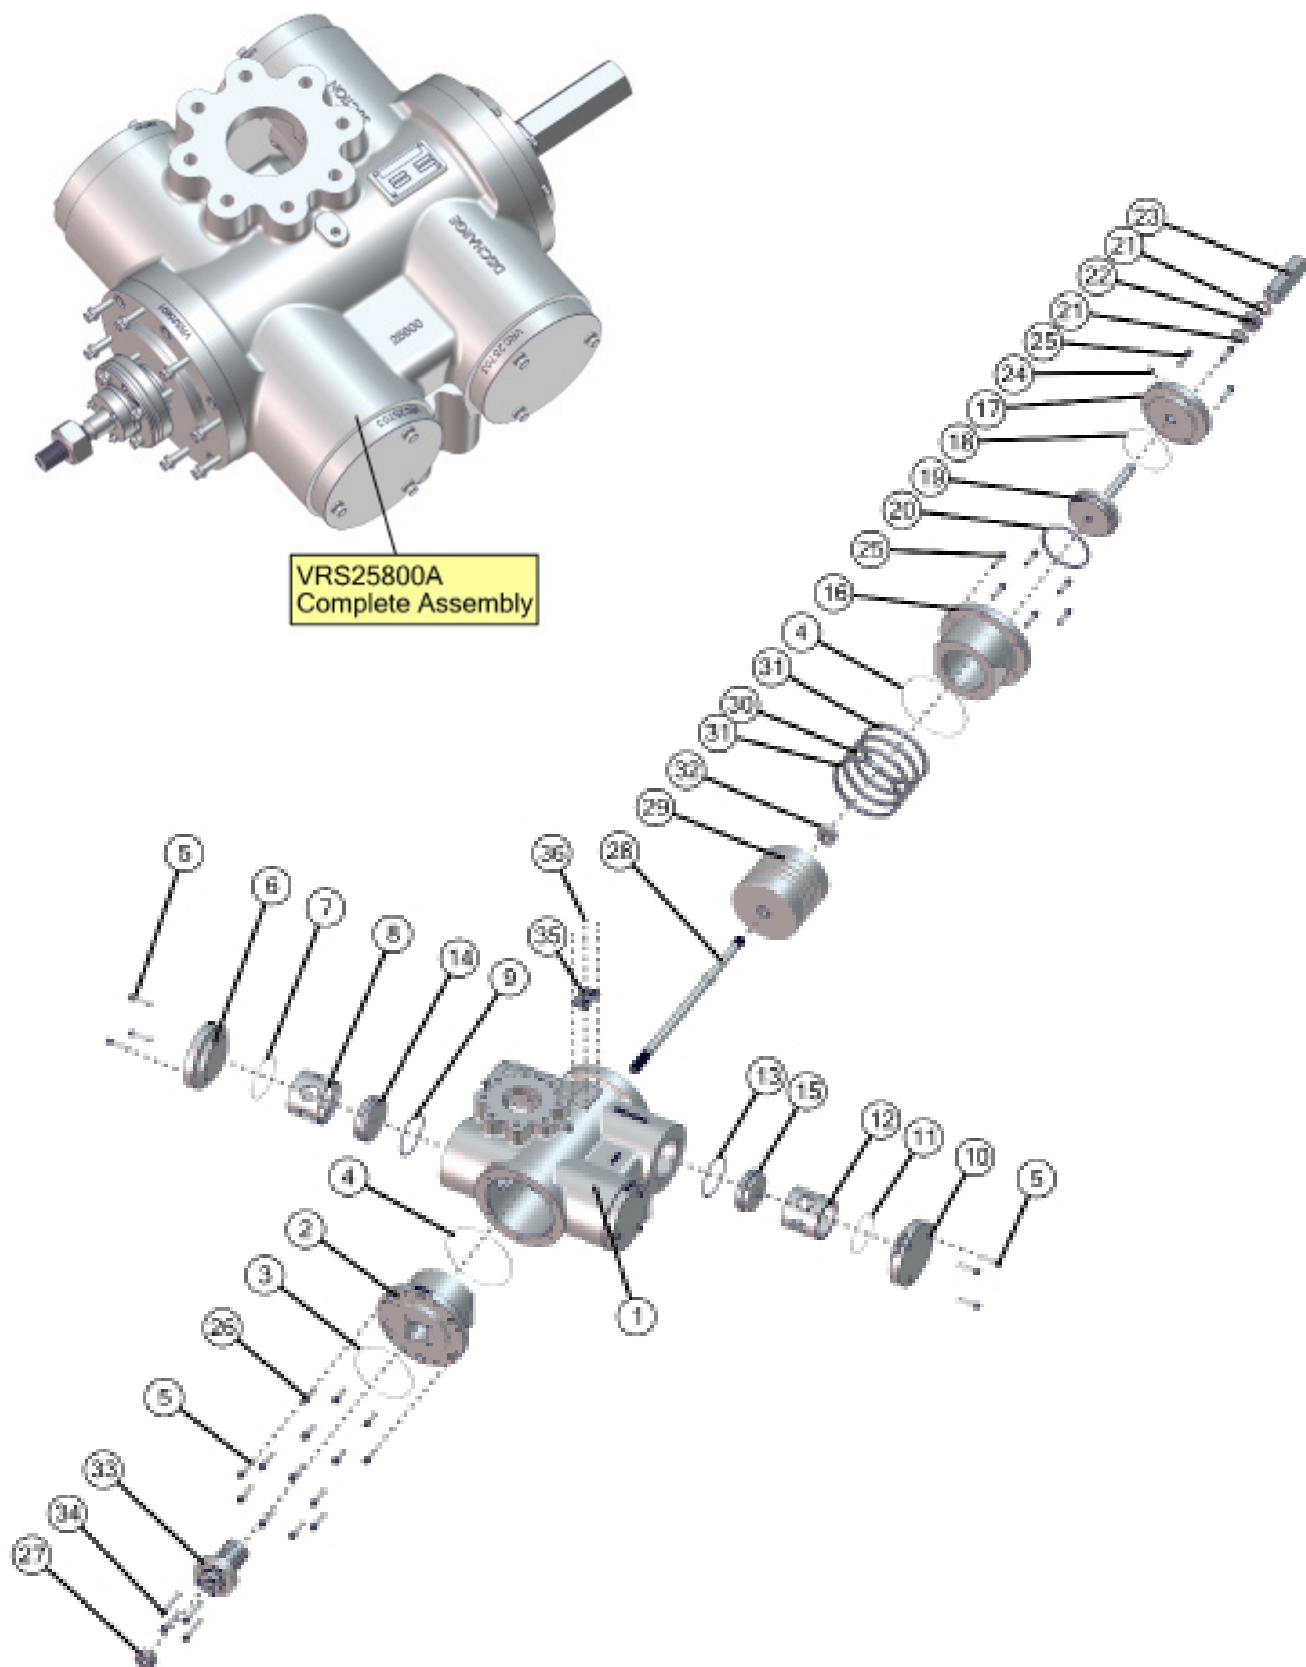

8.0-INCH DOUBLE-ACTING CYLINDER AND PISTON

NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25800A	CYLINDER, 8.0" DA, ASSEMBLY				
1	VRS25800	CYLINDER, 8.0" DA	1			
2	VRS25801	HEAD, CRANK END, 8.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25802	O-RING, HEAD, CRANK AND OUTER END, 8.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	20			
6	VRC25653	COVER, VALVE, SUCTION, 6.5"-8.5" VRC AND 7.5"-8.0" VRS	2			
7	VRC25654	O-RING, COVER, SUCTION VALVE, 6.5"-8.5" VRC, 7.5"-8.0" VRS	2	2	2	2
8	VRS25806	RETAINER, VALVE, SUCTION, 8.0" DA CYLINDER	2			
9	VRC25655	GASKET, SUCTION VALVE SEAT, 6.5"-8.5" VRC AND 7.5"-8.0" VRS	2	2	2	2
10	VRC25703	COVER, VALVE, DISCHARGE, 6.5"-8.5" VRC AND 7.5"-8.0" VRS	2			
11	VRC25704	O-RING, COVER, DISCHARGE VALVE, 6.5"-8.5" VRC, 7.5"-8.0" VRS	2	2	2	2
12	VRS25808	RETAINER, VALVE, DISCHARGE, 8.0" DA CYLINDER	2			
13	VRC25705	GASKET, DISCHARGE VALVE SEAT, 6.5"-8.5" VRC, 7.5"-8.0" VRS	2	2	2	2
14	VRS26815A	VALVE, SUCTION, 7.5"-8.0" CYLINDER, MEDIUM *	2	2		2
15	VRS26825A	VALVE, DISCHARGE, 7.5"-8.0" CYLINDER, MEDIUM *	2	2		2
16	VRC27801	POCKET, OUTER HEAD, 8.0" VVCP	1			
17	VRC27753	COVER, POCKET, 7.5"-8.0" VVCP	1			
18	VRC27754	O-RING, POCKET COVER, 7.5"-8.0" VVCP	1			1
19	VRC27757A	PISTON AND STEM ASSEMBLY, 7.5"-8.0" VVCP	1			1
20	VRC27758	RING, PISTON, 7.5"-8.0" VVCP	1			1
21	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
22	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
23	VRC27101	COVER, VVCP ADJUSTING STEM	1			
24	VRC27109	GREASE ZERK, VVCP	1			
25	VRC25017	SCREW, VALVE COVER AND VVCP	9			
26	VRC25007	SCREW, HEAD, CRANK-END	6			
27	VRC24909	NUT, JAM, PISTON ROD **	1			1
28	VRC24180	ROD, PISTON, 6.5"-8.0" PISTONS	1			1
29	VRS24800	PISTON, 8.0" DA CYLINDER, AL	1			1
29A	VRS24800LA	PISTON, 8.0" DA CYLINDER, 2-PIECE ASSEMBLY, AL	1			1
30	VRC24801	RING, 8.0" PISTON	2		2	2
31	VRS24802	BAND, RIDER 8.0" PISTON	2		2	2
32	VRC24919	NUT, PISTON	1			1
33	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
34	VRC23107	SCREW, PACKING CASE	4			
35	VRS25110	NAMEPLATE, VRS CYLINDER	1			
36	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

9.5-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25950A	CYLINDER, 9.5" DA, ASSEMBLY				
1	VRS25950	CYLINDER, 9.5" DA	1			
2	VRS25951	HEAD, CRANK-END, 9.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRS25952	O-RING, HEAD, CRANK AND OUTER END, 9.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	4			
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5, 7.0, 9.5 AND 10.0" CYL.	4	4	4	4
8	VRS25956	RETAINER, VALVE, SUCTION, 9.5" CYLINDER	4			
9	VRS25655	GASKET, SUCTION VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	4	4	4	4
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL.	4			
11	VRS25704	O-RING, COVER, DISCHARGE VALVE, 6.5", 7.0", 9.5", 10.0" CYL.	4	4	4	4
12	VRS25958	RETAINER, VALVE, DISCHARGE, 9.5" CYL	4			
13	VRS25705	GASKET, DISCHARGE VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	4	4	4	4
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	4	4		4
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	4	4		4
16	VRS27951	POCKET, OUTER HEAD, 9.5" VVCP	1			
17	VRS27953	COVER, POCKET, 9.5"-10.0" VVCP	1			
18	VRS27954	O-RING, POCKET COVER AND PISTON, 9.5"-10.0" VVCP	2			2
19	VRS27957A	PISTON AND STEM ASSEMBLY, 9.5"-10.0" VVCP	1			1
20	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
21	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
22	VRC27101	COVER, VVCP ADJUSTING STEM	1			
23	VRC27109	GREASE ZERK, VVCP	1			
24	VRC25017	SCREW, VALVE COVER AND VVCP	16			
25	VRC25007	SCREW, HEAD, CRANK-END	8			
26	VRC24909	NUT, JAM, PISTON ROD **	1			1
27	VRS24190	ROD, PISTON, 9.5"-10.0" VRS PISTONS	1			1
28	VRS24950A	PISTON, 9.5" DA CYLINDER, 2-PIECE ASSEMBLY AL	1			1
29	VRS24951	RING, 9.5" PISTON	2		2	2
30	VRS24952	BAND, RIDER, 9.5" PISTON	2		2	2
31	VRC24919	NUT, PISTON	1			1
32	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
33	VRC23107	SCREW, PACKING CASE	4			
34	VRS25110	NAMEPLATE, VRS CYLINDER	1			
35	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.

5.14 10.0-inch Double-acting Cylinder and Piston Parts

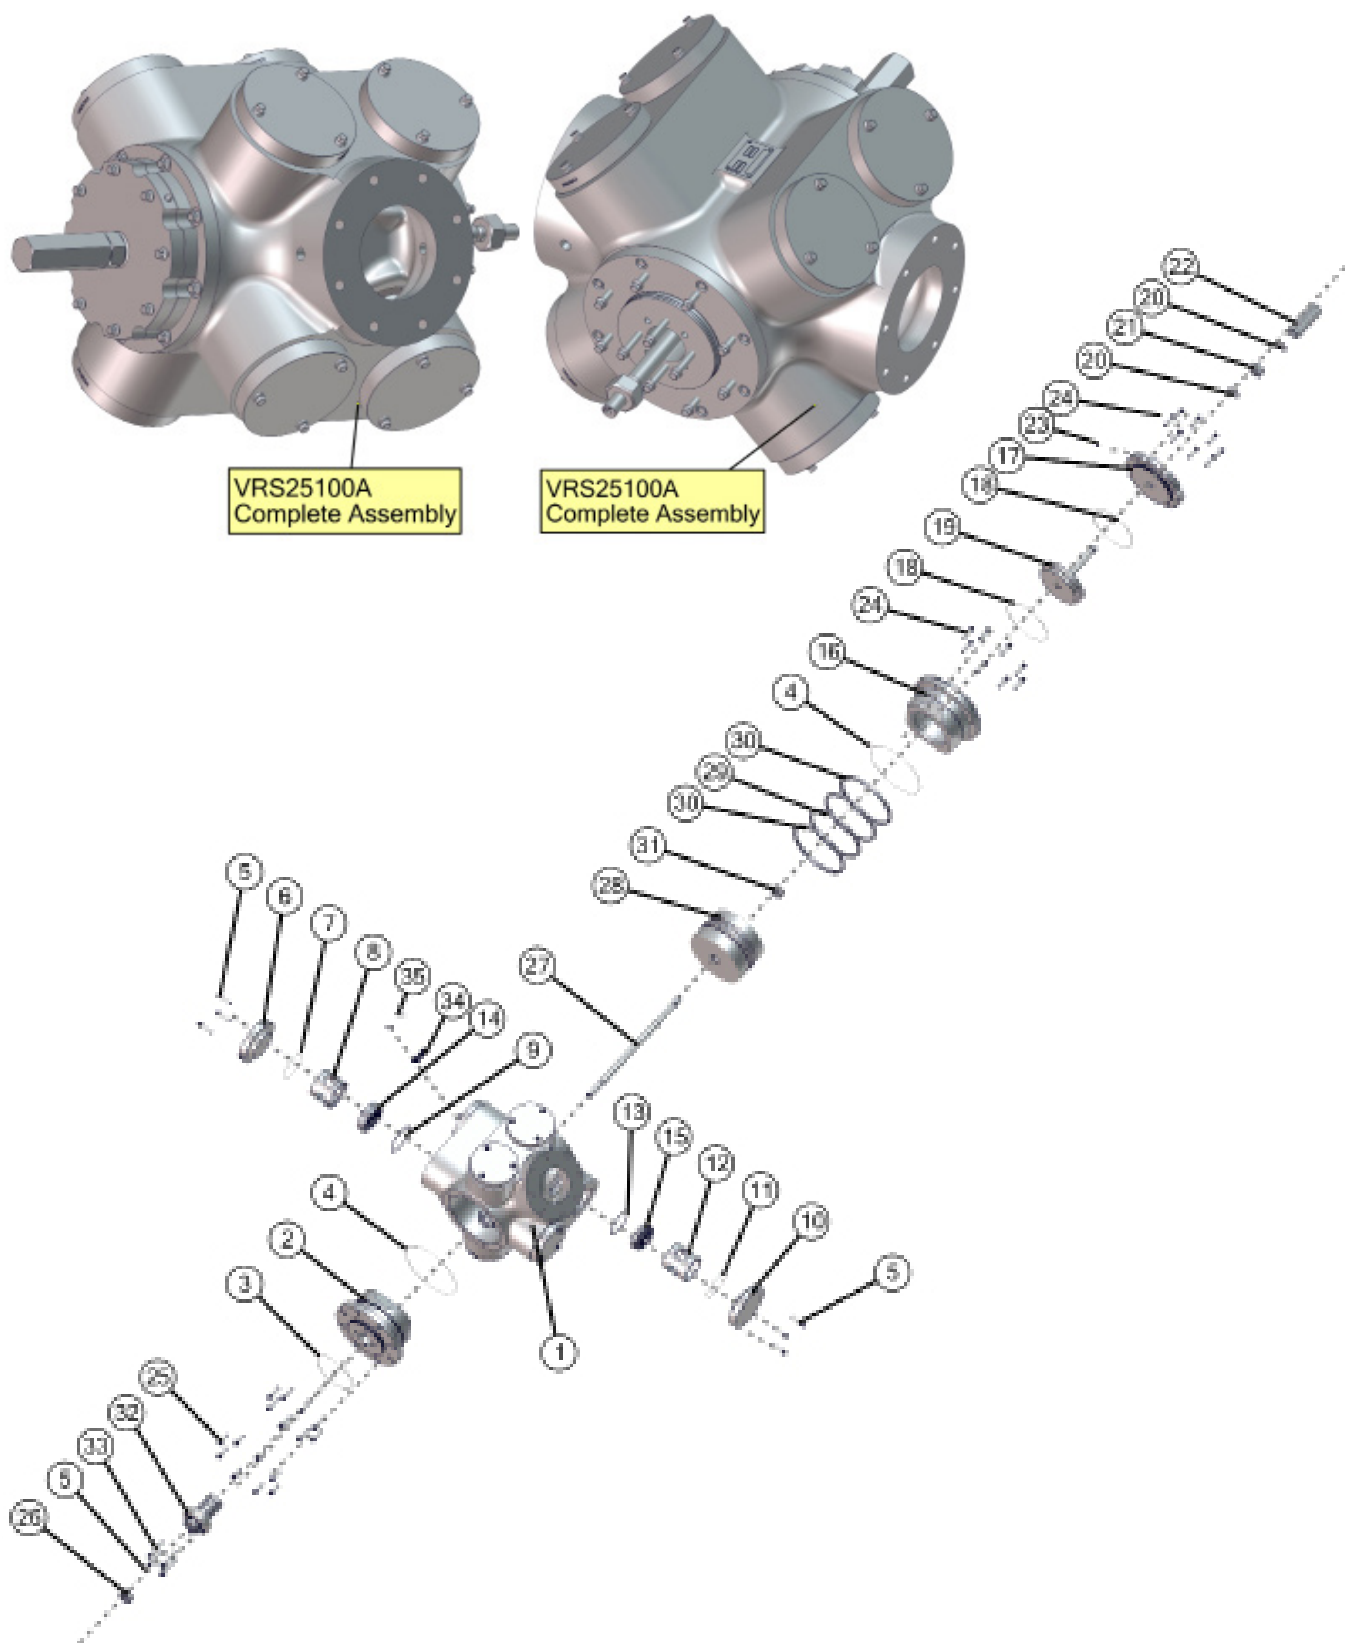

10.0-INCH DOUBLE-ACTING CYLINDER AND PISTON


NO.	PART NO.	DESCRIPTION	QTY.	REC. SPARE PARTS		
				6 MOS	1 YR	2 YRS
	VRS25100A	CYLINDER, 10.0" DA, ASSEMBLY				
1	VRS25100	CYLINDER, 10.0" DA	1			
2	VRS25101	HEAD, CRANK-END, 10.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRS25102	O-RING, HEAD, CRANK AND OUTER END, 10.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	4			
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5", 7.0", 9.5" AND 10.0" CYL.	4	4	4	4
8	VRS25106	RETAINER, VALVE, SUCTION, 10.0" DA CYLINDER	4			
9	VRS25655	GASKET, SUCTION VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	4	4	4	4
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL.	4			
11	VRS25704	O-RING, COVER, DISCHARGE VALVE, 6.5", 7.0", 9.5", 10.0" CYL.	4	4	4	4
12	VRS25108	RETAINER, VALVE, DISCHARGE, 10.0" DA CYLINDER	4			
13	VRS25705	GASKET, DISCHARGE VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	4	4	4	4
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	4	4		4
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYL., MEDIUM *	4	4		4
16	VRS27101	POCKET, OUTER HEAD, 10.0" VVCP	1			
17	VRS27953	COVER, POCKET, 9.5"-10.0" VVCP	1			
18	VRS27954	O-RING, POCKET COVER AND PISTON, 9.5"-10.0" VVCP	2			2
19	VRS27957A	PISTON AND STEM ASSEMBLY, 9.5"-10.0" VVCP	1			1
20	VRC27105	GASKET, VVCP ADJUSTING STEM COVER	2			
21	VRC27103	NUT, JAM, VVCP ADJUSTING STEM	1			
22	VRC27101	COVER, VVCP ADJUSTING STEM	1			
23	VRC27109	GREASE ZERK, VVCP	1			
24	VRC25017	SCREW, VALVE COVER AND VVCP	16			
25	VRC25007	SCREW, HEAD, CRANK-END	8			
26	VRC24909	NUT, JAM, PISTON ROD **	1			1
27	VRS24190	ROD, PISTON, 9.5"-10.0" VRS PISTONS	1			1
28	VRS24100A	PISTON, 10.0" DA CYLINDER, 2-PIECE ASSEMBLY, AL	1			1
29	VRS24101	RING, 10.0" PISTON	2		2	2
30	VRS24102	BAND, RIDER, 10.0" PISTON	2		2	2
31	VRC24919	NUT, PISTON	1			1
32	VRC23001A	CASE, PACKING, ASSEMBLY ***	1			1
33	VRC23107	SCREW, PACKING CASE	4			
34	VRS25110	NAMEPLATE, VRS CYLINDER	1			
35	VRC21606	PIN, NAMEPLATE	4			

* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.

** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.

*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.


5.15 Pressure Packing, Piston Rod for Double-acting Cylinders

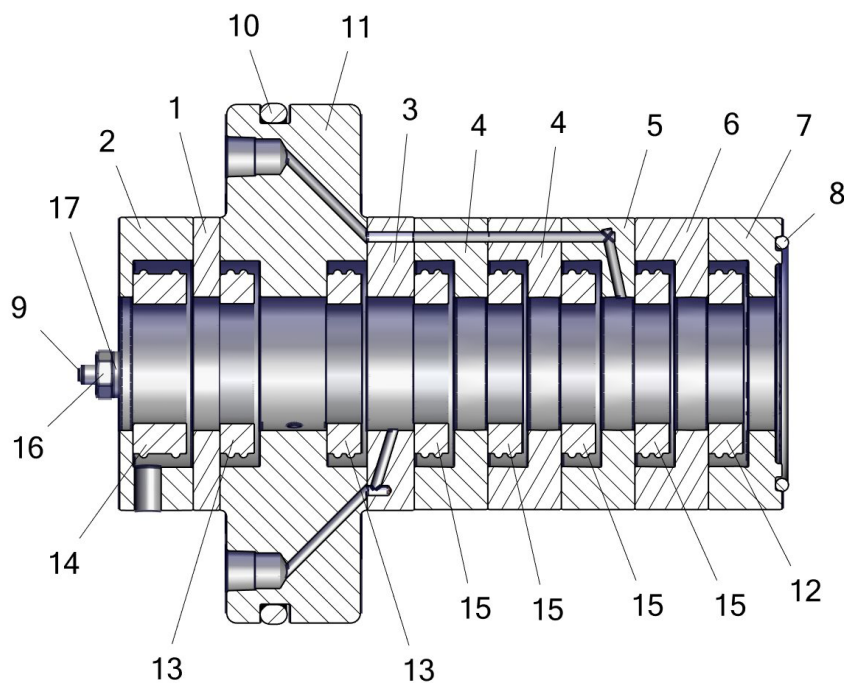

PISTON ROD PACKING CASE

NO.	PART NO.	DESCRIPTION	QTY.
	VRC23001A	CASE, PACKING ASSEMBLY	1
1	VRC23321	SPACER, PACKING CASE	1
2	VRC23351	CUP, PACKING, WIPER	1
3	VRC23311	SPACER, PRIMARY VENT	1
4	VRC23241	CUP, PACKING, CENTER	2
5	VRC23231	CUP, PACKING LUBE	1
6	VRC23221	CUP, PACKING, PLAIN	1
7	VRC23211	CUP, PACKING, BOTTOM	1
8	VRC23106	GASKET, WIRE, PACKING CASE NOSE	1
9	VRC23118	STUD, PACKING CASE	3
10	VRC23104	O-RING, PACKING CASE, MOUNTING FLANGE	1
11	VRC23201	FLANGE, PACKING CASE	1
12	VRC23411	RING, PACKING, PRESSURE BREAKER	1
13	VRC23431	RING, PACKING, DOUBLE-ACTING	2
14	VRC23441	RING, PACKING, WIPER	1
15	VRC23421	RING, PACKING, SINGLE-ACTING	4
16	VRC23109	NUT, LOCK, PACKING CASE STUD	3
17	VRC23115	WASHER, SEAL, PACKING CASE STUD	3

5.16 Piston Rod Pressure Packing Kits for Double-acting Cylinders

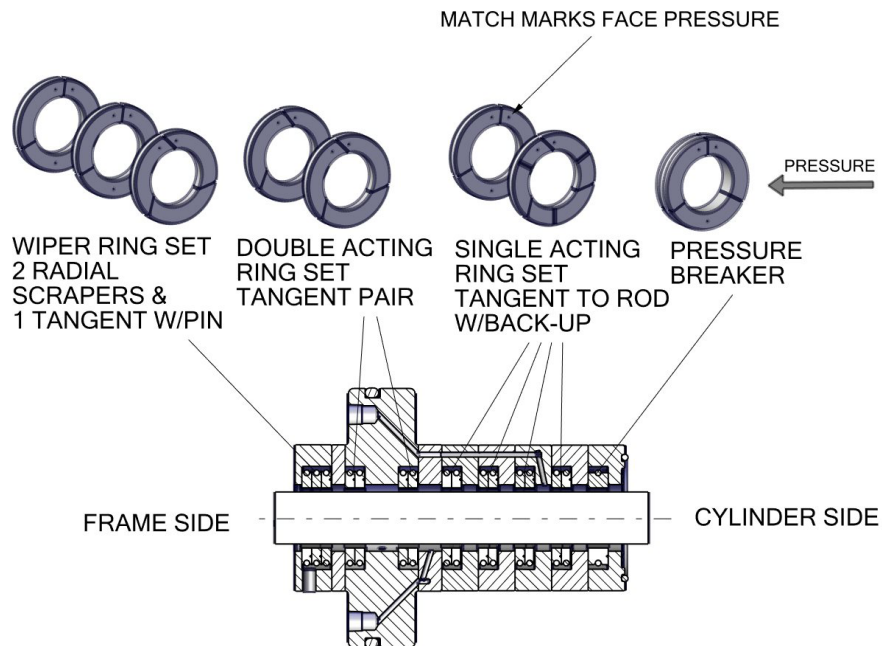

IMPORTANT: Packing rings are to be installed with the punch mark pointing toward the pressure side.

Frame Side			Pressure Side		
Wiper Ring (1) Set of (3) (VRC23441)					
Double-acting Ring Set (2) (VRC23431)					
Primary Vent					
Single-acting Ring Sets (3) (VRC23421)					
Oil Supply					
Single-acting Ring Set (1) (VRC23421)					
Pressure Breaker Ring (VRC23411)					

PISTON ROD PRESSURE PACKING KITS FOR DA AND STEEPLE CYLINDERS		
PART NO.	DESCRIPTION	QTY.
VRC23001A	CASE, PACKING ASSEMBLY, COMPLETE	1
VRC23501	RING KIT, PACKING RENEWAL WITH PARTS INCLUDE: O-RING, NOSE GAS-KET, NUTS AND WASHERS	1 (Kit)
VRC23551	RING KIT, PACKING RENEWAL RINGS ONLY	1 (Kit)

5.17 Cylinder O-ring and Gasket Kits – Double-acting Cylinder

CYLINDER O-RING AND GASKET KITS – DOUBLE-ACTING		
PART NO.	DESCRIPTION	QTY.
VRS25250K	O-RING AND GASKET KIT, 2.5-INCH DOUBLE-ACTING CYLINDER	1
VRS25300K	O-RING AND GASKET KIT, 3.0-INCH DOUBLE-ACTING CYLINDER	1
VRS25350K	O-RING AND GASKET KIT, 3.5-INCH DOUBLE-ACTING CYLINDER	1
VRS25400K	O-RING AND GASKET KIT, 4.0-INCH DOUBLE-ACTING CYLINDER	1
VRS25450K	O-RING AND GASKET KIT, 4.5-INCH DOUBLE-ACTING CYLINDER	1
VRS25500K	O-RING AND GASKET KIT, 5.0-INCH DOUBLE-ACTING CYLINDER	1
VRS25550K	O-RING AND GASKET KIT, 5.5-INCH DOUBLE-ACTING CYLINDER	1
VRS25600K	O-RING AND GASKET KIT, 6.0-INCH DOUBLE-ACTING CYLINDER	1
VRS25650K	O-RING AND GASKET KIT, 6.5-INCH DOUBLE-ACTING CYLINDER	1
VRS25700K	O-RING AND GASKET KIT, 7.0-INCH DOUBLE-ACTING CYLINDER	1
VRS25750K	O-RING AND GASKET KIT, 7.5-INCH DOUBLE-ACTING CYLINDER	1
VRS25800K	O-RING AND GASKET KIT, 8.0-INCH DOUBLE-ACTING CYLINDER	1
VRS25950K	O-RING AND GASKET KIT, 9.5-INCH DOUBLE-ACTING CYLINDER *	1
VRS25100K	O-RING AND GASKET KIT, 10.0-INCH DOUBLE-ACTING CYLINDER *	1
All double-acting cylinders o-rings and gasket kits include:		
2 – O-rings, head, crank and outer end		
1 – O-ring, head, crank-end to frame		
2 – O-rings, cover, suction valve		
2 – O-rings, cover, discharge valve		
2 – Gasket, suction valve seat		
2 – Gasket, discharge valve seat		
* Kits for 9.5” and 10.0” cylinders have 4 each valve cover O-rings and valve seat gaskets.		

5.18 VVCP Piston and Stem Assemblies

VVCP PISTON AND STEM ASSEMBLIES		
PART NO.	DESCRIPTION	QTY.
VRC27357A	PISTON AND STEM ASSEMBLY, 3.5"-4.0" VVCP	1
VRC27457A	PISTON AND STEM ASSEMBLY, 4.5"-5.0" VVCP	1
VRC27557A	PISTON AND STEM ASSEMBLY, 5.5"-6.0" VVCP	1
VRC27657A	PISTON AND STEM ASSEMBLY, 6.5"-7.0" VVCP	1
VRC27757A	PISTON AND STEM ASSEMBLY, 7.5"-8.0" VVCP	1
VRS27957A	PISTON AND STEM ASSEMBLY, 9.5"-10.0" VVCP	1
VVCP, piston and stem assembly includes: VVCP adjusting stem		Piston and piston ring * Spring pin
* Piston size is determined by VVCP size.		

5.19 Piston Rod Jam Nuts Used for Balancing


PISTON ROD JAM NUTS FOR BALANCING (RECIPROCATING WEIGHT)		
PART NO.	DESCRIPTION	QTY.
VRC24909	Nut, Jam, Piston Rod, Standard (0.83#)	1
VRC24949	Nut, Jam, Piston Rod, Heavy (3.66#) *	1
VRC24929	Nut, Jam, Piston Rod, Extra Heavy (5.81#) *	1
* Nut requires piston jam nut bar tool VRC29499.		

5.20 Double-acting Cylinder and Piston/Rod Assemblies

DA CYLINDER AND PISTON/ROD ASSEMBLIES (RECIPROCATING WEIGHT)		
PART NO.	DESCRIPTION	QTY.
Double-acting Cylinders		
2.5 AND 3.0-INCH DOUBLE-ACTING CYLINDER AND PISTON / ROD		
VRS25250A	CYLINDER, 2.5" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24250A-CI	PISTON AND ROD ASSEMBLY, 2.5" DA CYLINDER, CI	1
VRS25300A	CYLINDER, 3.0" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24300A	PISTON AND ROD ASSEMBLY, 3.0" DA CYLINDER, CI	1
3.5 AND 4.0-INCH DOUBLE-ACTING CYLINDER AND PISTON / ROD		
VRS25350A	CYLINDER, 3.5" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24350A-CI	PISTON AND ROD ASSEMBLY, 3.5" DA CYLINDER, CI	1
VRS25400A	CYLINDER, 4.0" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24400A-CI	PISTON AND ROD ASSEMBLY, 4.0" DA CYLINDER, CI	1
4.5 AND 5.0-INCH DOUBLE-ACTING CYLINDER AND PISTON / ROD		
VRS25450A	CYLINDER, 4.5" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24450A-CI	PISTON AND ROD ASSEMBLY, 4.5" DA CYLINDER, CI	1
VRS24455A-AL	PISTON AND ROD ASSEMBLY, 4.5" DA CYLINDER, AL	1
VRS25500A	CYLINDER, 5.0" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24500A-CI	PISTON AND ROD ASSEMBLY, 5.0" DA CYLINDER, CI	1
VRS24505A-AL	PISTON AND ROD ASSEMBLY, 5.0" CYLINDER, AL	1
5.5 AND 6.0-INCH DOUBLE-ACTING CYLINDER AND PISTON / ROD		
VRS25550A	CYLINDER, 5.5" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24550A-AL	PISTON AND ROD ASSEMBLY, 5.5" DA CYLINDER, AL	1
VRS25600A	CYLINDER, 6.0" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24600A-AL	PISTON AND ROD ASSEMBLY, 6.0" DA CYLINDER, AL	1
6.5 AND 7.0 DOUBLE-ACTING CYLINDER AND PISTON / ROD		
VRS25650A	CYLINDER, 6.5" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24650A-AL	PISTON AND ROD ASSEMBLY, 6.5" DA CYLINDER, AL	1
VRS25700A	CYLINDER, 7.0" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24700A-AL	PISTON AND ROD ASSEMBLY, 7.0" DA CYLINDER, AL	1
7.5 AND 8.0 DOUBLE-ACTING CYLINDER AND PISTON / ROD		
VRS25750A	CYLINDER, 7.5" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24750A-AL	PISTON AND ROD ASSEMBLY, 7.5" DA CYLINDER, AL	1
VRS25800A	CYLINDER, 8.0" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24800A-AL	PISTON AND ROD ASSEMBLY, 8.0" DA CYLINDER, AL	1
9.5 AND 10.0 DOUBLE-ACTING CYLINDER AND PISTON / ROD		
VRS25950A	CYLINDER, 9.5" DA, VRS COMPRESSOR ASSEMBLY	1
VRS24950A	PISTON AND ROD ASSEMBLY, 9.5" DA CYLINDER, AL	1
VRS25100A	CYLINDER, 10.0" DA, ASSEMBLY	1
VRS24100A	PISTON AND ROD ASSEMBLY, 10.0" DA CYLINDER, AL	1
All piston/rod assemblies include: Piston Piston rod Piston rings		
Rider band Piston nut Piston rod jam nut (standard)*		
* A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.		


6 STEEPLE CYLINDER AND PISTON

6.1 2.5 X 1.375-inch Steeple Cylinder Parts

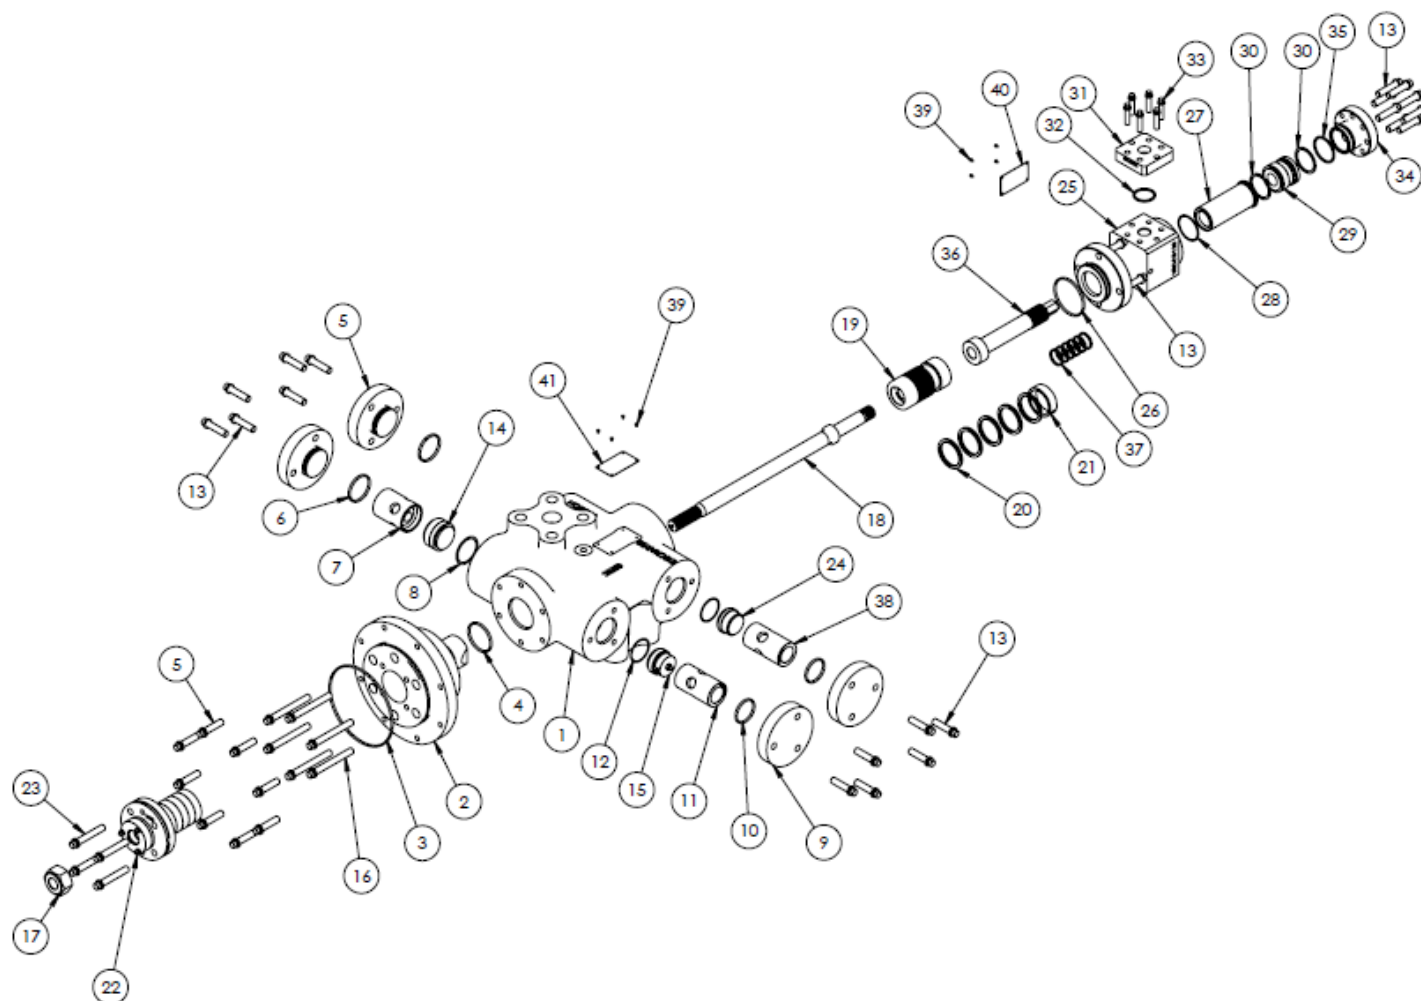


2.5 X 1.375 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
1	VRC25260	CYLINDER, 2.5" SACE, MODIFIED HEAD	1			
2	VRS25251	HEAD, CRANK END, 2.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1			
4	VRC25252	O-RING, HEAD, 2.5-INCH CYLINDER	1			
5	VRC25253	COVER, VALVE, SUCTION, 2.5-3.0" CYLINDER	2			
6	VRC25254	O-RING, COVER, SUCTION VALVE, 2.5-3.0" CYLINDER	2			
7	VRC25256SP	RETAINER, VALVE, SUCTION, 2.5" SP CYLINDER	1			
8	VRC25255	GASKET, SUCTION VALVE SEAT, 2.5-3.0" CYLINDER	1			
9	VRC25303	COVER, VALVE, DISCHARGE, 2.5-3.0" CYLINDER	2			
10	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.5-3.0" CYLINDER	2			
11	VRC25258SP	RETAINER, VALVE, DISCHARGE, 2.5" SP CYLINDER	1			
12	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.5-3.0" CYLINDER	2			
13	VRC25077	SCREW 12-POINT 1/2 - 13 X 2	32			
14	VRS26335A	VALVE, SUCTION, 2.5-3.0" CYLINDER, PC, MEDIUM	1			
15	VRS26347A	VALVE, DISCHARGE, 2.5-3.0" CYLINDER, PC, HEAVY	1			
16	VRC25087	SCREW 12-POINT 1/2 - 13 X 4-1/4	6			
17	VRC24909	NUT, JAM, PISTON ROD	1			
18	VRC24130	ROD, PISTON, 2.5 - 3.0" PISTONS	1			
19	VRC24259	PISTON, 2.5" SACE X 1.375" SAHE STEEPLE CYLINDER, CI	1			
20	VRS24251	RING, 2.5-INCH PISTON	5			
21	VRC24252	BAND, RIDER, 2.5-INCH PISTON	1			
22	VRC23001A	CASE, PACKING, ASSEMBLY	1			
23	VRC23107	SCREW 12-POINT 1/2 - 13 X 3	4			
24	VRC26399	BLANK, VALVE, DISCHARGE, 2.25-3.0" SACE CYLINDER	1			
25	VRCC5120	CYLINDER, STEEPLE, 1.125 - 1.375	1			
26	VRC25504	O-RING, 3.250 OD .125 W	1			
27	VRCC5141	LINER, CYLINDER 1.375" SAHE	1			
28	VRCC5122	GASKET, LINER, CYLINDER, 1.125 - 1.375	1			
29	VRCC6125A	VALVE, CONCENTRIC, 1.125 - 1.375	1			
30	VRCC5125	GASKET, VALVE SEAT AND TOP, 1.125 - 1.375	2			
31	VRCC5126	FLANGE, SUCTION, 3/4" NPT, 1.125 - 1.375	1			
32	VRCC5127	O-RING, SUCTION FLANGE, 1.125 - 1.375	1			
33	VRC28257	SCREW 12-POINT 3/8 - 16 X 1-1/2	6			
34	VRCC5128	FLANGE/RTR, DISCHARGE, 3/4" NPT, 1.125 - 1.375	1			
35	VRCC5124	O-RING, WITH PARBAK, DISCHARGE FLANGE, 1.125 - 1.375	1			
36	VRCC4140	PISTON, CNG, 1.375" SAHE	1			
37	VRCC4141	RING, 1.375" CNG PISTON, BUTT CUT	6			
38	VRC25258	RETAINER, VALVE, DISCHARGE, 2.5" DA CYLINDER	1			
39	VRC21606	PIN, NAMEPLATE	8			
40	VRCC5100	NAMEPLATE, VRC-CNG CYLINDER	1			
41	VRS25110	NAMEPLATE, VRS CYLINDER	1			

6.2 3.0 X 1.375-inch Steeple Cylinder Parts

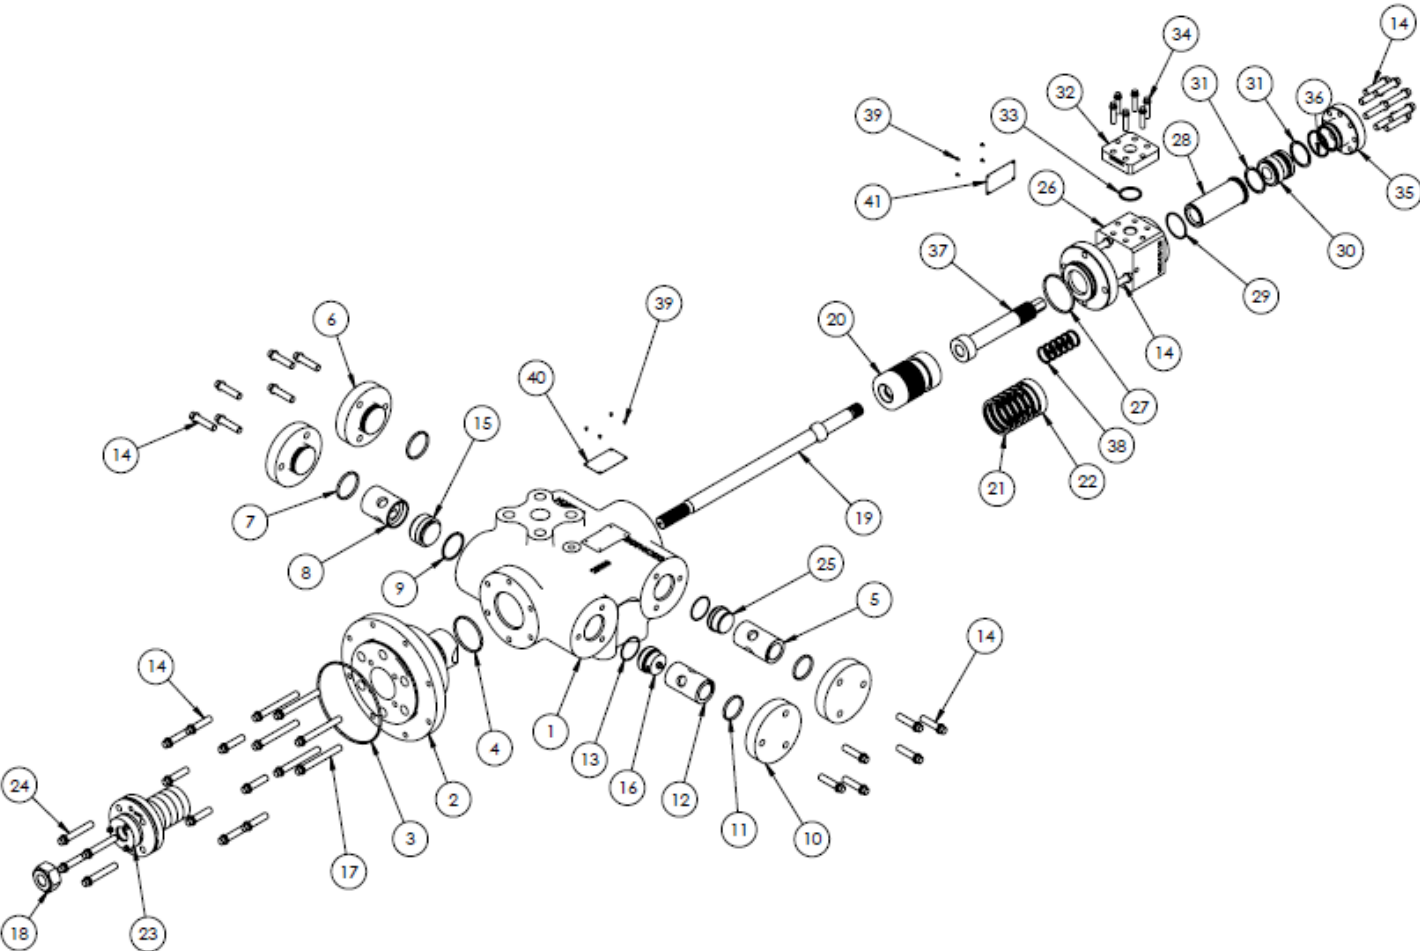

3.0 X 1.375 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
1	VRC25310	CYLINDER, 3.0" SACE, MODIFIED HEAD	1			
2	VRS25301	MACHINING, HEAD, CRANK END, 3.0" CYL	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1			
4	VRC25302	O-RING,HEAD, 3.0-INCH CYLINDER	1			
5	VRC25308	RETAINER, VALVE, DISCHARGE, 3.0" DA CYLINDER	1			
6	VRC25253	COVER, VALVE, SUCTION, 2.5-3.0" CYLINDER	2			
7	VRC25254	O-RING, COVER, SUCTION VALVE, 2.5-3.0" CYLINDER	2			
8	VRC25306SP	RETAINER, VALVE, SUCTION, 3.0" SP CYLINDER	1			
9	VRC25255	GASKET, SUCTION VALVE SEAT, 2.5-3.0" CYLINDER	1			
10	VRC25303	COVER, VALVE, DISCHARGE, 2.5-3.0" CYLINDER	2			
11	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.5-3.0" CYLINDER	2			
12	VRC25308SP	RETAINER, VALVE, DISCHARGE, 3.0" SP CYLINDER	1			
13	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.5-3.0" CYLINDER	2			
14	VRC25077	SCREW 12-POINT 1/2 - 13 X 2	32			
15	VRS26335A	VALVE, SUCTION,2.5-3.0" CYLINDER, PC, MEDIUM	1			
16	VRS26347A	VALVE, DISCHARGE, 2.5-3.0" CYLINDER, PC, HEAVY	1			
17	VRC25087	SCREW 12-POINT 1/2 - 13 X 4-1/4	6			
18	VRC24909	NUT, JAM, PISTON ROD	1			
19	VRC24130	ROD, PISTON, 2.5 - 3.0" PISTONS	1			
20	VRC24312	PISTON, 3.0" SACE X 1.375" SAHE STEEPLE CYLINDER, CI	1			
21	VRS24301	RING, 3.0-INCH PISTON	5			
22	VRC24302	BAND, RIDER, 3.0-INCH PISTON	1			
23	VRC23001A	CASE, PACKING, ASSEMBLY	1			
24	VRC23107	SCREW 12-POINT 1/2 - 13 X 3	4			
25	VRC26399	BLANK, VALVE, DISCHARGE, 2.25-3.0" SACE CYLINDER	1			
26	VRCC5120	CYLINDER,STEEPLE, 1.125 - 1.375	1			
27	VRC25504	O-RING, 3.250 OD .125 W	1			
28	VRCC5141	LINER, CYLINDER 1.375" SAHE	1			
29	VRCC5122	GASKET, LINER, CYLINDER, 1.125 - 1.375	1			
30	VRCC6125A	VALVE, CONCENTRIC, 1.125 - 1.375	1			
31	VRCC5125	GASKET,VALVE SEAT AND TOP, 1.125 - 1.375	2			
32	VRCC5126	FLANGE, SUCTION, 3/4" NPT, 1.125 - 1.375	1			
33	VRCC5127	O-RING, SUCTION FLANGE, 1.125 - 1.375	1			
34	VRC28257	SCREW 12-POINT 3/8 - 16 X 1-1/2	6			
35	VRCC5128	FLANGE/RTR, DISCHARGE, 3/4" NPT, 1.125 - 1.375	1			
36	VRCC5124	O-RING, WITH PARBAK, DISCHARGE FLANGE, 1.125 - 1.375	1			
37	VRCC4140	PISTON, CNG, 1.375" SAHE	1			
38	VRCC4141	RING,1.375" CNG PISTON, BUTT CUT	6			
39	VRC21606	PIN, NAMEPLATE	8			
40	VRS25110	NAMEPLATE, VRS CYLINDER	1			
41	VRCC5100	NAMEPLATE, VRC-CNG CYLINDER	1			


6.3 3.5 X 2.25-inch Steeple Cylinder Parts

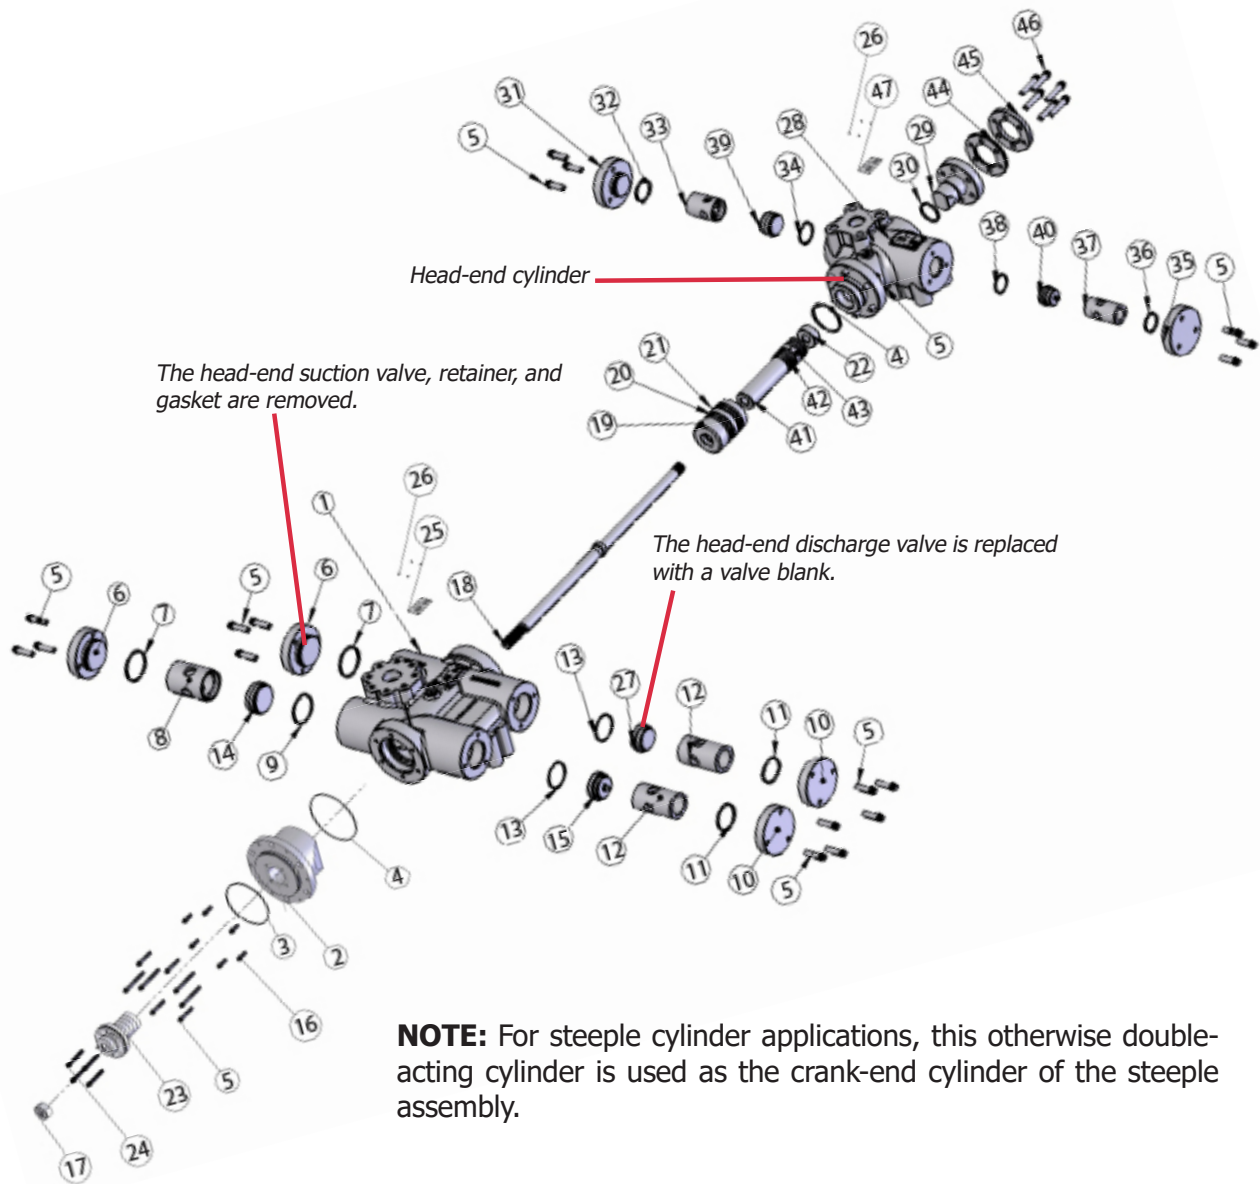

3.5 X 2.25 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25121A	CYLINDER, STEEPLE, 2.25" SAHE X 3.5" SACE, ASSEMBLY				
1	VRS25350	CYLINDER, 3.5" DA	1			
2	VRS25351	HEAD, CRANK END, 3.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25352	O-RING, HEAD, CRANK AND OUTER END, 3.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
7	VRC25354	O-RING, COVER, SUCTION VALVE, 3.5"-4.0" CYLINDER	2	2	2	2
8	VRS25356	RETAINER, VALVE, SUCTION, 3.5" DA CYLINDER	1			

3.5 X 2.25 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25355	GASKET, SUCTION VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1	1	1	1
10	VRC25403	COVER, VALVE, DISCHARGE, 3.5-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
11	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
12	VRS25358	RETAINER, VALVE, DISCHARGE, 3.5" DA CYLINDER	2			
13	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
14	VRS26415A	VALVE, SUCTION, 3.5"-4.0" CYLINDER MEDIUM *	1	1		1
15	VRS26425A	VALVE, DISCHARGE, 3.5"-4.0" CYLINDER MEDIUM *	1	1		1
16	VRC25047	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24112	ROD, PISTON, 2.25" SAHE X 3.5-4.0" SACE	1			1
19	VRC24359	PISTON, 3.5" SACE STEEPLE CYLINDER, CI	1			1
20	VRC24351	RING, 3.5" PISTON	4		4	4
21	VRC24352	BAND, RIDER, 3.5" PISTON	1		1	1
22	VRC24911	NUT, PISTON, 2.25" SAHE STEEPLE	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26499	BLANK, VALVE, DISCHARGE 3.5"-4.0" SACE CYLINDER	1			
28	VRC25121	CYLINDER, STEEPLE, 2.25" SAHE X 3.5" SACE	1			
29	VRC27121	HEAD, 2.25" SAHE CYLINDER	1			
30	VRC27124	O-RING, HEAD, CRANK-END, 2.25" SAHE CYLINDER	1	1	1	1
31	VRC25253	COVER, VALVE, SUCTION, 2.25"-3.0" CYLINDER	1			
32	VRC25254	O-RING, COVER, SUCTION VALVE, 2.25"-3.0" CYLINDER	1	1	1	1
33	VRC25256	RETAINER, VALVE, SUCTION, 2.5" DA AND 2.25" SAHE CYLINDER	1			
34	VRC25255	GASKET, SUCTION VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
35	VRC25303	COVER, VALVE, DISCHARGE, 2.25"-3.0" CYLINDER	1			
36	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.25"-3.0" CYLINDER	1	1	1	1
37	VRC25258	RETAINER, VALVE, DISCHARGE, 2.5" DA AND 2.25" SAHE CYLINDER	1			
38	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
39	VRC26015A	VALVE, SUCTION, 2.25" AND 2.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26025A	VALVE, DISCHARGE, 2.25" AND 2.5" SAHE CYLINDER MEDIUM *	1	1		1
41	VRC24210	PISTON, 2.25" SAHE X 3.5"-4.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24211	RING, 2.25" PISTON	4		4	4
43	VRC24212	BAND, RIDER, 2.25" PISTON	1		1	1
44	VRC27126	SPACER, 2.25"-2.5" SAHE HEAD, 1/4"	1			
45	VRC27127	SPACER, 2.25"-2.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.4 4.0 X 2.25-inch Steeple Cylinder Parts

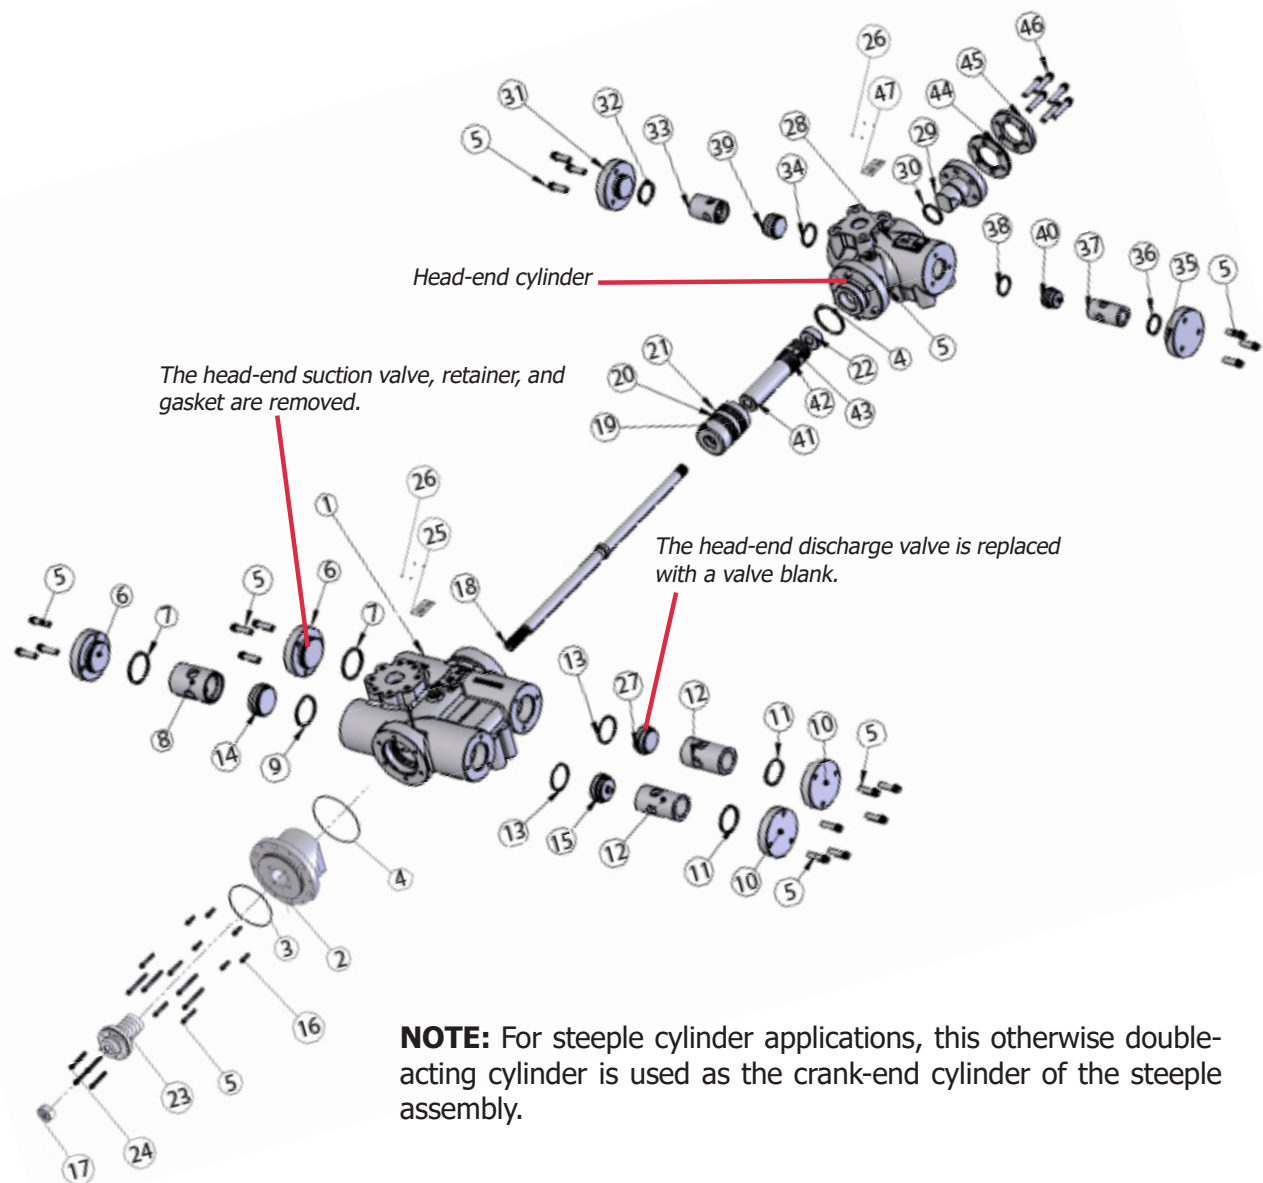

4.0 X 2.25 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25122A	CYLINDER, STEEPLE, 2.25" SAHE X 4.0" SACE ASSEMBLY				
1	VRS25400	CYLINDER, 4.0" DA	1			
2	VRS25401	HEAD, CRANK END, 4.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25402	O-RING, HEAD, CRANK AND OUTER END, 4.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRC25037	SCREW, CYLINDER TO FRAME LONG AND CE HEAD, 12-POINT	2			
7	VRC25353	COVER, VALVE, SUCTION 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
8	VRC25354	O-RING, COVER, SUCTION VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
9	VRS25406	RETAINER, VALVE, SUCTION, 4.0" DA CYLINDER	1			1

4.0 X 2.25 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
10	VRC25355	GASKET, SUCTION VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1	1	1	1
11	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
12	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	2	2	2	2
13	VRS25408	RETAINER, VALVE, DISCHARGE, 4.0" DA CYLINDER	2			
14	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5-4.0" CYLINDER, 3.0"-3.5" SAHE	2	2	2	2
15	VRC25077	SCREW, VALVE COVER, 12-POINT	24			
16	VRS26415A	VALVE, SUCTION, 3.5"-4.0" CYLINDER MEDIUM *	1	1		1
17	VRS26425A	VALVE, DISCHARGE, 3.5"-4.0" CYLINDER MEDIUM *	1	1		1
18	VRC25047	SCREW, HEAD, CRANK-END, 12-POINT	6			
19	VRC24909	NUT, JAM, PISTON ROD **	1			1
20	VRC24112	ROD, PISTON, 2.25" SAHE X 3.5"-4.0" SACE	1			1
21	VRC24409	PISTON, 4.0" SACE STEEPLE CYLINDER, CI	1			1
22	VRC24401	RING, 4.0" PISTON	4		4	4
23	VRC24402	BAND, RIDER, 4.0" PISTON	1		1	1
24	VRC24911	NUT, PISTON 2.25" SAHE, STEEPLE	1			1
25	VRC23001A	CASE, PACKING ASSEMBLY ***	1		1	
26	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
27	VRS25110	NAMEPLATE, VRS CYLINDER	1			
28	VRC21606	PIN, NAMEPLATE	8			
29	VRS26499	BLANK, VALVE, DISCHARGE 3.5"-4.0" SACE CYLINDER	1			
30	VRC25122	CYLINDER, STEEPLE, 2.25" SAHE X 4.0" SACE	1			
31	VRC27121	HEAD, 2.25" SAHE CYLINDER	1			
32	VRC27124	O-RING, HEAD, 2.25" SAHE CYLINDER	1	1	1	1
33	VRC25253	COVER, VALVE, SUCTION, 2.25"-3.0" CYL	1			
34	VRC25254	O-RING, COVER, SUCTION VALVE, 2.25"-3.0" CYLINDER	1	1	1	1
35	VRC25256	RETAINER, VALVE, SUCTION, 2.5" DA AND 2.25" SAHE CYLINDER	1			
36	VRC25255	GASKET, SUCTION VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
37	VRC25303	COVER, VALVE, DISCHARGE, 2.25"-3.0" CYLINDER	1			
38	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.25"-3.0" CYLINDER	1	1	1	1
39	VRC25258	RETAINER, VALVE, DISCHARGE, 2.5" DA AND 2.25" SAHE CYL	1			
40	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
41	VRC26015A	VALVE, SUCTION, 2.25" AND 2.5" SAHE CYLINDER MEDIUM *	1	1		1
42	VRC26025A	VALVE, DISCHARGE, 2.25" AND 2.5" SAHE CYLINDER MEDIUM *	1	1		1
43	VRC24210	PISTON, 2.25" SAHE X 3.5"-4.0" SACE STEEPLE CYLINDER, AL	1			1
44	VRC24211	RING, 2.25" PISTON	4		4	4
45	VRC24212	BAND, RIDER, 2.25" PISTON	1		1	1
46	VRC27126	SPACER, 2.25"-2.5" SAHE HEAD, 1/4"	1			
47	VRC27127	SPACER, 2.25"-2.5" SAHE HEAD, 1/2"	1			
48	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
49	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						

6.5 4.5 X 2.5-inch Steeple Cylinder Parts

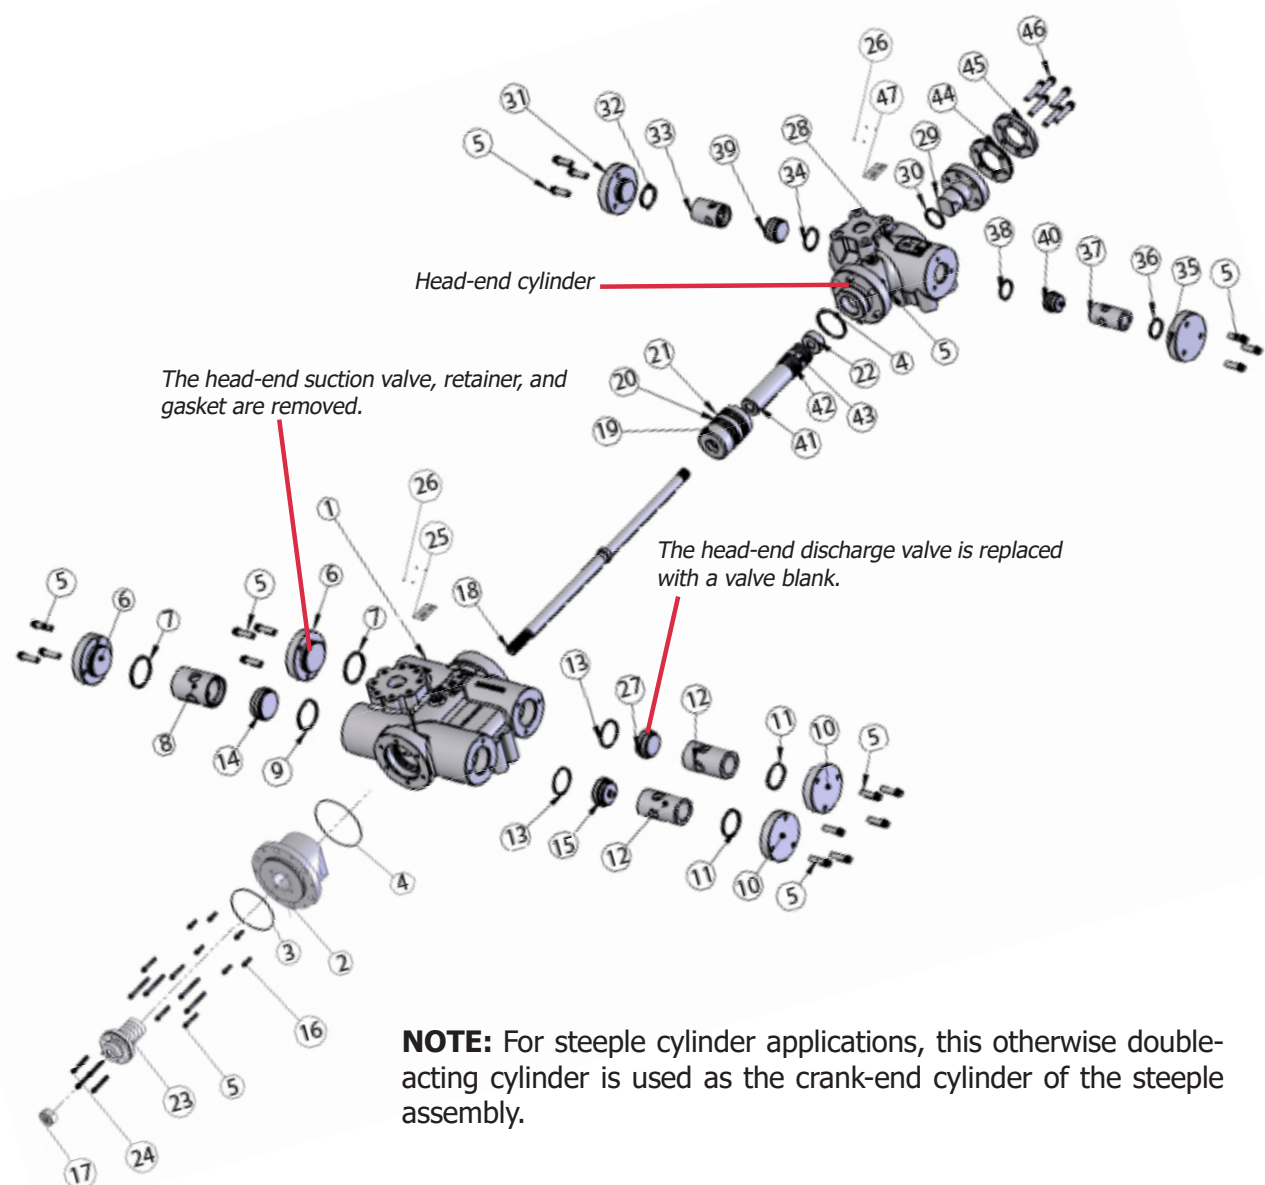


NOTE: For steeple cylinder applications, this otherwise double-acting cylinder is used as the crank-end cylinder of the steeple assembly.

4.5 X 2.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25124A	CYLINDER, STEEPLE, 2.5" SAHE X 4.5" SACE ASSEMBLY				
1	VRS25450	CYLINDER, 4.5" DA	1			
2	VRS25451	HEAD, CRANK END, 4.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25452	O-RING, HEAD, CRANK AND OUTER END, 4.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER	2			
7	VRC25454	O-RING, COVER, SUCTION VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25456	RETAINER, VALVE, SUCTION, 4.5" DA CYLINDER	1			
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	1	1	1	1

4.5 X 2.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
10	VRS25503	COVER, VALVE, DISCHARGE, 4.5"-5.0" CYLINDER	2			
11	VRC25504	O-RING, COVER, DISCHARGE VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25458	RETAINER, VALVE, DISCHARGE, 4.5" DA CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
16	VRC23107	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24111	ROD, PISTON, 2.5" SAHE X 4.5"-5.0" SACE	1			1
19	VRC24459	PISTON, 4.5" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24451	RING, 4.5" PISTON	4		4	4
21	VRC24452	BAND, RIDER, 4.5" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26599	BLANK, VALVE, DISCHARGE 4.5"-5.0" SACE CYLINDER	1			
28	VRC25124	CYLINDER, STEEPLE, 2.5" SAHE X 4.5" SACE	1			
29	VRC27125	HEAD, 2.5" SAHE CYLINDER	1			
30	VRC25252	O-RING, HEAD, CRANK-END, 2.5" SAHE CYLINDER	1	1	1	1
31	VRC25253	COVER, VALVE, SUCTION, 2.25"-3.0" CYLINDER	1			
32	VRC25254	O-RING, COVER, SUCTION VALVE, 2.25"-3.0" CYLINDER	1	1	1	1
33	VRC25161	RETAINER, VALVE, SUCTION, 2.5" SAHE CYLINDER	1			
34	VRC25255	GASKET, SUCTION VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
35	VRC25303	COVER, VALVE, DISCHARGE, 2.25"-3.0" CYLINDER	1			
36	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.25"-3.0" CYLINDER	1	1	1	1
37	VRC25181	RETAINER, VALVE, DISCHARGE, 2.5" SAHE CYLINDER	1			
38	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
39	VRC26015A	VALVE, SUCTION, 2.25" AND 2.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26025A	VALVE, DISCHARGE, 2.25" AND 2.5" SAHE CYLINDER MEDIUM *	1	1		1
41	VRC24215	PISTON, 2.5" SAHE X 4.5"-5.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24251	RING, 2.5" PISTON	4		4	4
43	VRC24252	BAND, RIDER, 2.5" PISTON	1		1	1
44	VRC27126	SPACER, 2.25"-2.5" SAHE HEAD, 1/4"	1			
45	VRC27127	SPACER, 2.25"-2.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.6 4.5 X 3.0-inch Steeple Cylinder Parts

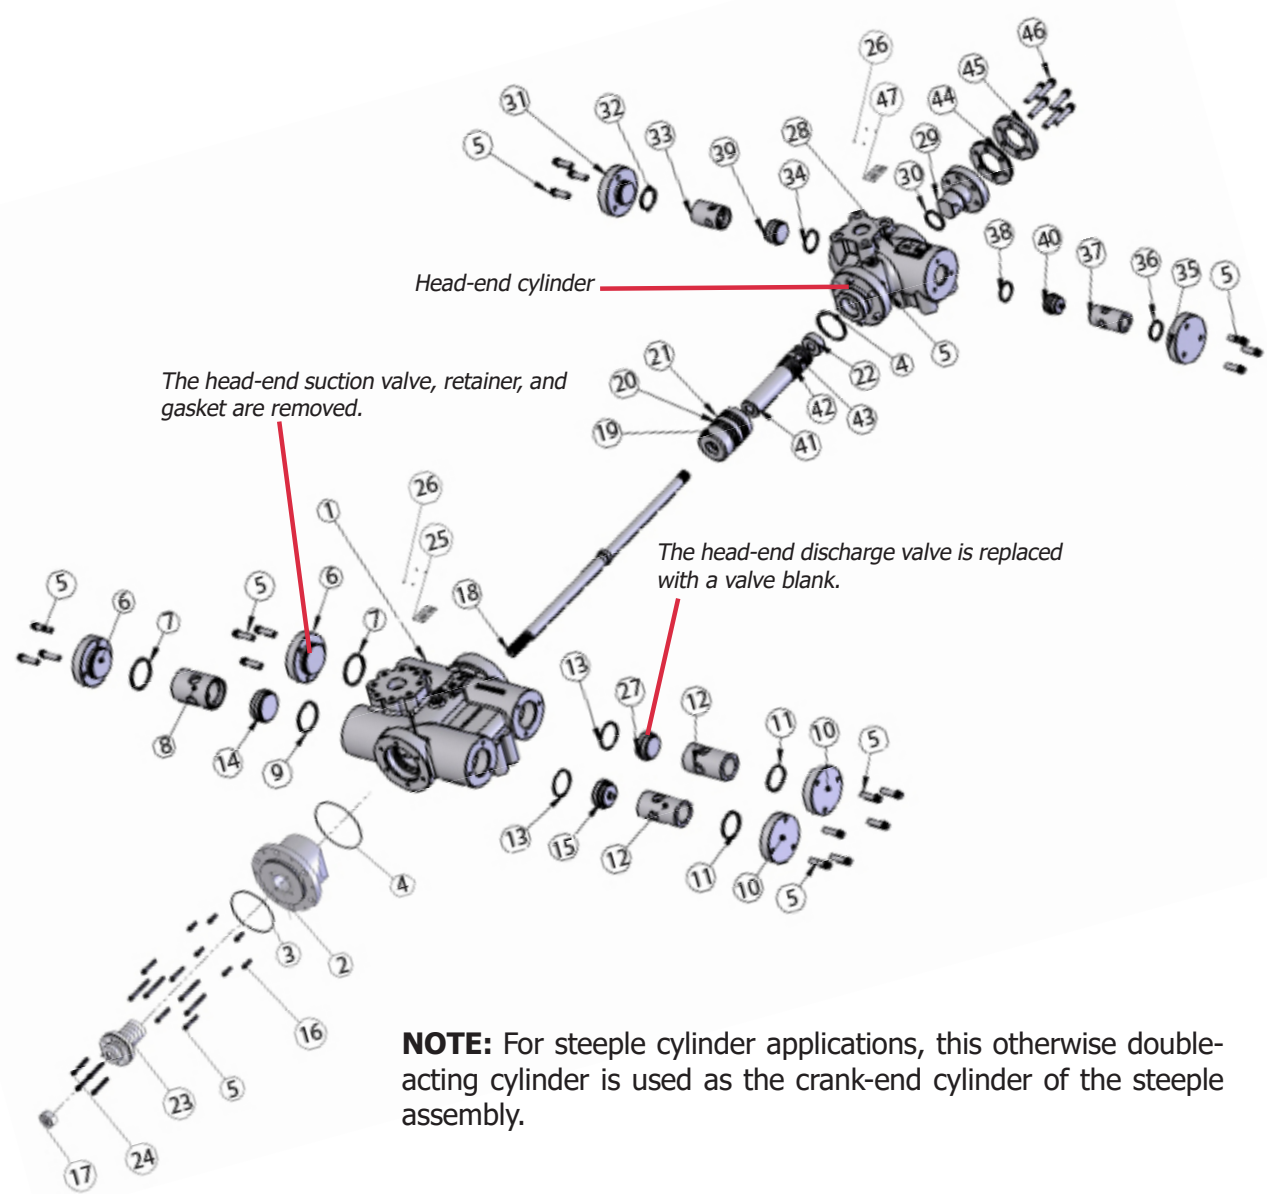

4.5 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25131A	CYLINDER, STEEPLE, 3.0" SAHE X 4.5" SACE ASSEMBLY				
1	VRS25450	CYLINDER, 4.5" DA	1			
2	VRS25451	HEAD, CRANK END, 4.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25452	O-RING, HEAD, CRANK AND OUTER END, 4.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER	2			
7	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25456	RETAINER, VALVE, SUCTION 4.5" DA CYLINDER	1			

4.5 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	1	1	1	1
10	VRS25503	COVER, VALVE, DISCHARGE 4.5"-5.0" CYLINDER	2			
11	VRC25504	O-RING, COVER, DISCHARGE, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25458	RETAINER, VALVE, DISCHARGE, 4.5" DA CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
16	VRC23107	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24113	ROD, PISTON, 3.0"-3.5" SAHE X 4.5"-5.0" SACE	1			1
19	VRC24459	PISTON, 4.5" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24451	RING, 4.5" PISTON	4		4	4
21	VRC24452	BAND, RIDER, 4.5" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26599	BLANK, VALVE, DISCHARGE, 4.5"-5.0" SACE CYLINDER	1			
28	VRC25131	CYLINDER, STEEPLE, 3.0" SAHE X 4.5" SACE	1			
29	VRC27131	HEAD, 3.0" SAHE CYLINDER	1			
30	VRC25302	O-RING, HEAD, CRANK OUTER END AND 3.0" SAHE CYLINDER	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1			
32	VRC25354	O-RING, COVER, SUCTION VALVE 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
33	VRC25160	RETAINER, VALVE, SUCTION, 3.0" SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION, VALVE SEAT, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" DA, 3.0"-3.5" SAHE	1	1	1	1
37	VRC25180	RETAINER, VALVE, DISCHARGE, 3.0" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0"-3.5" SAHE CYLINDER, MEDIUM *	1	1		1
40	VRC26123A	VALVE, DISCHARGE, 3.0" MEDIUM AND 3.5" LIGHT SAHE CYL. *	1	1		1
41	VRC24310	PISTON, 3.0" SAHE X 4.5"-5.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24301	RING, 3.0" PISTON	4		4	4
43	VRC24302	BAND, RIDER, 3.0" PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.7 4.5 X 3.5-inch Steeple Cylinder Parts

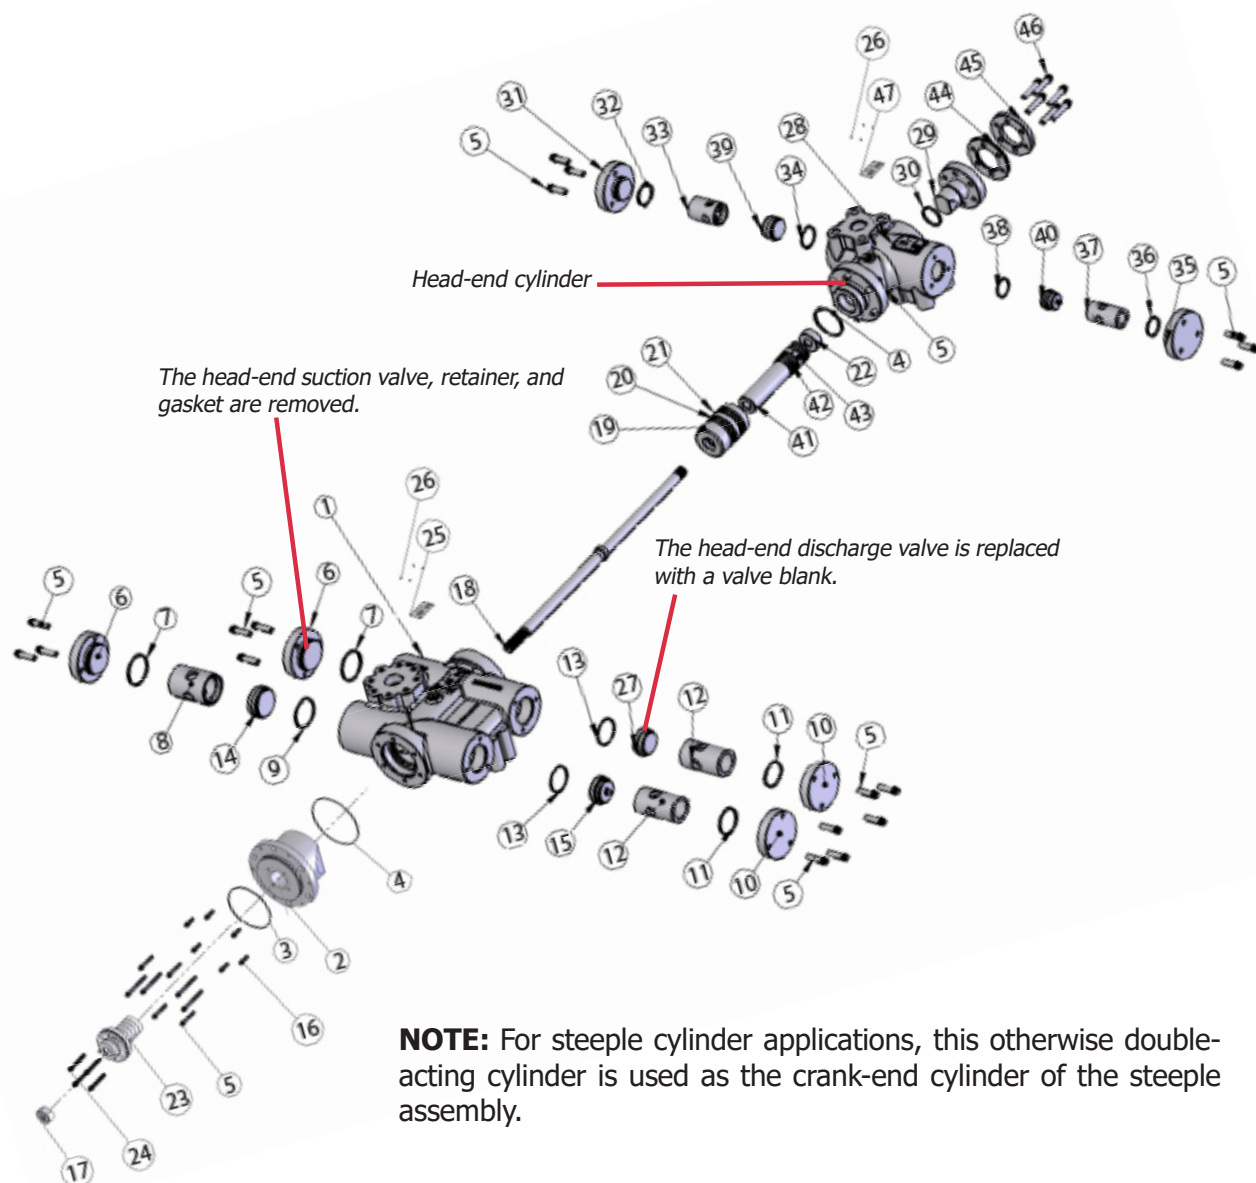

4.5 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25135A	CYLINDER, STEEPLE, 3.5" SAHE X 4.5" SACE ASSEMBLY				
1	VRS25450	CYLINDER, 4.5" DA	1			
2	VRS25451	HEAD, CRANK END, 4.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1	1	1
4	VRC25452	O-RING, HEAD, CRANK AND OUTER END, 4.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER	2			
7	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25456	RETAINER, VALVE, SUCTION 4.5" DA CYLINDER	1			

4.5 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	1	1	1	1
10	VRS25503	COVER, VALVE, DISCHARGE 4.5"-5.0" CYLINDER	2			
11	VRC25504	O-RING, COVER, DISCHARGE, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25458	RETAINER, VALVE, DISCHARGE, 4.5" DA CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
16	VRC23107	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24113	ROD, PISTON, 3.0"-3.5" SAHE X 4.5"-5.0" SACE	1			1
19	VRC24459	PISTON, 4.5" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24451	RING, 4.5" PISTON	4		4	4
21	VRC24452	BAND, RIDER, 4.5" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26599	BLANK, VALVE, DISCHARGE, 4.5"-5.0" SACE CYLINDER	1			
28	VRC25135	CYLINDER, STEEPLE, 3.5" SAHE X 4.5" SACE	1			
29	VRC27135	HEAD, 3.5" SAHE CYLINDER	1			
30	VRC25352	O-RING, HEAD, CRANK OUTER-END, 3.5" SAHE CYLINDER	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	2			
32	VRC25354	O-RING, COVER, SUCTION VALVE 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
33	VRC25356	RETAINER, VALVE, SUCTION, 3.5" DA AND 3.5" SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION, VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
37	VRC25183	RETAINER, VALVE, DISCHARGE, 3.5" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0-3.5" SAHE CYLINDER, MEDIUM *	1	1		1
40	VRC26125A	VALVE, DISCHARGE, 3.0" HEAVY. AND 3.5" MEDIUM SAHE CYL. *	1	1		1
41	VRC24315	PISTON, 3.5" SAHE X 4.5"-5.0" SACE STEEPLE CYLINDER, AL	1	1		1
42	VRC24351	RING, 3.5" PISTON	4		4	4
43	VRC24352	BAND, RIDER, 3.5"PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.8 5.0 X 2.5-inch Steeple Cylinder Parts

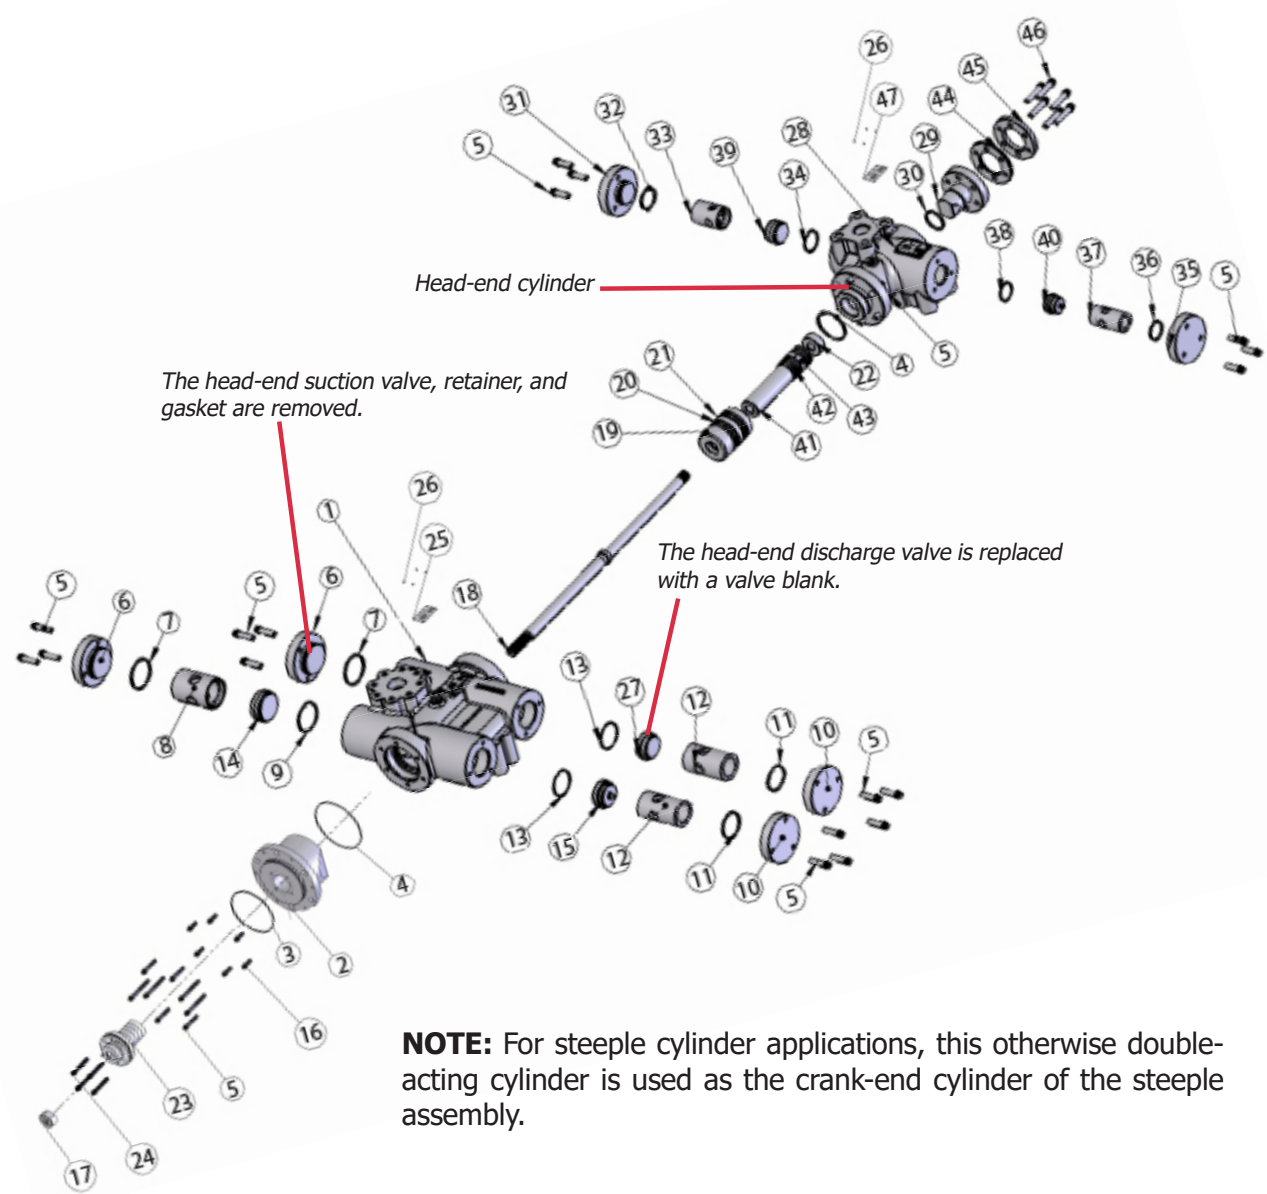

5.0 X 2.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25125A	CYLINDER, STEEPLE, 2.5" SAHE X 5.0" SACE ASSEMBLY				
1	VRS25500	CYLINDER, 5.0" DA	1			
2	VRS25501	HEAD, CRANK END, 5.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25502	O-RING, HEAD, CRANK AND OUTER END, 5.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER	2			
7	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25506	RETAINER, VALVE, SUCTION 5.0" CYLINDER	1			

5.0 X 2.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	1	1	1	1
10	VRS25503	COVER, VALVE, DISCHARGE 4.5"-5.0" CYLINDER	2			
11	VRC25504	O-RING, COVER, DISCHARGE, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25508	RETAINER, VALVE, DISCHARGE, 5.0" DA CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
16	VRC23107	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24111	ROD, PISTON, 2.5" SAHE X 4.5"-5.0" SACE	1			1
19A	VRC24509	PISTON, 5.0" SACE STEEPLE CYLINDER, AL	1			1
19B	VRC24508	PISTON, 5.0" SACE STEEPLE CYLINDER, CI (MAY BE USED FOR BALANCING)	1			1
20	VRC24501	RING, 5.0" PISTON	4		4	4
21	VRC24502	BAND, RIDER, 5.0" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26599	BLANK, VALVE, DISCHARGE, 4.5"-5.0" SACE CYLINDER	1			
28	VRC25125	CYLINDER, STEEPLE, 2.5" SAHE X 5.0" SACE	1			
29	VRC27125	HEAD, 2.5" SAHE CYLINDER	1			
30	VRC25252	O-RING, HEAD, CRANK OUTER-END, 2.5" SAHE CYLINDER	1	1	1	1
31	VRC25253	COVER, VALVE, SUCTION, 2.25"-3.0" CYLINDER	1			
32	VRC25254	O-RING, COVER, SUCTION VALVE 2.25"-3.0" CYLINDER	1	1	1	1
33	VRC25161	RETAINER, VALVE, SUCTION, 2.5" SAHE CYLINDER	1			
34	VRC25255	GASKET, SUCTION, VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
35	VRC25303	COVER, VALVE, DISCHARGE, 2.25"-3.0" CYLINDER	1			
36	VRC25304	O-RING, COVER, DISCHARGE VALVE, 2.25"-3.0" CYLINDER	1	1	1	1
37	VRC25181	RETAINER, VALVE, DISCHARGE, 2.5" SAHE CYLINDER	1			
38	VRC25305	GASKET, DISCHARGE VALVE SEAT, 2.25"-3.0" CYLINDER	1	1	1	1
39	VRC26015A	VALVE, SUCTION, 2.25" AND 2.5" SAHE CYLINDER, MEDIUM *	1	1		1
40	VRC26025A	VALVE, DISCHARGE, 2.25" AND 2.5" SAHE CYLINDER MEDIUM *	1	1		1
41	VRC24215	PISTON, 2.5" SAHE X 4.5"-5.0" SACE STEEPLE CYLINDER AL	1			1
42	VRC24251	RING, 2.5" PISTON	4		4	4
43	VRC24252	BAND, RIDER, 2.5" PISTON	1		1	1
44	VRC27126	SPACER, 2.25"-2.5" SAHE HEAD, 1/4"	1			
45	VRC27127	SPACER, 2.25"-2.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						

6.9 5.0 X 3.0-inch Steeple Cylinder Parts

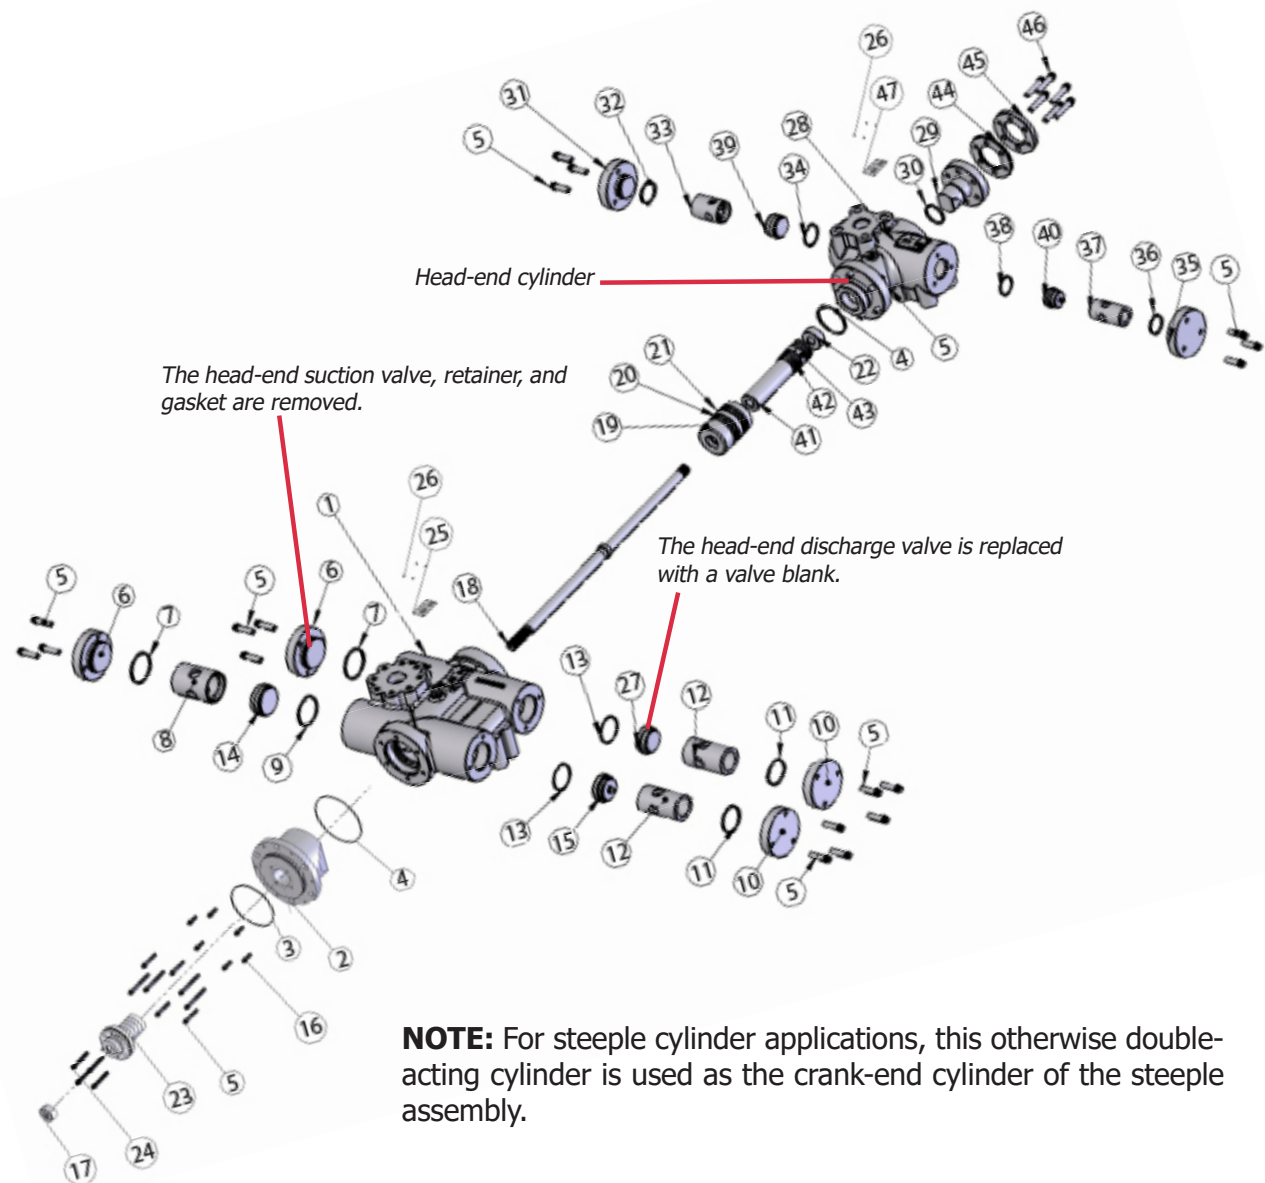


NOTE: For steeple cylinder applications, this otherwise double-acting cylinder is used as the crank-end cylinder of the steeple assembly.

5.0 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25132A	CYLINDER, STEEPLE, 3.0" SAHE X 5.0" SACE ASSEMBLY				
1	VRS25500	CYLINDER, 5.0" DA	1			
2	VRS25501	HEAD, CRANK END, 5.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25502	O-RING, HEAD, CRANK AND OUTER END, 5.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER	2			
7	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25506	RETAINER, VALVE, SUCTION 5.0" CYLINDER	1			
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	1	1	1	1

5.0 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
10	VRS25503	COVER, VALVE, DISCHARGE 4.5"-5.0" CYLINDER	2			
11	VRC25504	O-RING, COVER, DISCHARGE, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25508	RETAINER, VALVE, DISCHARGE, 5.0" CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
16	VRC23107	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24113	ROD, PISTON, 3.0"-3.5" SAHE X 4.5"-5.0" SACE	1			1
19A	VRC24509	PISTON, 5.0" SACE STEEPLE CYLINDER, AL	1			1
19B	VRC24508	PISTON, 5.0" SACE STEEPLE CYLINDER, CI (MAY BE USED FOR BALANCING)	1			1
20	VRC24501	RING, 5.0" PISTON	4		4	4
21	VRC24502	BAND, RIDER, 5.0" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26599	BLANK, VALVE, DISCHARGE, 4.5"-5.0" SACE CYLINDER	1			
28	VRC25132	CYLINDER, STEEPLE, 3.0" SACE X 5.0" SACE	1			
29	VRC27131	HEAD, 3.0" SAHE CYLINDER	1			
30	VRC25302	O-RING, HEAD, CRANK OUTER-END, 3.0" SAHE CYLINDER	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1			
32	VRC25354	O-RING, COVER, SUCTION VALVE, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
33	VRC25160	RETAINER, VALVE, SUCTION, 3.0" SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION, VALVE SEAT, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" DA, 3.0"-3.5" SAHE	1	1	1	1
37	VRC25180	RETAINER, VALVE, DISCHARGE, 3.0" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0"-3.5" SAHE CYLINDER, MEDIUM *	1	1		1
40	VRC26123A	VALVE, DISCHARGE, 3.0" MED. AND 3.5" LIGHT SAHE CYLINDER *	1	1		1
41	VRC24310	PISTON, 3.0" SAHE X 4.5"-5.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24301	RING, 3.0" PISTON	4		4	4
43	VRC24302	BAND, RIDER, 3.0" PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.10 5.0 X 3.5-inch Steeple Cylinder Parts

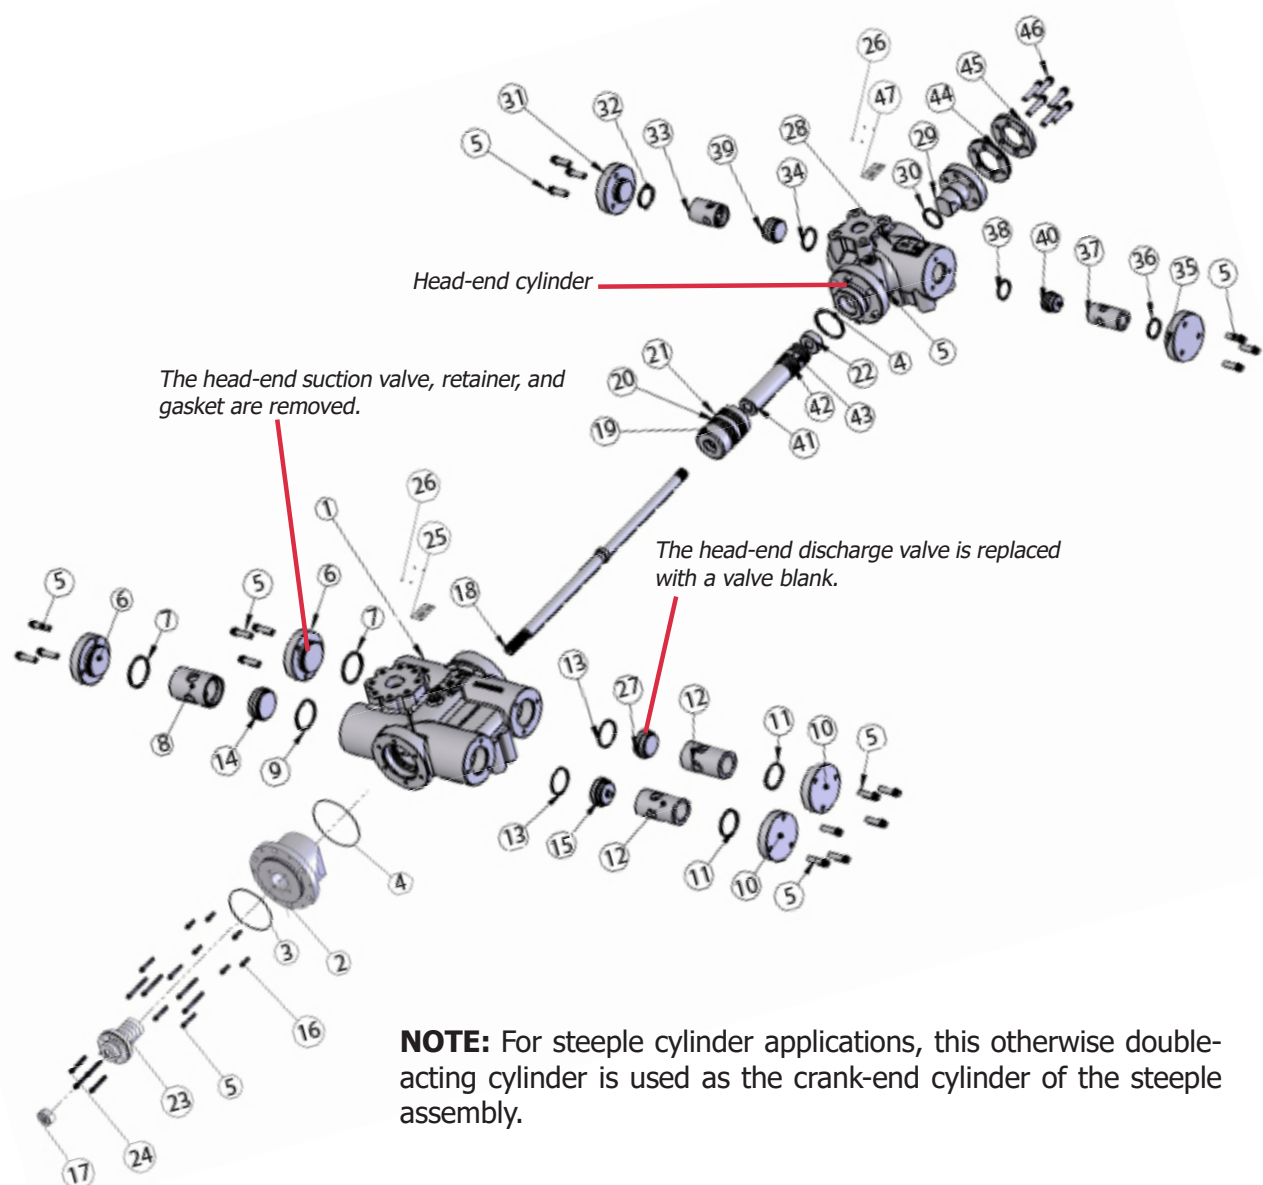

5.0 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25136A	CYLINDER, STEEPLE, 3.5" SAHE X 5.0" SACE ASSEMBLY				
1	VRS25500	CYLINDER, 5.0" DA	1			
2	VRS25501	HEAD, CRANK END, 5.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25502	O-RING, HEAD, CRANK AND OUTER END, 5.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER	2			
7	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYLINDER	2	2	2	2
8	VRS25506	RETAINER, VALVE, SUCTION 5.0" CYLINDER	1			
9	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER	1	1	1	1

5.0 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
10	VRS25503	COVER, VALVE, DISCHARGE 4.5"-5.0" CYL	2			
11	VRC25504	O-RING, COVER, DISCHARGE, VALVE, 4.5"-5.0" CYLINDER	2	2	2	2
12	VRS25508	RETAINER, VALVE, DISCHARGE, 5.0" CYLINDER	2			
13	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYLINDER	2	2	2	2
14	VRS26515A	VALVE, SUCTION, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
15	VRS26525A	VALVE, DISCHARGE, 4.5"-5.0" CYLINDER MEDIUM *	1	1		1
16	VRC23107	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24113	ROD, PISTON, 3.0"-3.5" SAHE X 4.5"-5.0" SACE	1			1
19A	VRC24509	PISTON, 5.0" SACE STEEPLE CYLINDER, AL	1			1
19B	VRC24508	PISTON, 5.0" SACE STEEPLE CYLINDER, CI (MAY BE USED FOR BALANCING)	1			1
20	VRC24501	RING, 5.0" PISTON	4		4	4
21	VRC24502	BAND, RIDER, 5.0" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26599	BLANK, VALVE, DISCHARGE, 4.5"-5.0" SACE CYLINDER	1			
28	VRC25136	CYLINDER, STEEPLE, 3.5" SAHE X 5.0" SACE	1			
29	VRC27135	HEAD, 3.5" SAHE CYLINDER	1			
30	VRC25352	O-RING, HEAD, CRANK OUTER-END, 3.5" SAHE CYLINDER	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1			
32	VRC25354	O-RING, COVER, SUCTION VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
33	VRC25356	RETAINER, VALVE, SUCTION, 3.5" DA AND 3.5" SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
37	VRC25183	RETAINER, VALVE, DISCHARGE, 3.5" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0"-3.5" SAHE CYLINDER, MEDIUM *	1	1		1
40	VRC26125A	VALVE, DISCHARGE, 3.0" HEAVY AND 3.5" MEDIUM SAHE CYL.*	1	1		1
41	VRC24315	PISTON, 3.5" SAHE X 4.5"-5.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24351	RING, 3.5" PISTON	4		4	4
43	VRC24352	BAND, RIDER, 3.5" PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.11 5.5 X 3.0-inch Steeple Cylinder Parts

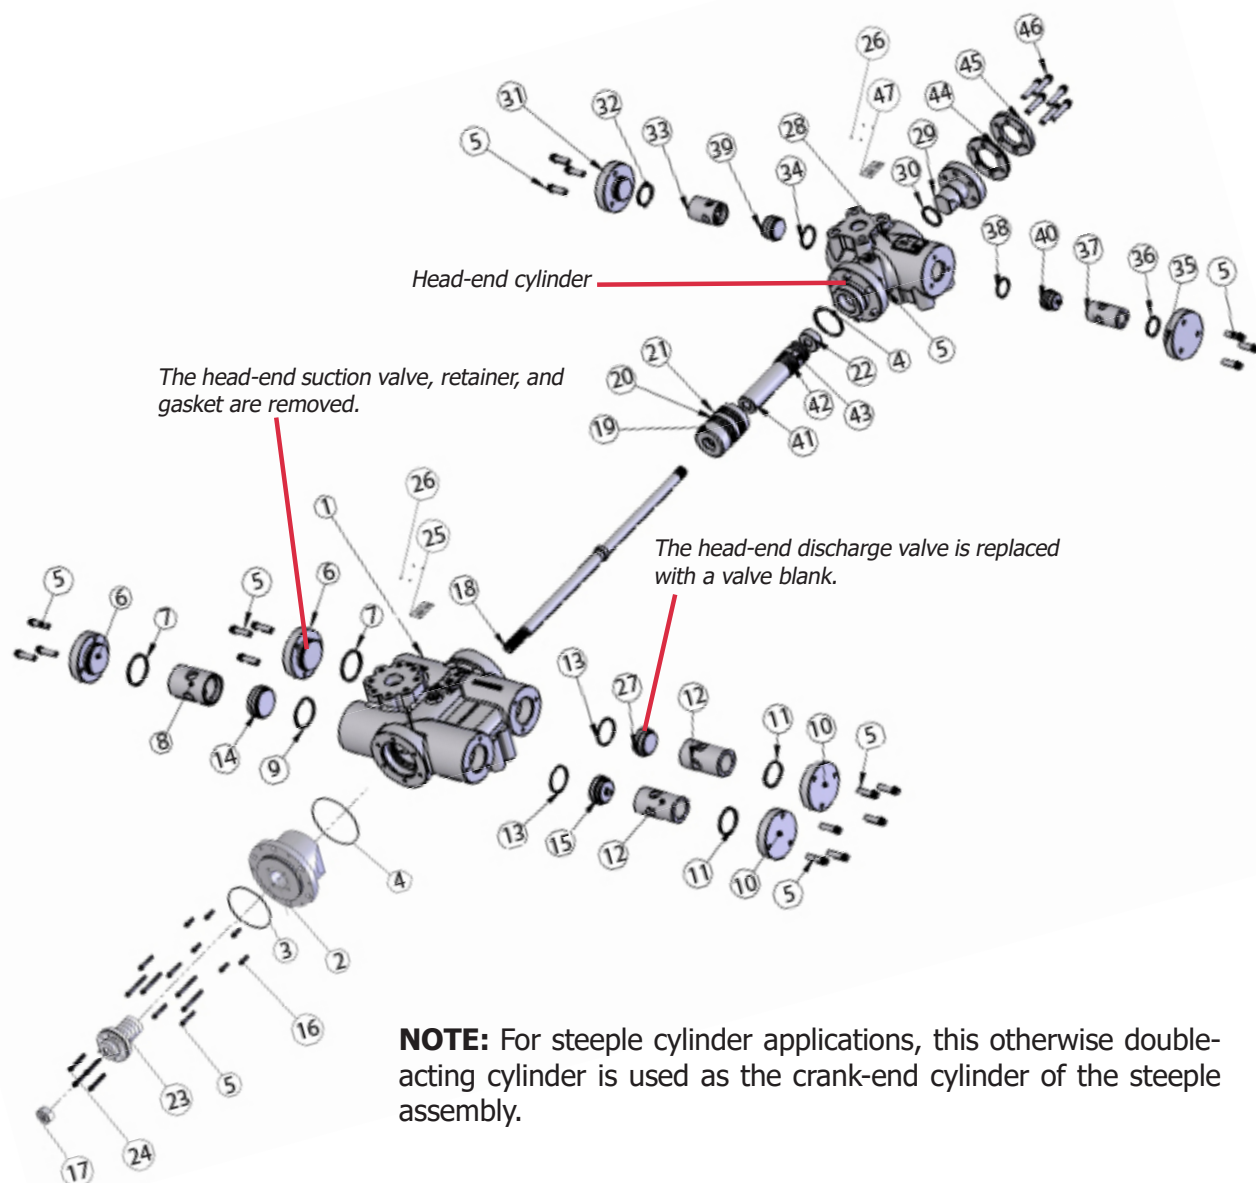

5.5 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25133A	CYLINDER, STEEPLE, 3.0" SAHE X 5.5" SACE ASSEMBLY				
1	VRS25550	CYLINDER, 5.5" DA	1			
2	VRS25551	HEAD, CRANK END, 5.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25552	O-RING, HEAD, CRANK AND OUTER END, 5.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRC25553	COVER, VALVE, SUCTION, 5.5"-6.0" CYLINDER	2			
7	VRC25554	O-RING, COVER, SUCTION VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
8	VRS25556	RETAINER, VALVE, SUCTION, 5.5" CYLINDER	1			

5.5 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25555	GASKET, SUCTION VALVE SEAT, 5.5"-6.0" CYLINDER	1	1	1	1
10	VRC25603	COVER, VALVE, DISCHARGE, 5.5"-6.0" CYLINDER	2			
11	VRC25604	O-RING, COVER, DISCHARGE VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
12	VRS25558	RETAINER, VALVE, DISCHARGE, 5.5" CYLINDER	2			
13	VRC25605	GASKET, DISCHARGE, VALVE SEAT, 5.5"-6.0" CYLINDER	2	2	2	2
14	VRS26615A	VALVE, SUCTION, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
15	VRS26625A	VALVE, DISCHARGE, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
16	VRC25077	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24114	ROD, PISTON, 3.0"-3.5" SAHE X 5.5"-6.0" SACE	1			1
19	VRC24559	PISTON, 5.5" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24551	RING, 5.5" PISTON	2		2	2
21	VRC24552	BAND, RIDER, 5.5" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26699	BLANK, VALVE, DISCHARGE, 5.5"-6.0" SACE CYLINDER	1			
28	VRC25133	CYLINDER, STEEPLE, 3.0" SAHE X 5.5" SACE	1			
29	VRC27131	HEAD, 3.0" SAHE CYLINDER	1			
30	VRC25302	O-RING, HEAD, CRANK OUTER-END AND SAHE 3.0" CYLS.	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 2.25"-3.0" CYLINDER, 3.0"-3.5" SAHE	1			
32	VRC25354	O-RING, COVER, SUCTION VALVE 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
33	VRC25160	RETAINER, VALVE, SUCTION 3.0" SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION VALVE SEAT, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" DA, 3.0"-3.5" SAHE	1	1	1	1
37	VRC25180	RETAINER, VALVE, DISCHARGE, 3.0" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" DA AND 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0" AND 3.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26123A	VALVE, DISCHARGE, 3.0" MEDIUM AND 3.5" LIGHT SAHE CYL. *	1	1		1
41	VRC24311	PISTON, 3.0" SAHE X 5.5"-6.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24301	RING, 3.0" PISTON	4		4	4
43	VRC24302	BAND, RIDER, 3.0" PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.12 5.5 X 3.5-inch Steeple Cylinder Parts

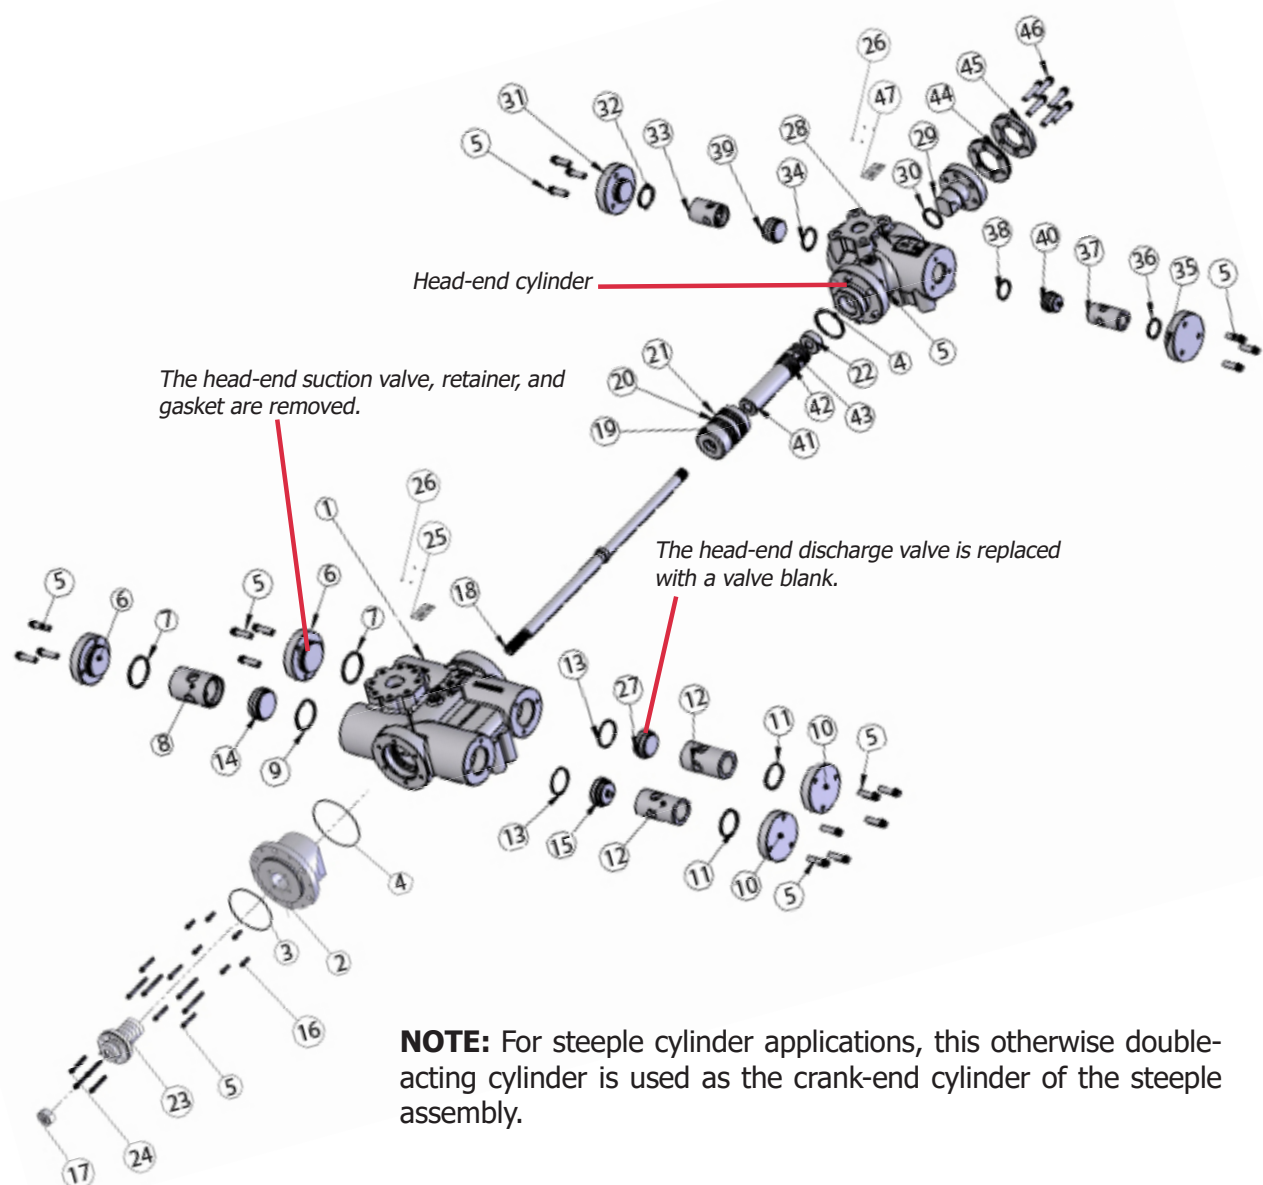

5.5 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25137A	CYLINDER, STEEPLE, 3.5" SAHE X 5.5" SACE ASSEMBLY				
1	VRS25550	CYLINDER, 5.5" DA	1			
2	VRS25551	HEAD, CRANK END, 5.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25552	O-RING, HEAD, CRANK AND OUTER END, 5.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRC25553	COVER, VALVE, SUCTION, 5.5"-6.0" CYLINDER	2			
7	VRC25554	O-RING, COVER, SUCTION VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
8	VRS25556	RETAINER, VALVE, SUCTION, 5.5" CYLINDER	1			

5.5 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25555	GASKET, SUCTION VALVE SEAT, 5.5"-6.0" CYL	1	1	1	1
10	VRC25603	COVER, VALVE, DISCHARGE, 5.5"-6.0" CYLINDER	2			
11	VRC25604	O-RING, COVER, DISCHARGE VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
12	VRS25558	RETAINER, VALVE, DISCHARGE, 5.5" CYLINDER	2			
13	VRC25605	GASKET, DISCHARGE, VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
14	VRS26615A	VALVE, SUCTION, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
15	VRS26625A	VALVE, DISCHARGE, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
16	VRC25077	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24114	ROD, PISTON, 3.0"-3.5" SAHE X 5.5"-6.0" SACE	1			1
19	VRC24559	PISTON, 5.5" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24551	RING, 5.5" PISTON	2		2	2
21	VRC24552	BAND, RIDER, 5.5" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26699	BLANK, VALVE, DISCHARGE, 5.5"-6.0" SACE CYLINDER	1			
28	VRC25137	CYLINDER, STEEPLE, 3.5" SAHE X 5.5" SACE	1			
29	VRC27135	HEAD, 3.5" SAHE CYLINDER	1			
30	VRC25352	O-RING, HEAD, CRANK OUTER-END, 3.5" SAHE CYLINDER	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" CYLINDER	1			
32	VRC25354	O-RING, COVER, SUCTION VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
33	VRC25356	RETAINER, VALVE, SUCTION, 3.5" DA AND 3.5" SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
37	VRC25183	RETAINER, VALVE, DISCHARGE, 3.5" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0"-3.5" SAHE CYLINDER, MEDIUM *	1	1		1
40	VRC26125A	VALVE, DISCHARGE, 3.0" HEAVY AND 3.5" MEDIUM SAHE CYL. *	1	1		1
41	VRC24316	PISTON, 3.5" SAHE X 5.5"-6.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24351	RING, 3.5" PISTON	4		4	4
43	VRC24352	BAND, RIDER, 3.5" PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						

6.13 6.0 X 3.0-inch Steeple Cylinder Parts

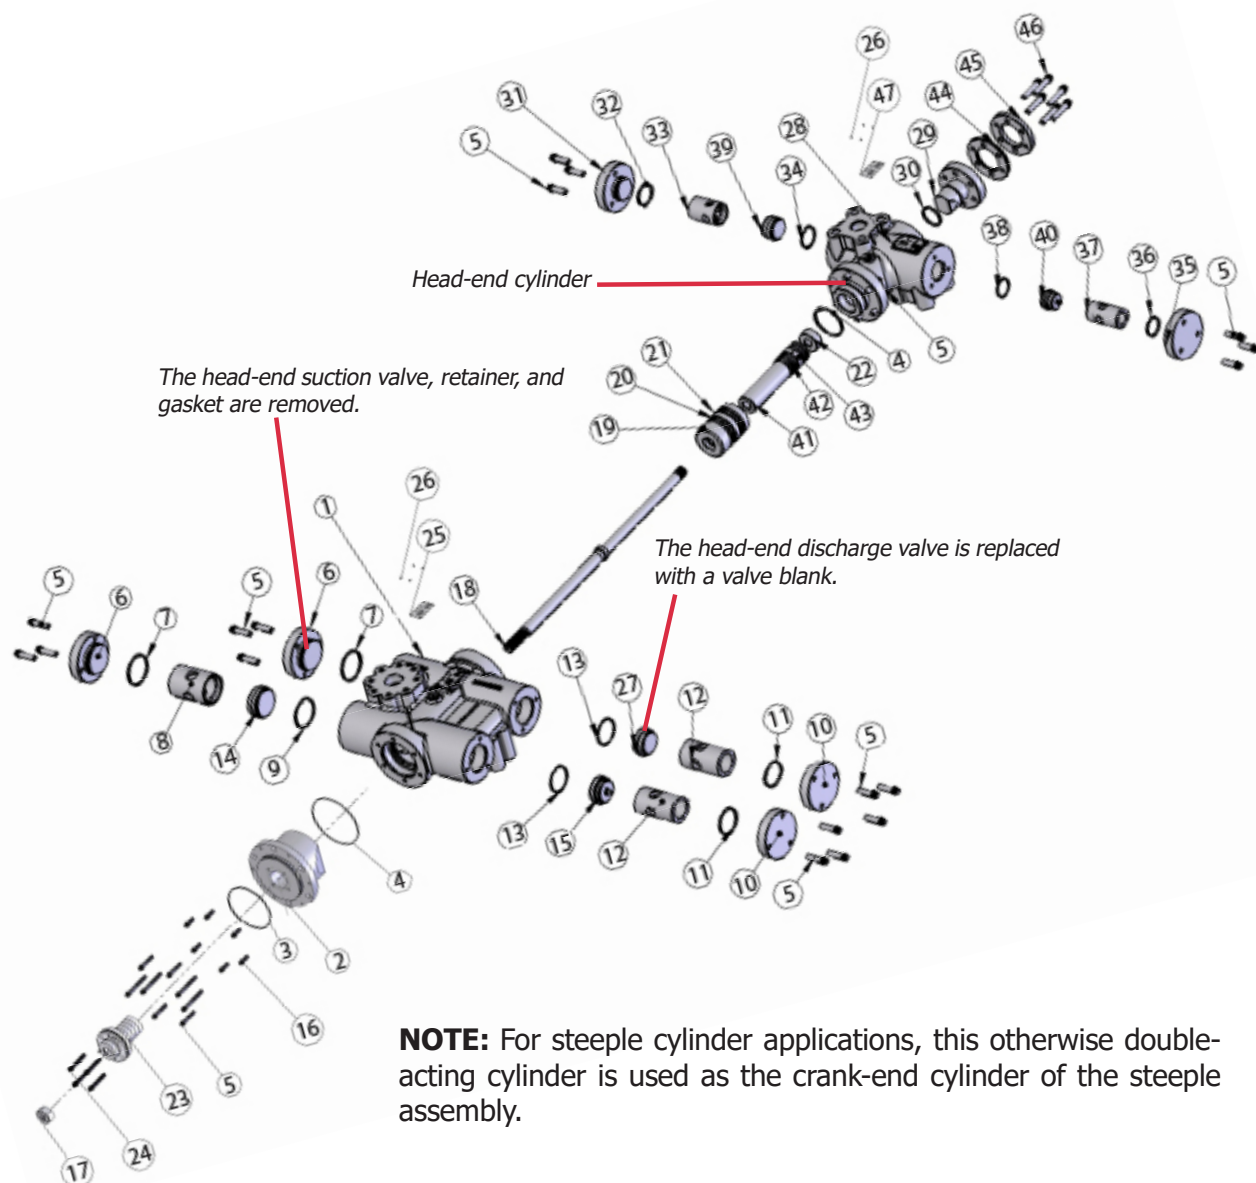


NOTE: For steeple cylinder applications, this otherwise double-acting cylinder is used as the crank-end cylinder of the steeple assembly.

6.0 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25134A	CYLINDER, STEEPLE, 3.0" SAHE X 6.0" SACE ASSEMBLY				
1	VRS25600	CYLINDER, 6.0" DA	1			
2	VRS25601	HEAD, CRANK END, 6.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25602	O-RING, HEAD, CRANK AND OUTER END, 6.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRC25553	COVER, VALVE, SUCTION, 5.5"-6.0" CYLINDER	2			
7	VRC25554	O-RING, COVER, SUCTION VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
8	VRS25606	RETAINER, VALVE, SUCTION, 6.0" CYLINDER	1			

6.0 X 3.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25555	GASKET, SUCTION VALVE SEAT, 5.5"-6.0" CYLINDER	1	1	1	1
10	VRC25603	COVER, VALVE, DISCHARGE, 5.5"-6.0" CYLINDER	2			
11	VRC25604	O-RING, COVER, DISCHARGE VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
12	VRS25608	RETAINER, VALVE, DISCHARGE, 6.0" CYLINDER	2			
13	VRC25605	GASKET, DISCHARGE VALVE SEAT, 5.5"-6.0" CYLINDER	2	2	2	2
14	VRS26615A	VALVE, SUCTION, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
15	VRS26625A	VALVE, DISCHARGE, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
16	VRC25077	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24114	ROD, PISTON, 3.0"-3.5" SAHE X 5.5"-6.0" SACE	1			1
19	VRC24609	PISTON, 6.0" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24601	RING, 6.0" PISTON	2		2	2
21	VRC24602	BAND, RIDER, 6.0" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26699	BLANK, VALVE, DISCHARGE 5.5"-6.0" SACE CYLINDER	1			
28	VRC25134	CYLINDER, STEEPLE, 3.0" SAHE X 6.0" SACE	1			
29	VRC27131	HEAD, 3.0" SAHE CYLINDER	1			
30	VRC25302	O-RING, HEAD, CRANK OUTER-END, 3.0"SAHE CYLS.	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1			
32	VRC25354	O-RING, COVER, SUCTION VALVE 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
33	VRC25160	RETAINER, VALVE, SUCTION, 3.0" SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE, VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
37	VRC25180	RETAINER, VALVE DISCHARGE, 3.0" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0" AND 3.5" SAHE CYLINDER, MEDIUM *	1	1		1
40	VRC26123A	VALVE, DISCHARGE, 3.0" MEDIUM AND 3.5" LIGHT SAHE CYL. *	1	1		1
41	VRC24311	PISTON, 3.0" SAHE X 5.5"-6.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24301	RING, 3.0" PISTON	4		4	4
43	VRC24302	BAND, RIDER, 3.0" PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.14 6.0 X 3.5-inch Steeple Cylinder Parts

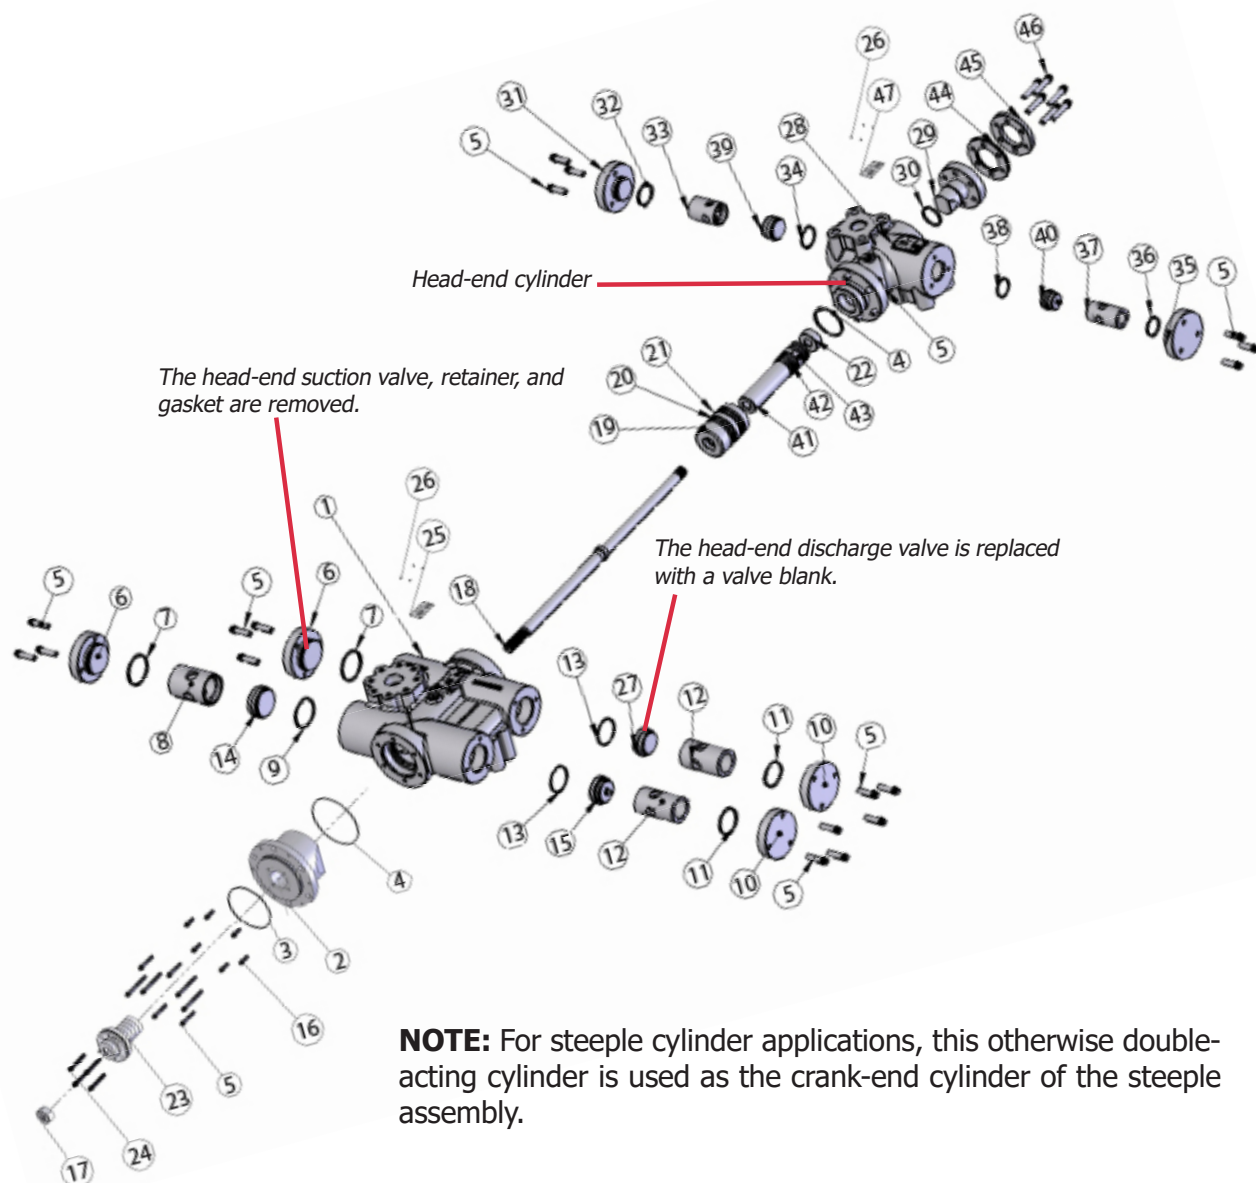

6.0 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25138A	CYLINDER, STEEPLE, 3.5" SAHE X 6.0" SACE ASSEMBLY				
1	VRS25600	CYLINDER, 6.0" DA	1			
2	VRS25601	HEAD, CRANK END, 6.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25602	O-RING, HEAD, CRANK AND OUTER END, 6.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRC25553	COVER, VALVE, SUCTION, 5.5"-6.0" CYLINDER	2			
7	VRC25554	O-RING, COVER, SUCTION VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
8	VRS25606	RETAINER, VALVE, SUCTION, 5.5"-6.0" CYLINDER	1			

6.0 X 3.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRC25555	GASKET,SUCTION, VALVE, SEAT, 5.5"-6.0" CYLINDER	1	1	1	1
10	VRC25603	COVER, VALVE, DISCHARGE, 5.5"-6.0" CYLINDER	2			
11	VRC25604	O-RING, COVER, DISCHARGE VALVE, 5.5"-6.0" CYLINDER	2	2	2	2
12	VRS25608	RETAINER, VALVE, DISCHARGE, 6.0" CYLINDER	2			
13	VRC25605	GASKET, DISCHARGE VALVE SEAT, 5.5"-6.0" CYLINDER	2	2	2	2
14	VRS26615A	VALVE, SUCTION, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
15	VRS26625A	VALVE, DISCHARGE, 5.5"-6.0" CYLINDER MEDIUM *	1	1		1
16	VRC25077	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24114	ROD, PISTON, 3.0"-3.5" SAHE X 5.5"-6.0" SACE	1			1
19	VRC24609	PISTON, 6.0" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24601	RING, 6.0" PISTON	2		2	2
21	VRC24602	BAND, RIDER, 6.0" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26699	BLANK, VALVE, DISCHARGE 5.5"-6.0" SACE CYLINDER	1			
28	VRC25138	CYLINDER, STEEPLE, 3.5" SAHE X 6.0" SACE	1			
29	VRC27135	HEAD, 3.5" SAHE CYLINDER	1			
30	VRC25352	O-RING, HEAD, CRANK OUTER-END, 3.5" SAHE CYLINDER	1	1	1	1
31	VRC25353	COVER, VALVE, SUCTION, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1			
32	VRC25354	O-RING, COVER, SUCTION VALVE 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
33	VRC25356	RETAINER, VALVE, SUCTION, 3.5" DA AND 3.5 SAHE CYLINDER	1			
34	VRC25355	GASKET, SUCTION VALVE SEAT, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1	1	1	1
35	VRC25403	COVER, VALVE, DISCHARGE, 3.5"-4.0" CYLINDER, 3.0"-3.5" SAHE	1			
36	VRC25404	O-RING, COVER, DISCHARGE, VALVE, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
37	VRC25183	RETAINER, VALVE DISCHARGE, 3.5" SAHE CYLINDER	1			
38	VRC25405	GASKET, DISCHARGE VALVE SEAT, 3.5"-4.0" CYL., 3.0"-3.5" SAHE	1	1	1	1
39	VRC26115A	VALVE, SUCTION, 3.0" AND 3.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26125A	VALVE, DISCHARGE, 3.0" HEAVY AND 3.5" MEDIUM SAHE CYL. *	1	1		1
41	VRC24316	PISTON, 3.5" SAHE X 5.5"-6.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24351	RING, 3.5" PISTON	4		4	4
43	VRC24352	BAND, RIDER, 3.5" PISTON	1		1	1
44	VRC27136	SPACER, 3.0"-3.5" SAHE HEAD, 1/4"	1			
45	VRC27137	SPACER, 3.0"-3.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.15 6.5 X 4.0-inch Steeple Cylinder Parts

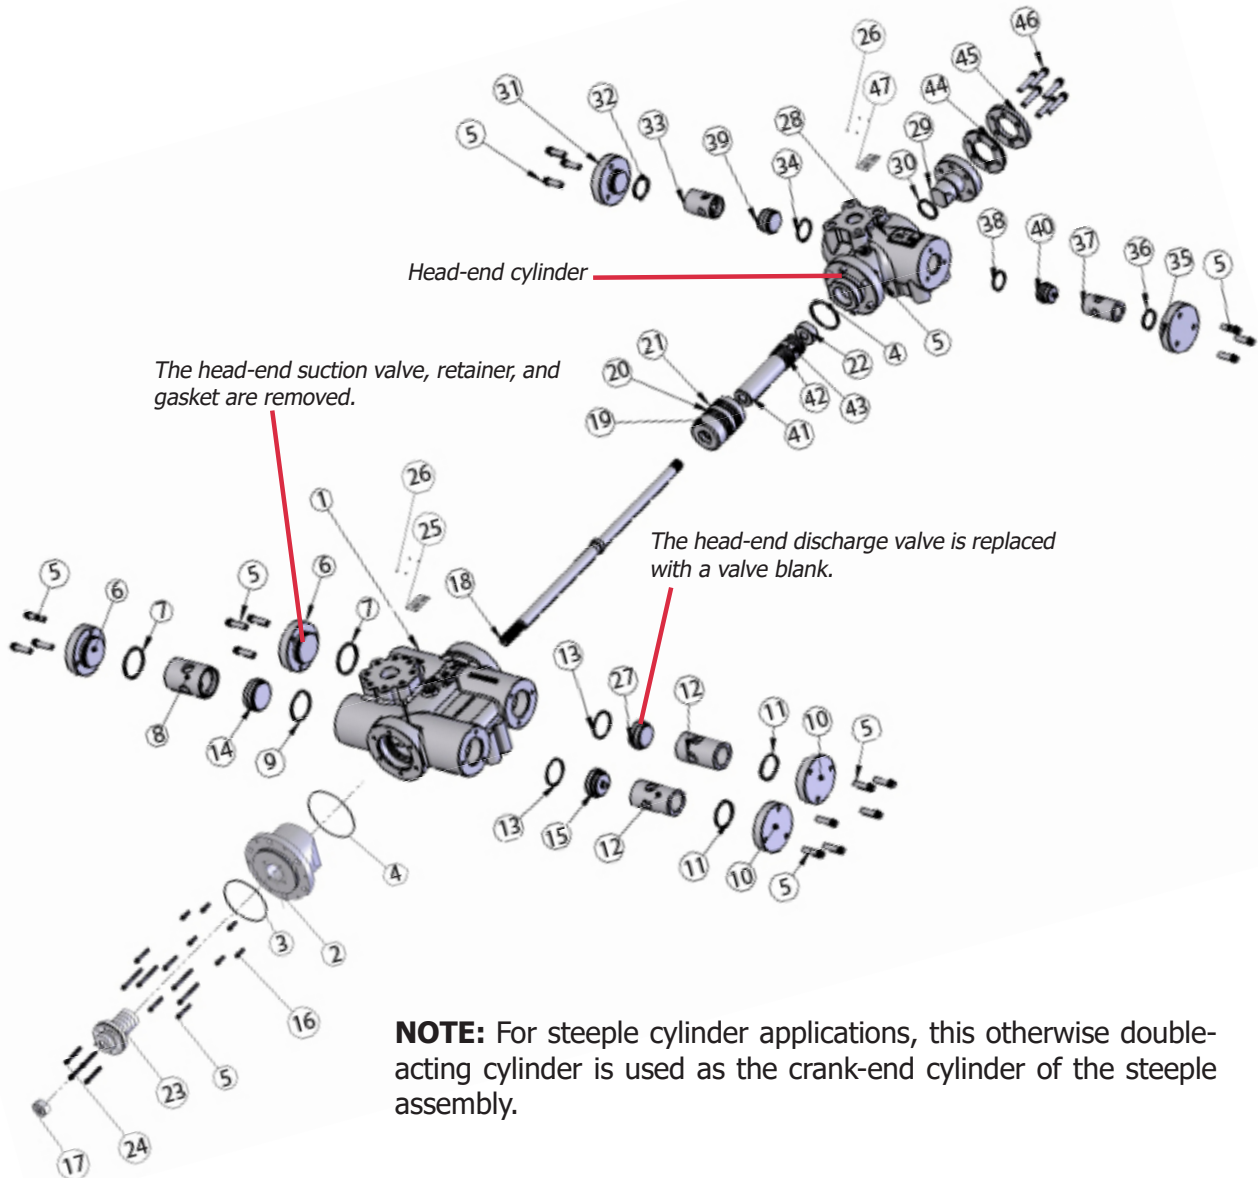

6.5 X 4.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25141A	CYLINDER, STEEPLE, 4.0" SAHE X 6.5" SACE ASSEMBLY				
1	VRS25650	CYLINDER, 6.5" DA	1			
2	VRS25651	HEAD, CRANK END, 6.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25652	O-RING, HEAD, CRANK AND OUTER END, 6.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	2			
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
8	VRS25656	RETAINER, VALVE, SUCTION, 6.5" CYLINDER	1			
9	VRS25655	GASKET, SUCTION VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	1	1	1	1

6.5 X 4.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	2			
11	VRS25704	O-RING, COVER, DISCHARGE 6.5" 6.5", 7.0", 9.5", AND 10.0" CYL.	2	2	2	2
12	VRS25658	RETAINER, VALVE, DISCHARGE, 6.5" CYLINDER	2			
13	VRS25705	GASKET, DISCHARGE, VALVE SEAT, 6.5", 7.0", 9.5", AND 10.0" CYL.	2	2	2	2
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYLINDER MEDIUM *	1	1		1
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYLINDER MEDIUM *	1	1		1
16	VRC25067	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24115	ROD, PISTON, 4.0"-4.5" SAHE X 6.5"-7.0" SACE	1			1
19	VRC24659	PISTON, 6.5" SACE STEEPLE CYLINDER, AL	1			1
20	VRC25651	RING, 6.5" PISTON	2		2	2
21	VRC25652	BAND, RIDER, 6.5" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26799	BLANK, VALVE, DISCHARGE, 6.5"-7.0" SACE VRS CYLINDER	1			
28	VRC25141	CYLINDER, STEEPLE, 4.0" SAHE X 6.5" SACE	1			
29	VRC27141	HEAD, 4.0" SAHE CYLINDER	1			
30	VRC25402	O-RING, HEAD, CRANK OUTER-END, 4.0" CYLINDER	1	1	1	1
31	VRS25453	COVER, VALVE, SUCTION 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
32	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
33	VRC25164	RETAINER, VALVE, SUCTION, 4.0" CYLINDER	1			
34	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1	1	1	1
35	VRS25503	COVER, VALVE, DISCHARGE, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
36	VRC25504	O-RING, COVER DISCHARGE VALVE, 4.5"-5.0" CYL. & 4.0"-4.5" SAHE	1	1	1	1
37	VRC25184	RETAINER, VALVE, DISCHARGE, 4.0" SAHE CYLINDER	1			
38	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
39	VRC26215A	VALVE, SUCTION, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26225A	VALVE, DISCHARGE, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
41	VRC24410	PISTON, 4.0" SAHE X 6.5"-7.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24401	RING, 4.0" PISTON	4		4	4
43	VRC24402	BAND, RIDER, 4.0" PISTON	1		1	1
44	VRC27146	SPACER, 4.0"-4.5" SAHE HEAD, 1/4"	1			
45	VRC27147	SPACER, 4.0"-4.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.16 6.5 X 4.5-inch Steeple Cylinder Parts

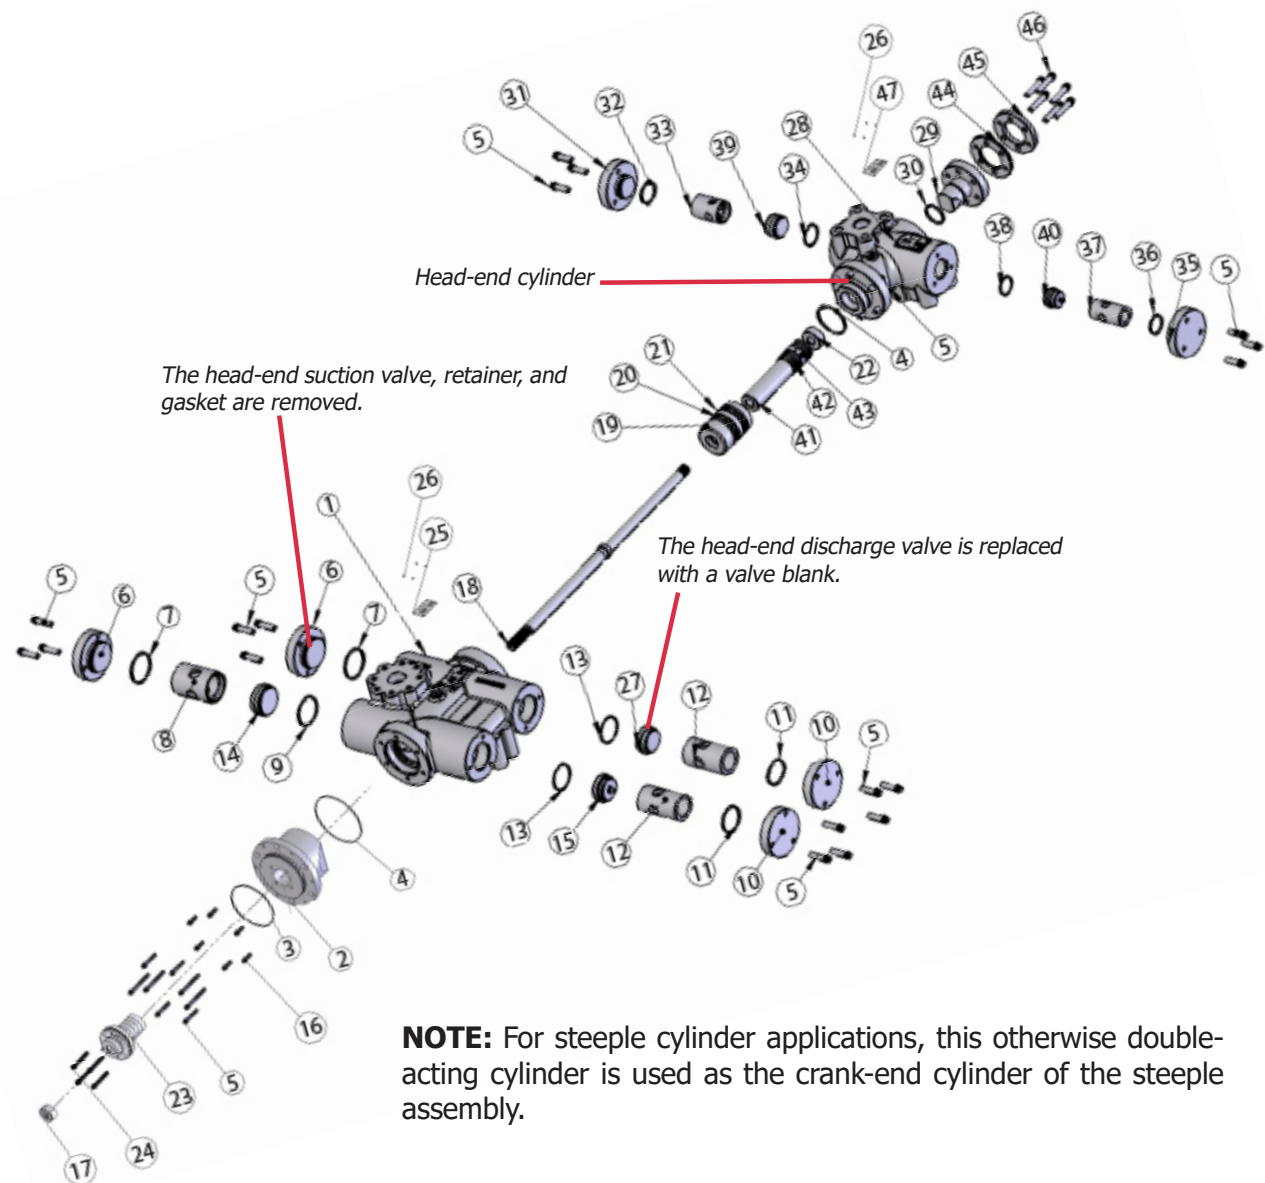

6.5 X 4.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25143A	CYLINDER, STEEPLE, 4.5" SAHE X 6.5" SACE ASSEMBLY				
1	VRS25650	CYLINDER, 6.5" DA	1			
2	VRS25651	HEAD, CRANK END, 6.5" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25652	O-RING, HEAD, CRANK AND OUTER END, 6.5" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	2			
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5", 7.0", 9.5", AND 10.0" CYL.	2	2	2	2
8	VRS25656	RETAINER, VALVE, SUCTION, 6.5" CYLINDER	1			

6.5 X 4.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRS25655	GASKET, SUCTION VALVE SEAT, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	1	1	1	1
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	2			
11	VRS25704	O-RING, COVER, DISCHARGE, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	2	2	2	2
12	VRS25658	RETAINER, VALVE, DISCHARGE, 6.5" CYLINDER	2			
13	VRS25705	GASKET, DISCHARGE, VALVE SEAT, 6.5", 7.0", 9.5", AND 10.0" CYL.	2	2	2	2
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5", AND 10.0" CYLINDER, MEDIUM *	1	1		1
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5", AND 10.0" CYLINDER, MEDIUM *	1	1		1
16	VRC25067	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24115	ROD, PISTON, 4.0"-4.5" SAHE X 6.5"-7.0" SACE	1			1
19	VRC24659	PISTON, 6.5" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24651	RING, 6.5" PISTON	2		2	2
21	VRC24652	BAND, RIDER, 6.5" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26799	BLANK, VALVE, DISCHARGE, 6.5"-7.0" SACE CYLINDER	1			
28	VRC25143	CYLINDER, STEEPLE 4.5" SAHE X 6.5" SACE	1			
29	VRC27145	HEAD, 4.5" SAHE CYLINDER	1			
30	VRC25452	O-RING, HEAD, CRANK OUTER-END, 4.5" SAHE CYLINDER	1	1	1	1
31	VRC25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
32	VRC25454	O-RING, COVER, SUCTION VALVE, 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
33	VRC25165	RETAINER, VALVE, SUCTION, 4.5" SAHE CYLINDER	1			
34	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1	1	1	1
35	VRC25503	COVER, VALVE, DISCHARGE, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
36	VRC25504	O-RING, COVER, DISCHARGE VALVE, 4.5"-5.0" CYL. & 4.0"-4.5" SAHE	1	1	1	1
37	VRC25185	RETAINER, VALVE, DISCHARGE, 4.5" SAHE CYLINDER	1			
38	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
39	VRC26215A	VALVE, SUCTION, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26225A	VALVE, DISCHARGE, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
41	VRC24415	PISTON, 4.5" SAHE X 6.5"-7.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24451	RING, 4.5" PISTON	4		4	4
43	VRC24452	BAND, RIDER, 4.5" PISTON	1		1	1
44	VRC27146	SPACER, 4.0"-4.5" SAHE HEAD, 1/4"	1			
45	VRC27147	SPACER, 4.0"-4.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						


6.17 7.0 X 4.0-inch Steeple Cylinder Parts

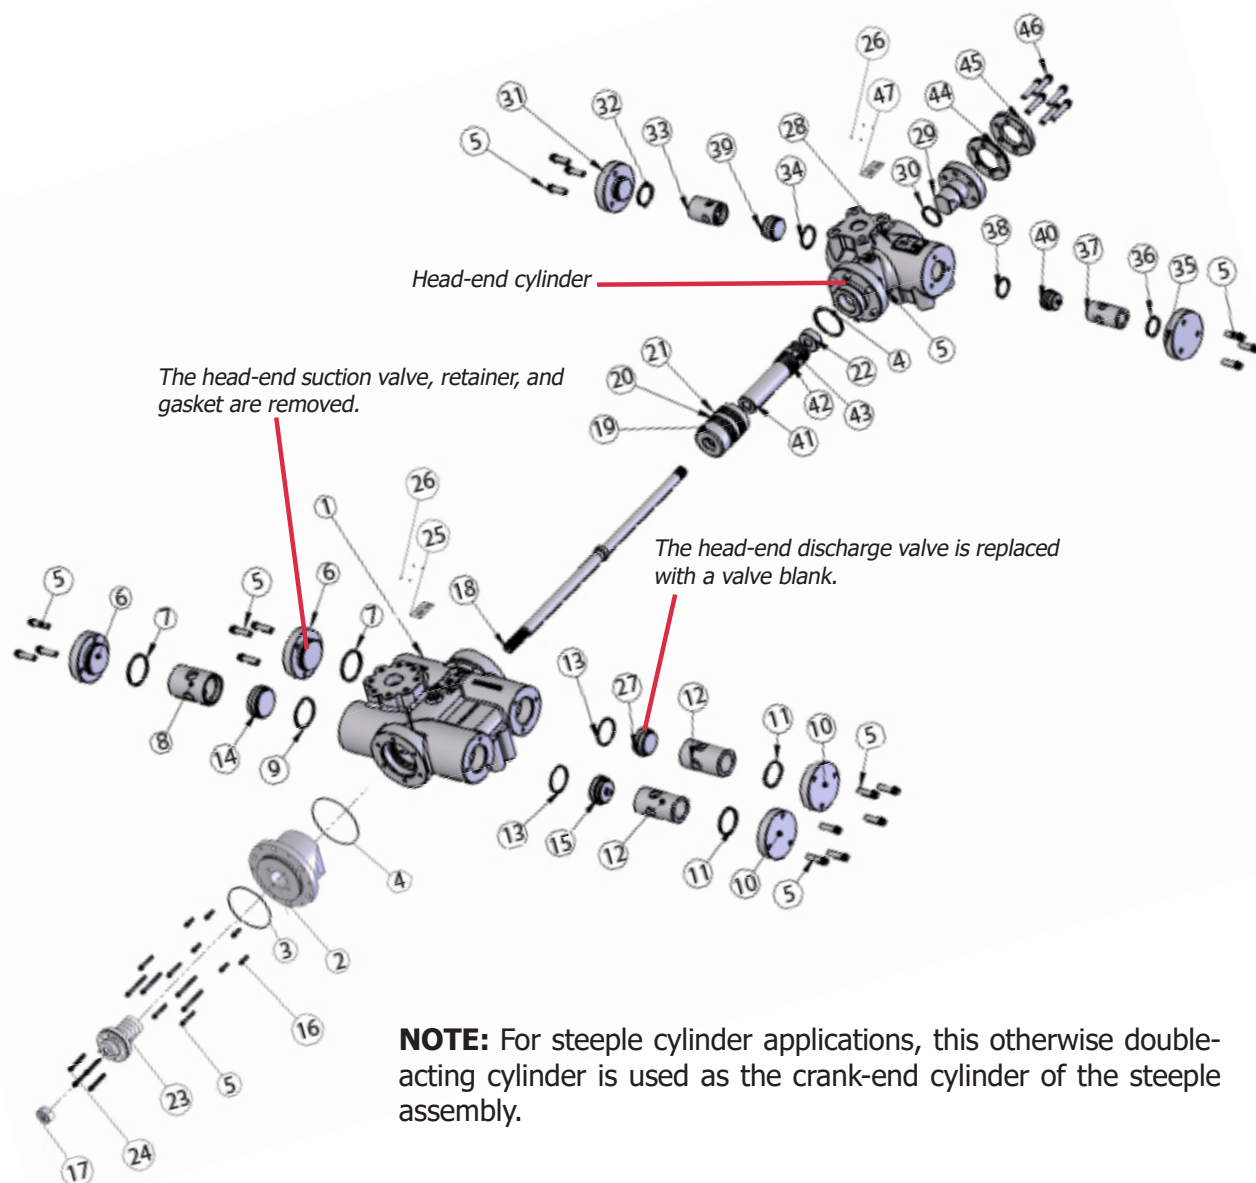

7.0 X 4.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
	VRS25142A	CYLINDER, STEEPLE, 4.0" SAHE X 7.0" SACE ASSEMBLY				
1	VRS25700	CYLINDER, 7.0" DA	1			
2	VRS25701	HEAD, CRANK END, 7.0" CYLINDER	1			
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1		1
4	VRC25702	O-RING, HEAD, CRANK AND OUTER END, 7.0" CYLINDER	2	1	1	2
5	VRC25077	SCREW, VALVE COVER	32			
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	2			
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
8	VRS25706	RETAINER, VALVE, SUCTION, 7.0" CYLINDER	1			

7.0 X 4.0 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
9	VRS25655	GASKET, SUCTION, VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	1	1	1	1
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5" AND 10.0" CYLINDER	2			
11	VRS25704	O-RING, COVER, DISCHARGE VALVE, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
12	VRS25708	RETAINER, VALVE, DISCHARGE, 7.0" CYLINDER	2			
13	VRS25705	GASKET, DISCHARGE VALVE SEAT, 6.5", 7.0", 9.5" AND 10.0" CYL.	2	2	2	2
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5", AND 10.0" CYLINDER, MEDIUM *	1	1		1
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5", AND 10.0" CYLINDER, MEDIUM *	1	1		1
16	VRC25067	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24115	ROD, PISTON, 4.0"-4.5" SAHE X 6.5"-7.0" SACE	1			1
19	VRC24709	PISTON, 7.0" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24701	RING, 7.0" PISTON	2		2	2
21	VRC24702	BAND, RIDER, 7.0" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26799	BLANK, VALVE, DISCHARGE, 6.5"-7.0" SACE CYLINDER	1			
28	VRC25142	CYLINDER, STEEPLE, 4.0" SAHE X 7.0" SACE	1			
29	VRC27141	HEAD, 4.0" SAHE CYLINDER	1			
30	VRC25402	O-RING, HEAD, CRANK OUTER-END, 4.0" SAHE CYLINDER	1	1	1	1
31	VRC25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
32	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
33	VRC25164	RETAINER, VALVE, SUCTION, 4.0" SAHE CYLINDER	1			
34	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1	1	1	1
35	VRC25503	COVER, VALVE, DISCHARGE, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
36	VRC25504	O-RING, COVER DISCHARGE VALVE, 4.5"-5.0" CYL. & 4.0"-4.5" SAHE	1	1	1	1
37	VRC25184	RETAINER, VALVE, DISCHARGE, 4.0" SAHE CYLINDER	1			
38	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
39	VRC26215A	VALVE, SUCTION, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26225A	VALVE, DISCHARGE, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
41	VRC24410	PISTON, 4.0" SAHE X 6.5"-7.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24401	RING, 4.0" PISTON	4		4	4
43	VRC24402	BAND, RIDER, 4.0" PISTON	1		1	1
44	VRC27146	SPACER, 4.0"-4.5" SAHE HEAD, 1/4"	1			
45	VRC27147	SPACER, 4.0"-4.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						

6.18 7.0 X 4.5-inch Steeple Cylinder Parts

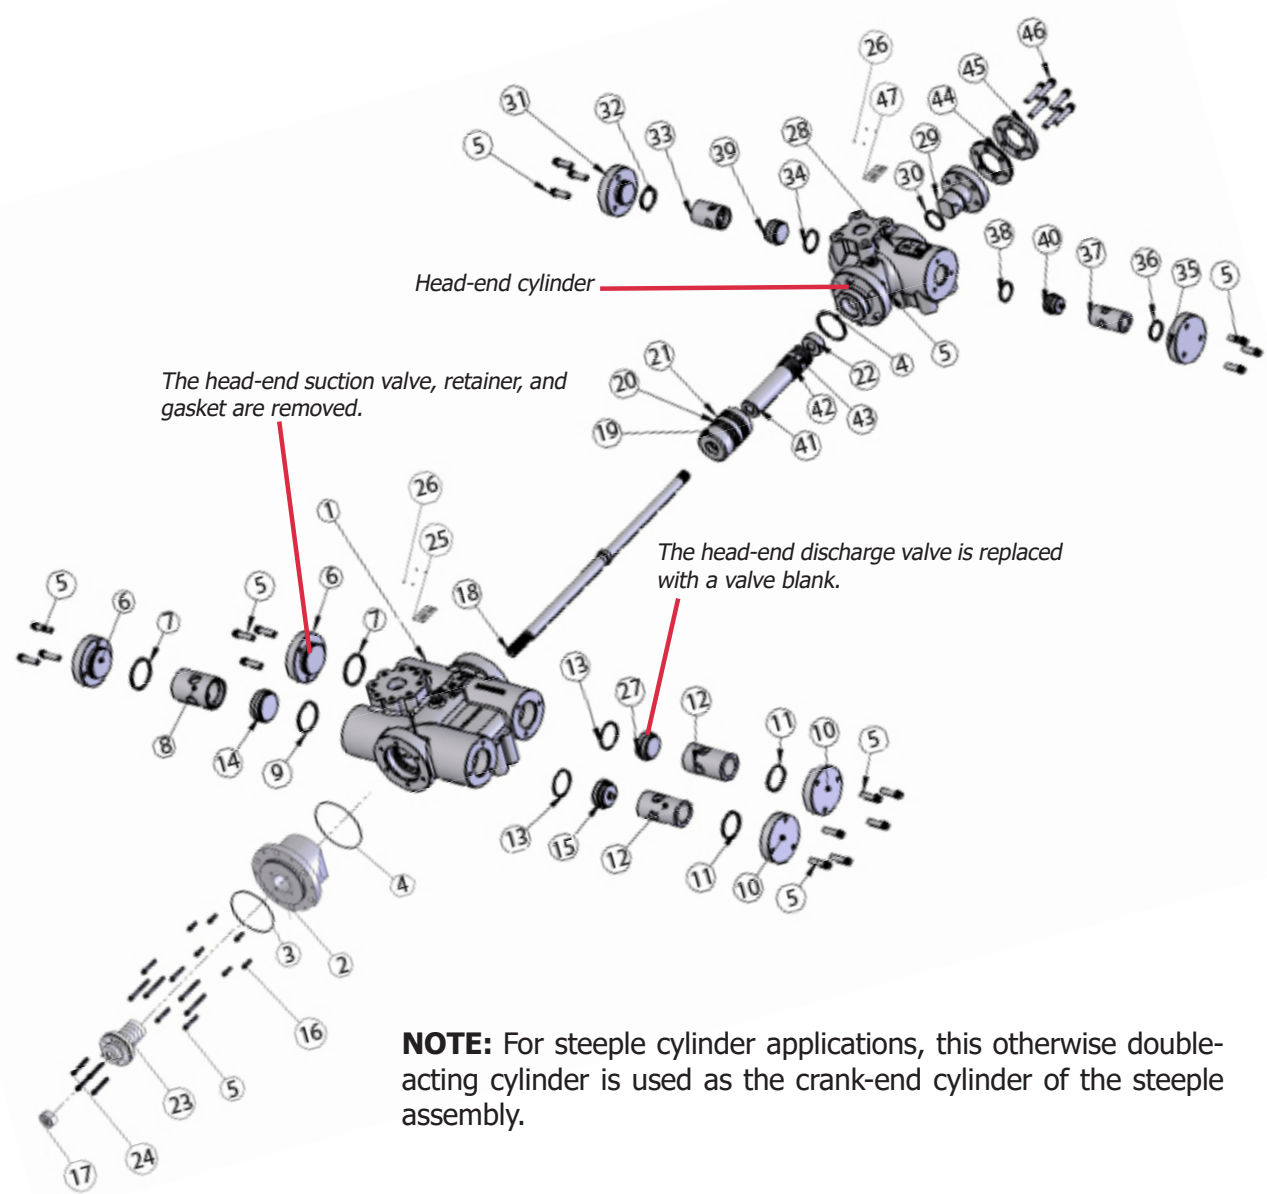


NOTE: For steeple cylinder applications, this otherwise double-acting cylinder is used as the crank-end cylinder of the steeple assembly.

7.0 X 4.5 STEEPLE CYLINDER					REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.		6 MOS	1 YR	2 YRS
	VRS25144A	CYLINDER, STEEPLE, 4.5" SAHE X 7.0" SACE ASSEMBLY					
1	VRS25700	CYLINDER, 7.0" DA	1				
2	VRS25701	HEAD, CRANK END, 7.0" CYLINDER	1				
3	VRC25262	O-RING, HEAD, CRANK-END TO FRAME	1	1			1
4	VRC25702	O-RING, HEAD, CRANK AND OUTER END, 7.0" CYLINDER	2	1	1		2
5	VRC25077	SCREW, VALVE COVER	32				
6	VRS25653	COVER, VALVE, SUCTION, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	2				
7	VRS25654	O-RING, COVER, SUCTION VALVE, 6.5", 7.0", 9.5", AND 10.0" CYL.	2	2	2		2
8	VRS25706	RETAINER, VALVE, SUCTION, 7.0" CYLINDER	1				
9	VRS25655	GASKET, SUCTION, VALVE SEAT, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	1	1	1		1


7.0 X 4.5 STEEPLE CYLINDER				REC. SPARE PARTS		
NO.	PART NO.	DESCRIPTION	QTY.	6 MOS	1 YR	2 YRS
10	VRS25703	COVER, VALVE, DISCHARGE, 6.5", 7.0", 9.5", AND 10.0" CYLINDER	2			
11	VRS25704	O-RING, COVER, DISCHARGE VALVE, 6.5", 7.0", 9.5", AND 10.0" CYL.	2	2	2	2
12	VRS25708	RETAINER, VALVE, DISCHARGE, 7.0" CYLINDER	2			
13	VRS25705	GASKET, DISCHARGE VALVE SEAT, 6.5", 7.0", 9.5", AND 10.0" CYL.	2	2	2	2
14	VRS26715A	VALVE, SUCTION, 6.5", 7.0", 9.5", AND 10.0" CYLINDER, MEDIUM *	1	1		1
15	VRS26725A	VALVE, DISCHARGE, 6.5", 7.0", 9.5", AND 10.0" CYLINDER, MEDIUM *	1	1		1
16	VRC25067	SCREW, HEAD, CRANK-END, 12-POINT	6			
17	VRC24909	NUT, JAM, PISTON ROD **	1			1
18	VRC24115	ROD, PISTON, 4.0"-4.5" SAHE X 6.5"-7.0" SACE	1			1
19	VRC24709	PISTON, 7.0" SACE STEEPLE CYLINDER, AL	1			1
20	VRC24701	RING, 7.0" PISTON	4		4	4
21	VRC24702	BAND, RIDER, 7.0" PISTON	1		1	1
22	VRC24919	NUT, PISTON	1			1
23	VRC23001A	CASE, PACKING ASSEMBLY ***	1			1
24	VRC23107	SCREW, PACKING CASE, 12-POINT	4			
25	VRS25110	NAMEPLATE, VRS CYLINDER	1			
26	VRC21606	PIN, NAMEPLATE	8			
27	VRS26799	BLANK, VALVE, DISCHARGE, 6.5"-7.0" SACE CYLINDER	1			
28	VRC25144	CYLINDER, STEEPLE, 4.5" SAHE X 7.0" SACE	1			
29	VRC27145	HEAD, 4.5" SAHE CYLINDER	1			
30	VRC25452	O-RING, HEAD, CRANK OUTER- END AND 4.5" SAHE CYLINDER	1	1	1	1
31	VRC25453	COVER, VALVE, SUCTION, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
32	VRC25454	O-RING, COVER, SUCTION VALVE 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
33	VRC25165	RETAINER, VALVE, SUCTION, 4.5" SAHE CYLINDER	1			
34	VRC25455	GASKET, SUCTION VALVE SEAT, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1	1	1	1
35	VRC25503	COVER, VALVE, DISCHARGE, 4.5"-5.0" CYLINDER, 4.0"-4.5" SAHE	1			
36	VRC25504	O-RING, COVER DISCHARGE VALVE, 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
37	VRC25185	RETAINER, VALVE, DISCHARGE, 4.5" SAHE CYLINDER	1			
38	VRC25505	GASKET, DISCHARGE VALVE SEAT, 4.5"-5.0" CYL., 4.0"-4.5" SAHE	1	1	1	1
39	VRC26215A	VALVE, SUCTION, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
40	VRC26225A	VALVE, DISCHARGE, 4.0" AND 4.5" SAHE CYLINDER MEDIUM *	1	1		1
41	VRC24415	PISTON, 4.5" SAHE X 6.5"-7.0" SACE STEEPLE CYLINDER, AL	1			1
42	VRC24451	RING, 4.5" PISTON	4		4	4
43	VRC24452	BAND, RIDER, 4.5" PISTON	1		1	1
44	VRC27146	SPACER, 4.0"-4.5" SAHE HEAD, 1/4"	1			
45	VRC27147	SPACER, 4.0"-4.5" SAHE HEAD, 1/2"	1			
46	VRC25027	SCREW, CYLINDER TO FRAME, SHORT AND STEEPLE HEAD	6			
47	VRC25100	NAMEPLATE, VRC CYLINDER	1			
* Actual site gas conditions may require LIGHT or HEAVY valve springs. See section 7, Valve Parts, Kits, Assemblies.						
** A heavier jam nut may be used if required for balancing. See section 5.19, Piston Rod Jam Nuts.						
*** Packing case ring kits are available. See section 4.11, Piston Rod Packing Ring Arrangement.						

6.19 Pressure Packing, Piston Rod for Steeple Cylinders

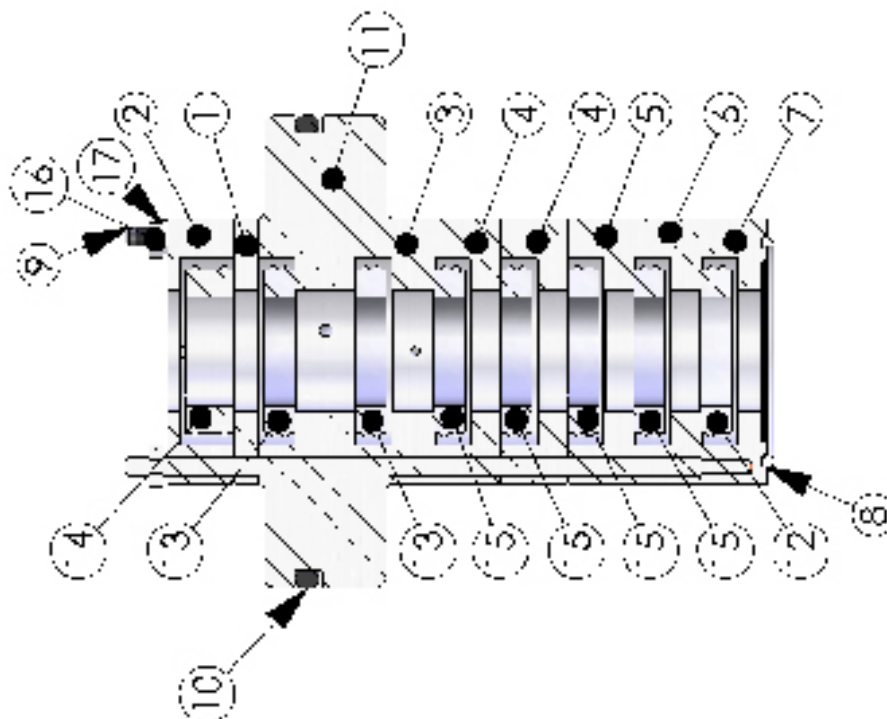

PISTON ROD PACKING CASE			
NO.	PART NO.	DESCRIPTION	QTY.
	VRC23001A	CASE, PACKING ASSEMBLY	1
1	VRC23321	SPACER, PACKING CASE	1
2	VRC23351	CUP, PACKING, WIPER	1
3	VRC23311	SPACER, PRIMARY VENT	1
4	VRC23241	CUP, PACKING, CENTER	2
5	VRC23231	CUP, PACKING LUBE	1
6	VRC23221	CUP, PACKING, PLAIN	1
7	VRC23211	CUP, PACKING, BOTTOM	1
8	VRC23106	GASKET, WIRE, PACKING CASE NOSE	1
9	VRC23118	STUD, PACKING CASE	3
10	VRC23104	O-RING, PACKING CASE, MOUNTING FLANGE	1
11	VRC23201	FLANGE, PACKING CASE	1
12	VRC23411	RING, PACKING, PRESSURE BREAKER	1
13	VRC23431	RING, PACKING, DOUBLE-ACTING	2
14	VRC23441	RING, PACKING, WIPER	1
15	VRC23421	RING, PACKING, SINGLE-ACTING	4
16	VRC23109	NUT, LOCK, PACKING CASE STUD	3
17	VRC23115	WASHER, SEAL, PACKING CASE STUD	3

6.20 Piston Rod Pressure Packing Kits for Steeple Cylinders

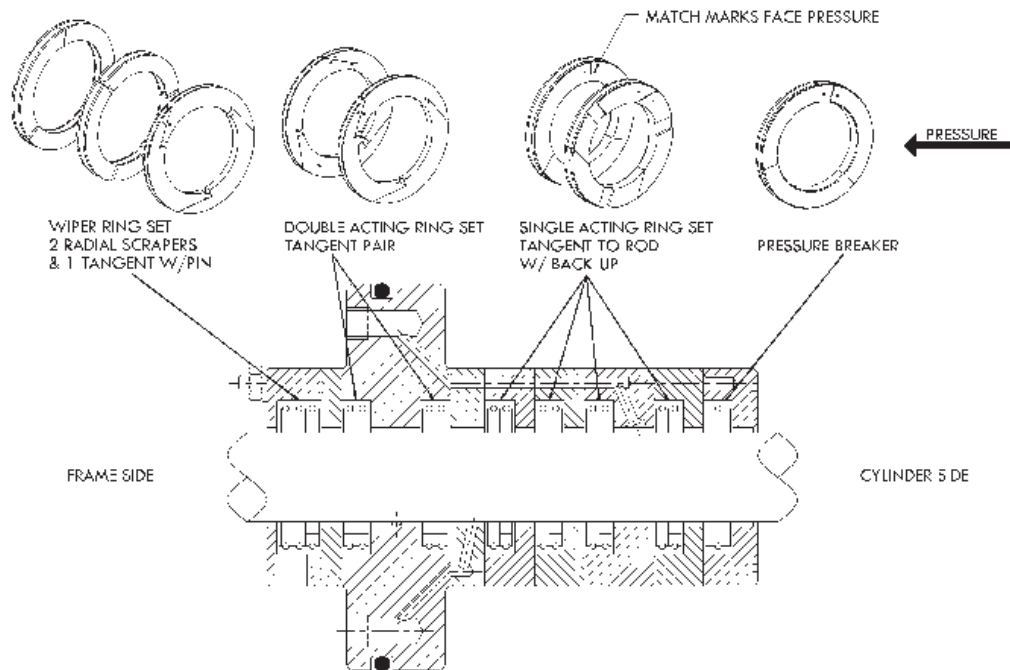

IMPORTANT: Packing rings are to be installed with the punch mark pointing toward the pressure side.

Frame Side								Pressure Side
Wiper Ring (1) Set of (3) (VRC23441)								
Double-acting Ring Set (2) (VRC23431)								
Primary Vent								
Single-acting Ring Sets (3) (VRC23421)								
Oil Supply								
Single-acting Ring Set (1) (VRC23421)								
Pressure Breaker Ring (VRC23411)								

PISTON ROD PRESSURE PACKING KITS FOR STEEPLE CYLINDERS		
PART NO.	DESCRIPTION	QTY.
VRC23001A	CASE, PACKING ASSEMBLY, COMPLETE	1
VRC23501	RING KIT, PACKING RENEWAL WITH PARTS INCLUDE: O-RING, NOSE GASKET, NUTS AND WASHERS	1 (Kit)
VRC23551	RING KIT, PACKING RENEWAL RINGS ONLY	1 (Kit)

6.21 Cylinder O-ring and Gasket Kits – Steeple Cylinders

CYLINDER O-RING AND GASKET KITS – STEEPLE CYLINDERS		
PART NO.	DESCRIPTION	QTY.
VRS25121K	O-RING AND GASKET KIT, 2.25" SAHE X 3.5" SACE, STEEPLE CYLINDER	1
VRS25122K	O-RING AND GASKET KIT, 2.25" SAHE X 4.0" SACE, STEEPLE CYLINDER	1
VRS25124K	O-RING AND GASKET KIT, 2.5" SAHE X 4.5" SACE, STEEPLE CYLINDER	1
VRS25131K	O-RING AND GASKET KIT, 3.0" SAHE X 4.5" SACE, STEEPLE CYLINDER	1
VRS25135K	O-RING AND GASKET KIT, 3.5" SAHE X 4.5" SACE, STEEPLE CYLINDER	1
VRS25125K	O-RING AND GASKET KIT, 2.5" SAHE X 5.0" SACE, STEEPLE CYLINDER	1
VRS25132K	O-RING AND GASKET KIT, 3.0" SAHE X 5.0" SACE, STEEPLE CYLINDER	1
VRS25136K	O-RING AND GASKET KIT, 3.5" SAHE X 5.0" SACE, STEEPLE CYLINDER	1
VRS25133K	O-RING AND GASKET KIT, 3.0" SAHE X 5.5" SACE, STEEPLE CYLINDER	1
VRS25137K	O-RING AND GASKET KIT, 3.5" SAHE X 5.5" SACE, STEEPLE CYLINDER	1
VRS25134K	O-RING AND GASKET KIT, 3.0" SAHE X 6.0" SACE, STEEPLE CYLINDER	1
VRS25138K	O-RING AND GASKET KIT, 3.5" SAHE X 6.0" SACE, STEEPLE CYLINDER	1
VRS25141K	O-RING AND GASKET KIT, 4.0" SAHE X 6.5" SACE, STEEPLE CYLINDER	1
VRS25143K	O-RING AND GASKET KIT, 4.5" SAHE X 6.5" SACE, STEEPLE CYLINDER	1
VRS25142K	O-RING AND GASKET KIT, 4.0" SAHE X 7.0" SACE, STEEPLE CYLINDER	1
VRS25144K	O-RING AND GASKET KIT, 4.5" SAHE X 7.0" SACE, STEEPLE CYLINDER	1
<p>All steeple cylinder O-rings and gasket kits include:</p> <ul style="list-style-type: none"> 1 – O-ring, head, crank-end to frame 2 – O-rings, head, crank and outer end 2 – O-rings, cover, suction valve, CE 2 – O-rings, cover, discharge valve, CE 1 – Gasket, suction valve, CE 2 – Gaskets, discharge valve, CE 1 – O-ring, cover, suction valve, HE 1 – O-ring, cover discharge valve, HE 1 – Gasket, suction valve, HE 1 – Gasket, discharge valve, HE 		

6.22 Steeple Cylinder and Piston/Rod Assemblies


STEEPLE CYLINDER AND PISTON/ROD ASSEMBLIES (RECIPROCATING WEIGHT)		
PART NO.	DESCRIPTION	QTY.
2.5 X 1.375 STEEPLE CYLINDER AND PISTON / ROD		
VRS25112A	CYLINDER STEEPLE 1.375" SAHE X2.5" SACE ASSEMBLY	1
VRC24112A-CI	PISTON AND ROD ASSEMBLY, 2.5CI/1.375CI ST	1
3.0 X 1.375 STEEPLE CYLINDER AND PISTON / ROD		
VRS25113A	CYLINDER STEEPLE 1.375 HEX 3.0 CE ASSEMBLY	1
VRC24113A-CI	PISTON AND ROD ASSEMBLY, 3.0CI/1.375CI ST	1
3.5 X 2.25 STEEPLE CYLINDER AND PISTON / ROD		
VRS25121A	CYLINDER, STEEPLE, 2.25" SAHE X 3.5" SACE, ASSEMBLY	1
VRC24121A-CI/AL	PISTON AND ROD ASSEMBLY, 3.5"CI/2.25"AL STEEPLE CYLINDER (20.20#)	1
4.0 X 2.25 STEEPLE CYLINDER AND PISTON / ROD		
VRS25122A	CYLINDER, STEEPLE, 2.25" SAHE X 4.0" SACE, ASSEMBLY	1
VRC24122A-CI/AL	PISTON AND ROD ASSEMBLY, 4.0"CI/2.25"AL STEEPLE CYLINDER (23.53#)	1
4.5 X 2.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25124A	CYLINDER, STEEPLE, 2.5" SAHE X 4.5" SACE, ASSEMBLY	1
VRC24124A-AL/AL	PISTON AND ROD ASSEMBLY, 4.5"AL/2.5"AL STEEPLE CYLINDER (18.09#)	1
4.5 X 3.0 STEEPLE CYLINDER AND PISTON / ROD		
VRS25131A	CYLINDER, STEEPLE, 3.0" SAHE X 4.5" SACE, ASSEMBLY	1
VRC24131A-AL/AL	PISTON AND ROD ASSEMBLY, 4.5"AL/3.0"AL STEEPLE CYLINDER (19.00#)	1
4.5 X 3.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25135A	CYLINDER, STEEPLE, 3.5" SAHE X 4.5" ASSEMBLY	1
VRC24135A-AL/AL	PISTON AND ROD ASSEMBLY, 4.5"AL/3.5"AL STEEPLE CYLINDER (20.15#)	1
5.0 X 2.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25125A	CYLINDER, STEEPLE, 2.5" SAHE X 5.0" SACE, ASSEMBLY	1
VRC24125A-AL/AL	PISTON AND ROD ASSEMBLY, 5.0"AL/2.5"AL STEEPLE CYLINDER (19.21#)	1
5.0 X 3.0 STEEPLE CYLINDER AND PISTON / ROD		
VRS25132A	CYLINDER, STEEPLE, 3.0" SAHE X 5.0" SACE, ASSEMBLY	1
VRC24132A-AL/AL	PISTON AND ROD ASSEMBLY, 5.0"AL/3.0"AL STEEPLE CYLINDER (20.68#)	1
VRC24132A-CI/AL	PISTON AND ROD ASSEMBLY, 5.0"CI/3.0"AL STEEPLE CYLINDER (33.31#)	1
5.0 X 3.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25136A	CYLINDER, STEEPLE, 3.5" SAHE X 5.0" SACE, ASSEMBLY	1
VRC24136A-AL/AL	PISTON AND ROD ASSEMBLY, 5.0"AL/3.5"AL STEEPLE CYLINDER (21.83#)	1
VRC24136A-CI/AL	PISTON AND ROD ASSEMBLY, 5.0"CI/3.5"AL STEEPLE CYLINDER (34.46#)	1
All piston/rod assemblies include: Pistons Piston rod Piston rings Rider bands Piston nut Piston rod jam nut (standard)*		
* A heavier jam nut may be required for balancing.		

STEEPLE CYLINDER AND PISTON/ROD ASSEMBLIES (RECIPROCATING WEIGHT)

PART NO.	DESCRIPTION	QTY.
5.5 X 3.0 STEEPLE CYLINDER AND PISTON / ROD		
VRS25133A	CYLINDER, STEEPLE, 3.0" SAHE X 5.5" SACE, ASSEMBLY	1
VRC24133A-AL/AL	PISTON AND ROD ASSEMBLY, 5.5"AL/3.0"AL STEEPLE CYLINDER (22.61#)	1
5.5 X 3.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25137A	CYLINDER, STEEPLE, 3.5" SAHE X 5.5" SACE, ASSEMBLY	1
VRC24137A-AL/AL	PISTON AND ROD ASSEMBLY, 5.5"AL/3.5"AL STEEPLE CYLINDER (23.79#)	1
6.0 X 3.0 STEEPLE CYLINDER AND PISTON / ROD		
VRS25134A	CYLINDER, STEEPLE, 3.0" SAHE X 6.0" SACE, ASSEMBLY	1
VRC24134A-AL/AL	PISTON AND ROD ASSEMBLY, 6.0"AL/3.0"AL STEEPLE CYLINDER (24.07#)	1
6.0 X 3.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25138A	CYLINDER, STEEPLE, 3.5" SAHE X 6.0" SACE, ASSEMBLY	1
VRC24138A-AL/AL	PISTON AND ROD ASSEMBLY, 6.0"AL/3.5"AL STEEPLE CYLINDER (25.25#)	1
6.5 X 4.0 STEEPLE CYLINDER AND PISTON / ROD		
VRS25141A	CYLINDER, STEEPLE, 6.5" SAHE X 4.0" SACE, ASSEMBLY	1
VRC24141A-AL/AL	PISTON AND ROD ASSEMBLY, 6.5"AL/4.0"AL STEEPLE CYLINDER (30.31#)	1
6.5 X 4.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25143A	CYLINDER, STEEPLE, 4.5" SAHE X 6.5" SACE, ASSEMBLY	1
VRC24143A-AL/AL	PISTON AND ROD ASSEMBLY, 6.5"AL/4.5"AL STEEPLE CYLINDER (33.67#)	1
7.0 X 4.0 STEEPLE CYLINDER AND PISTON / ROD		
VRS25142A	CYLINDER, STEEPLE, 4.0" SAHE X 7.0" SACE, ASSEMBLY	1
VRC24142A-AL/AL	PISTON AND ROD ASSEMBLY, 7.0"AL/4.0"AL STEEPLE CYLINDER (21.83#)	1
7.0 X 4.5 STEEPLE CYLINDER AND PISTON / ROD		
VRS25144A	CYLINDER, STEEPLE, 4.5" SAHE X 7.0" SACE, ASSEMBLY	1
VRC24144A-AL/AL	PISTON AND ROD ASSEMBLY, 7.0"AL/4.5"AL STEEPLE CYLINDER (35.13#)	1
* All piston/rod assemblies include: Pistons Piston rod Piston rings Rider bands Piston nut Piston rod jam nut (standard)*		
* A heavier jam nut may be required for balancing.		


7 VALVE PARTS, KITS, ASSEMBLIES

7.1 Valve Parts – Suction Valves

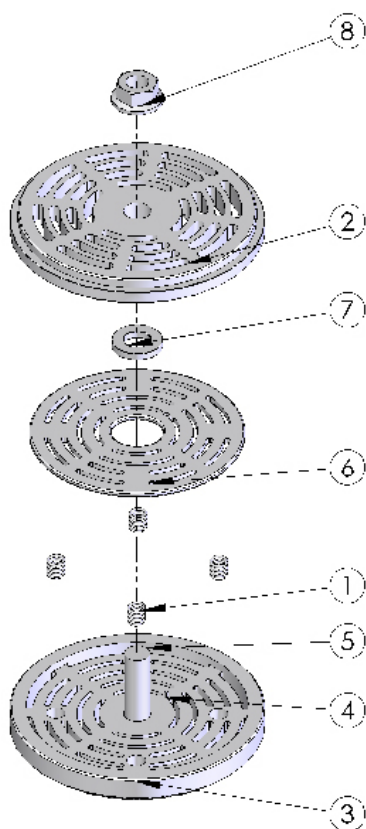

TYPICAL SUCTION VALVE PARTS			
ITEM NO.	PART NO.	DESCRIPTION	QTY.
1A	VRC26XX1	SPRING, CLOSING, VALVE, LIGHT	3-6
1B	VRC26XX3	SPRING, CLOSING, VALVE, MEDIUM LIGHT	3-6
1C	VRC26XX5	SPRING, CLOSING, VALVE, MEDIUM	3-6
1D	VRC26XX7	SPRING, CLOSING VALVE, HEAVY	3-6
2	VRC26XXX	SEAT, VALVE, SUCTION	1
3	VRC26XXX	GUARD, VALVE, SUCTION	1
4	VRC26XXX	PIN, LOCATING, VALVE	1
5	VRC26XXX	BOLT, CENTER, VALVE	1
6	VRC26XXX	PLATE, VALVE, SUCTION	1
7	VRC26XXX	RING, GUIDE, VALVE	1
8	VRC26XXX	NUT, LOCK, VALVE	1
NOTE: Part numbers are specific to each model valve, depending on what size cylinder they are for. Valve repair kits are available, see section 7.3.			

7.2 Valve Parts – Discharge Valves

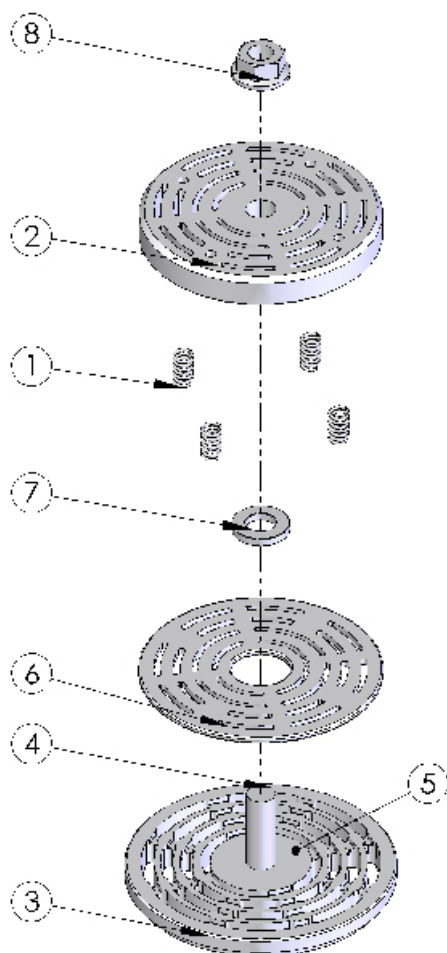

TYPICAL DISCHARGE VALVE PARTS			
ITEM NO.	PART NO.	DESCRIPTION	QTY.
1A	VRC26XX1	SPRING, CLOSING, VALVE, LIGHT	3-6
1B	VRC26XX3	SPRING, CLOSING, VALVE, MEDIUM LIGHT	3-6
1C	VRC26XX5	SPRING, CLOSING, VALVE, MEDIUM	3-6
1D	VRC26XX7	SPRING, CLOSING, VALVE, HEAVY	3-6
2	VRC26XXX	GUARD, VALVE, DISCHARGE	1
3	VRC26XXX	SEAT, VALVE, DISCHARGE	1
4	VRC26XXX	BOLT, CENTER, VALVE	1
5	VRC26XXX	PIN, LOCATING, VALVE (NOT SHOWN)	1
6	VRC26XXX	PLATE, VALVE, DISCHARGE	1
7	VRC26XXX	RING, GUIDE, VALVE	1
8	VRC26XXX	NUT, LOCK, VALVE	1
NOTE: Part numbers are specific to each model valve, depending on what size cylinder they are for. Valve repair kits are available, see section 7.3.			

7.3 Valve Complete Assemblies and Repair Kits

7.3.1 Valve Types

Arrow compressors use valves made by Hoerbiger Corporation of America, Inc.

- VRC valves are Hoerbiger Model CRO valves.
- VRS valves are Hoerbiger Model CRE valves.

VRC cylinders use VRC valves, and VRS cylinders use VRS valves. Although they may be similar in size, they are NOT interchangeable. Some special cylinders are equipped to use VRS valves in VRC cylinders with special valve retainers designed for this purpose.

7.3.2 Complete Valve Assembly Parts

Complete valve assembly part numbers can be found in the parts list for the specific cylinder size that the valves are needed for. All complete valve assemblies have a part number that ends with the suffix "A" to designate a complete assembly.

7.3.3 Valve Repair Kits

Valve repair kits have the same part number as the valve assembly, but will end with the suffix "K" to designate that it is a repair kit (in place of the "A" suffix used to indicate an assembly).

Valve repair kits contain the normal-wear parts to repair one valve, and consist of:


- 1 – Plate, Valve
- 1 – Springs, Valve (set of all springs required for the specific valve)
- 1 – Nut, Lock
- 1 – Ring, Guide
- 1 – Pin, Locating

NOTE:

Arrow valve repair kits DO NOT include valve seat gaskets. It is recommended that new valve seat gaskets be used every time a valve is installed. Refer to the specific cylinder size assembly parts list for Gasket, Suction, and Discharge Valve Seat part numbers.

Arrow valve repair kits DO NOT include valve cover O-rings which are reusable, but can be damaged during valve maintenance. They are recommended spare parts to keep on hand. Refer to the specific cylinder size assembly parts lists for O-ring, Cover, Suction, and Discharge Valve part numbers.

7.4 Concentric Valve Kit for 1.125-inch Cylinder

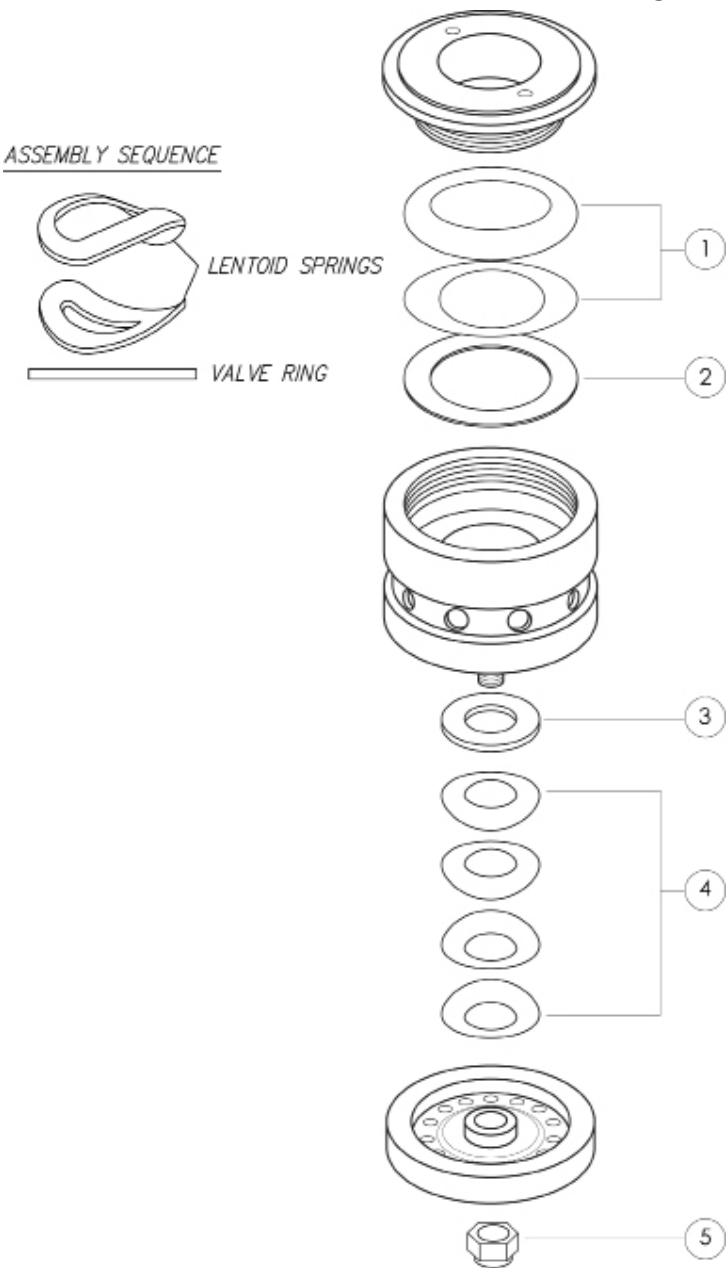

CONCENTRIC VALVE KIT - for 1.125" Cylinder		
PART NO.	DESCRIPTION	QTY.
VRCC6125A	Valve, Concentric. 1.125" CNG Assembly	
VRCC6125K	Concentric Valve Repair Kit	
VRCC6125	1 Lentoid springs, suction	2
	2 Suction plate / ring	1
	3 Discharge plate / ring	1
	4 Lentoid springs, discharge	4
	5 Lock nut	1

NOTE: Arrow Valve Repair Kits do not include valve seat gaskets. It is recommended that new valve seat gaskets be used every time a valve is installed. Refer to the specific cylinder size assembly parts list for "Gasket, Suction and Discharge Valve Seat" part numbers.

7.5 Added Clearance Retainer Kits

7.5.1 About Added Clearance Retainer Kits


Clearance can be added to the crank-end steeple cylinder using the added clearance retainer kits. Clearance can be added in 8 percent increments, by using the 8% valve spacer, or the 16% valve spacer or the 24% valve spacer. Install a valve seat gasket under the spacer and on top of the spacer (under the valve).

For 8% added clearance, install the 8% spacer, both gaskets, the added clearance retainer, and both retainer extensions.

For 16% added clearance, install the 16% spacer, both gaskets, the added clearance retainer, and one retainer extension.

For 24% added clearance, install the 24% spacer, both gaskets, and the added clearance retainer.

7.5.2 Added Clearance Retainer Kit Contents

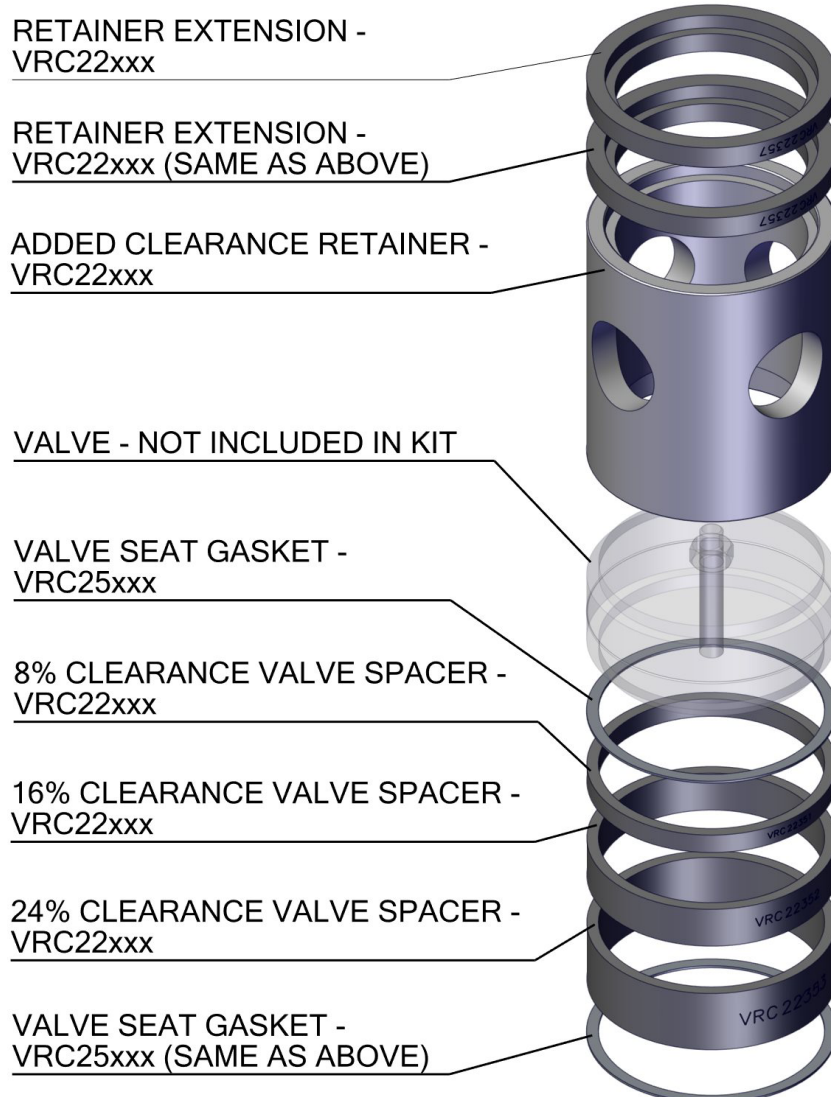

ADDED CLEARANCE RETAINER KIT FOR SACE STEEPLE CYLINDERS

PART NO.	DESCRIPTION		QTY.
3.5 SACE CYLINDER – SUCTION VALVE			
VRS22356K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 3.5" SACE CYLINDER		1
VRC22351	1	Spacer, Valve, 8% Clearance, 3.5" SACE Cylinder	
VRC22352	1	Spacer, Valve, 16% Clearance, 3.5" SACE Cylinder	
VRC22353	1	Spacer, Valve, 24% Clearance, 3.5" SACE Cylinder	
VRS22356	1	Retainer, Added Clearance, Suction Valve, 3.5" SACE Cylinder	
VRC22357	2	Retainer Extension, 3.5" SACE Cylinder	
VRC25355	2	Gasket, Suction Valve Seat, 3.5 - 4.0" Cylinder	
VRS29150	1	Instructions, Added Clearance Retainer Kit	
4.0 SACE CYLINDER – SUCTION VALVE			
VRS22406K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 4.0" SACE CYLINDER		1
VRC22401	1	Spacer, Valve, 8% Clearance, 4.0" SACE Cylinder	
VRC22402	1	Spacer, Valve, 16% Clearance, 4.0" SACE Cylinder	
VRC22403	1	Spacer, Valve, 24% Clearance, 4.0" SACE Cylinder	
VRS22406	1	Retainer, Added Clearance, Suction Valve, 4.0" SACE Cylinder.	
VRC22407	2	Retainer Extension, 4.0" SACE Cylinder	
VRC25355	2	Gasket, Suction Valve Seat, 3.5 - 4.0" Cylinder	
VRS29150	1	Instructions, Added Clearance Retainer Kit	
4.5 SACE CYLINDER – SUCTION VALVE			
VRS22456K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 4.5" SACE CYLINDER		1
VRC22451	1	Spacer, Valve, 8% Clearance, 4.5" SACE Cylinder	
VRC22452	1	Spacer, Valve, 16% Clearance, 4.5" SACE Cylinder	
VRC22453	1	Spacer, Valve, 24% Clearance, 4.5" SACE Cylinder	
VRS22456	1	Retainer, Added Clearance, Suction Valve, 4.5" SACE Cylinder	
VRC22457	2	Retainer Extension, 4.5" SACE Cylinder	
VRC25455	2	Gasket, Suction Valve Seat, 4.5 - 5.0" Cylinder	
VRS29150	1	Instructions, Added Clearance Retainer Kit	
5.0 SACE CYLINDER – SUCTION VALVE			
VRS22506K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 5.0" SACE CYLINDER		1
VRC22501	1	Spacer, Valve, 8% Clearance, 5.0" SACE Cylinder	
VRC22502	1	Spacer, Valve, 16% Clearance, 5.0" SACE Cylinder	
VRC22503	1	Spacer, Valve, 24% Clearance, 5.0" SACE Cylinder	
VRS22506	1	Retainer, Added Clearance, Suction Valve, 5.0" SACE Cylinder	
VRC22507	2	Retainer Extension, 5.0" SACE Cylinder	
VRC25455	2	Gasket, Suction Valve Seat, 4.5 - 5.0" Cylinder	
VRS29150	1	Instructions, Added Clearance Retainer Kit	

ADDED CLEARANCE RETAINER KIT FOR SACE STEEPLE CYLINDERS

PART NO.	DESCRIPTION	QTY.
5.5 SACE CYLINDER – SUCTION VALVE		
VRS22556K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 5.5" SACE CYLINDER	1
VRC22551	1 Spacer, Valve, 8% Clearance, 5.5" SACE Cylinder	
VRC22552	1 Spacer, Valve, 16% Clearance, 5.5" SACE Cylinder	
VRC22553	1 Spacer, Valve, 24% Clearance, 5.5" SACE Cylinder	
VRS22556	1 Retainer, Added Clearance, Suction Valve, 5.5" SACE Cylinder	
VRC22557	2 Retainer Extension, 5.5" SACE Cylinder	
VRC25555	2 Gasket, Suction Valve Seat, 5.5 - 6.0" Cylinder	
VRS29150	1 Instructions, Added Clearance Retainer Kit	
6.0 SACE CYLINDER – SUCTION VALVE		
VRS22606K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 6.0" SACE CYLINDER	1
VRC22601	1 Spacer, Valve, 8% Clearance, 6.0" SACE Cylinder	
VRC22602	1 Spacer, Valve, 16% Clearance, 6.0" SACE Cylinder	
VRC22603	1 Spacer, Valve, 24% Clearance, 6.0" SACE Cylinder	
VRS22606	1 Retainer, Added Clearance, Suction Valve, 6.0" SACE Cylinder	
VRC22607	2 Retainer Extension, 6.0" SACE Cylinder	
VRC25555	2 Gasket, Suction Valve Seat, 5.5 - 6.0" Cylinder	
VRS29150	1 Instructions, Added Clearance Retainer Kit	
6.5 SACE CYLINDER – SUCTION VALVE		
VRS22656K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 6.5" SACE CYLINDER	1
VRS22651	1 Spacer, Valve, 8% Clearance, 6.5" SACE Cylinder	
VRS22652	1 Spacer, Valve, 16% Clearance, 6.5" SACE Cylinder	
VRS22653	1 Spacer, Valve, 24% Clearance, 6.5" SACE Cylinder	
VRS22656	1 Retainer, Added Clearance, Suction Valve, 6.5" SACE Cylinder	
VRS22657	2 Retainer Extension, 6.5" SACE Cylinder	
VRS25655	2 Gasket, Suction Valve Seat, 6.5", 7.0", 9.5", and 10.0" Cylinder	
VRS29150	1 Instructions, Added Clearance Retainer Kit	
7.0 SACE CYLINDER – SUCTION VALVE		
VRS22706K	KIT, RETAINER, ADDED CLEARANCE, SUCTION VALVE, 7.0" SACE CYLINDER	1
VRS22701	1 Spacer, Valve, 8% Clearance, 7.0" SACE Cylinder	
VRS22702	1 Spacer, Valve, 16% Clearance, 7.0" SACE Cylinder	
VRS22703	1 Spacer, Valve, 24% Clearance, 7.0" SACE Cylinder	
VRS22706	1 Retainer, Added Clearance, Suction Valve, 7.0" SACE Cylinder	
VRS22707	2 Retainer Extension, 7.0" SACE Cylinder	
VRS25655	2 Gasket, Suction Valve Seat, 6.5", 7.0", 9.5", and 10.0" Cylinder	
VRS29150	1 Instructions, Added Clearance Retainer Kit	

8 CYLINDER ASSEMBLY

8.1 Steeple Piston and Cylinder Removal

When removing a piston from a steeple cylinder, it will be necessary to first remove the outboard head-end cylinder.

For further instructions, simply REVERSE the steeple Cylinder Assy. and Installation procedures found in section 8.1.1.

For piston rod removal and disassembly, see section 8.2, Steeple Cylinder – Piston and Rod Disassembly.

8.1.1 Steeple Cylinder Assembly and Installation – Mounting Crank-end and Head-end Cylinders

NOTE: The crank-end cylinder is actually a double-acting cylinder converted to be use as the crank-end cylinder of the steeple.

1. Attach crank-end cylinder to frame.
2. After the crank-end cylinder is attached to the frame, the steeple piston and rod assembly **MUST** be installed prior to attaching the steeple cylinder to the crank-end cylinder. If the steeple piston and piston rod is **NOT** assembled, and is not installed, **YOU MUST** assemble the steeple piston and piston rod at this point and install it in the crank-end cylinder.



NOTE: If you have not assembled the steeple piston and piston rod, see section 8.2.1 Steeple Cylinder – Piston and Rod Assembly and Installation.

3. Lubricate both the crank-end cylinder bore and the steeple cylinder bore before installing.
4. Attach the steeple cylinder to the crank-end cylinder.


NOTE: If available, use alignment studs to make attachment to the crank-end cylinder easier.

The alignment studs used are **NOT** necessary for attaching the steeple cylinder to the head-end of the crank-end cylinder, but is mentioned here as an aid.


Insert the steeple cylinder so that the cylinder lube hole is at the top.

IMPORTANT: Support the steeple cylinder during removal and installation so that no excessive weight is exerted on the piston and piston rod. Excessive weight to the piston rod can cause bending and damage the rod.

5. Ease the steeple cylinder toward the crank-end cylinder. Compress the piston rings of the steeple (smaller) piston with your fingers and slide the cylinder onto the piston. Be careful not to pinch your fingers.

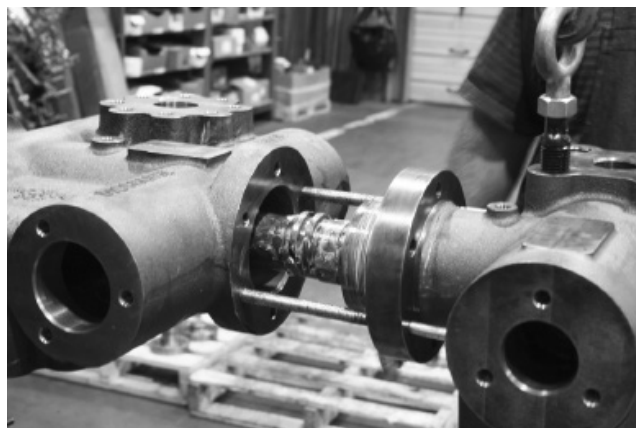

6. After installing the steeple cylinder and before tightening fasteners, check level for both the steeple cylinder and the crank-end cylinder. Place a level on the suction flange making sure that the suction flanges on both cylinders are level.

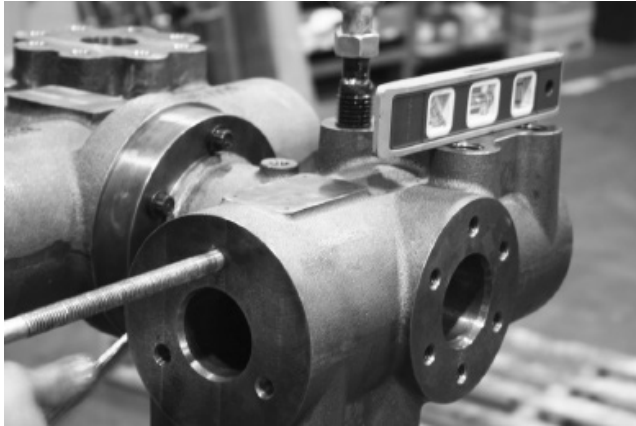


7. Check piston rod run-out (see section 4.10.13, Piston Rod Run-out).
8. Prepare the moveable head by lubricating the O-ring.
9. Insert the moveable head into the head-end of the steeple cylinder making sure that the flats are in line with the valve ports.



10. Prior to installing screws, place the two head spacers on the outside of the head (for base clearance) and attach to the head with the screws.

NOTE: If added clearance is required, insert

the appropriate spacer or spacers underneath the moveable head.

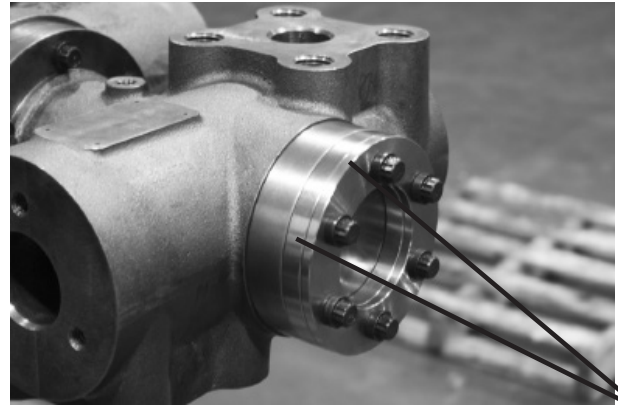

11. Torque all fasteners to 82 ft.-lbs. using a crisscross torque pattern.
12. Arrow's two smallest double-acting cylinders and all of the steeple cylinders have the capability of adding clearance using spacers under the cylinder head. Cylinders are shipped with an assortment of 1/4" and 1/2" spacers installed on the outside of the cylinder head.
13. To add clearance, remove the cylinder head and move the appropriate number of spacers from outside the head to under the head and install the head back on the cylinder.
14. NOTE that the 1/2" spacers are treated as two 1/4" spacers. Therefore, if the application calls for two 1/4" spacers, this can physically be done with one 1/2" spacer. Refer to Table 8.1, Spacer Clearance, for the percent (%) clearance added with each 1/4" spacer increment.

SPACER CLEARANCE			
CYLINDER SIZE (INCHES)	MAXIMUM ADDED CLEARANCE %	% CLEARANCE PER 1/4-INCH SPACER	MAXIMUM NUMBER OF SPACERS
2.5 DA	44.0	8.8	5
3.0 DA	40.0	8.0	5
2.25 SAHE	26.4	8.8	3
2.5 SAHE	26.4	8.8	3
3.0 SAHE	25.8	8.6	3
3.5 SAHE	25.8	8.6	3
4.0 SAHE	25.8	8.6	3
4.5 SAHE	25.8	8.6	3

Table 8.1. Spacer Clearance

8.2 Steeple Cylinder – Piston and Rod Disassembly

The same piston and rod clamp (VRC29494) that was used in the double-acting piston and piston rod disassembly and assembly can be used with the steeple piston and piston rod.

1. Clamp the steeple piston and rod assembly in the piston rod clamp device. This device will properly hold the rod in place and prevent any damage to the rod. Follow these instructions for using the piston rod clamp:
2. Open the jaws of the rod clamp device by TIGHTENING the setscrews.
3. Slide the clamp onto the steeple piston rod as close as possible to the piston. Close the jaws of the clamp by loosening the setscrews.




4. Back off the setscrews but do NOT remove.
5. Insert the clamp into a large vise so that the pressure is applied to the shoulder of the clamp.



6. Loosen the piston nut (VRC24919) using the piston nut adaptor tool (VRC29490) and a 1" socket wrench.
7. Remove the pistons (both large and small piston) from the rod. The pistons will slip off the end of the rod.
8. Remove the clamp from the vise.



9. Tighten the setscrew in the clamp to open the jaws.
10. Remove the clamp from the rod.

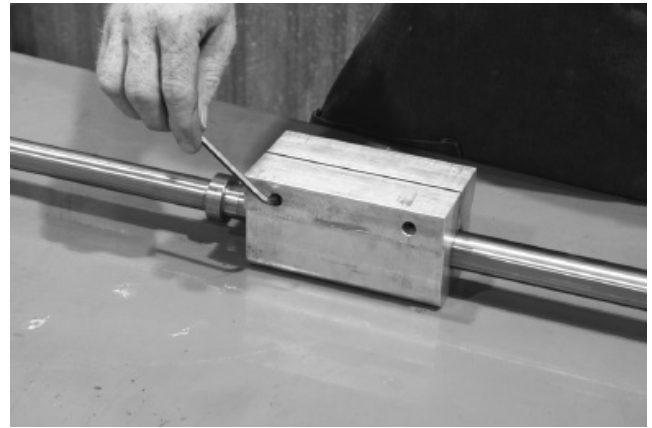

8.2.1 Steeple Cylinder – Piston and Rod Assembly and Installation

Preparation


1. Clean the piston making sure that all surfaces are free from dirt and metal shavings.
2. Clean piston rod and remove any excessive corrosion inhibitor oil from the threaded area.
3. Inspect both piston and rod making sure both are clean and free from debris and metal shavings. Dirt and debris in this area will cause excessive packing wear and cylinder bore abrasion damage.

8.2.2 Steeple Piston and Rod Assembly

1. Place the piston on its side. Starting with the larger piston, insert the piston rod in the large piston. The piston rod should be inserted through the large piston's smallest counter sunk hole.
2. Carefully insert the piston rod until it bottoms out.



3. After inserting the large piston, insert the smaller piston on the same end of the rod.

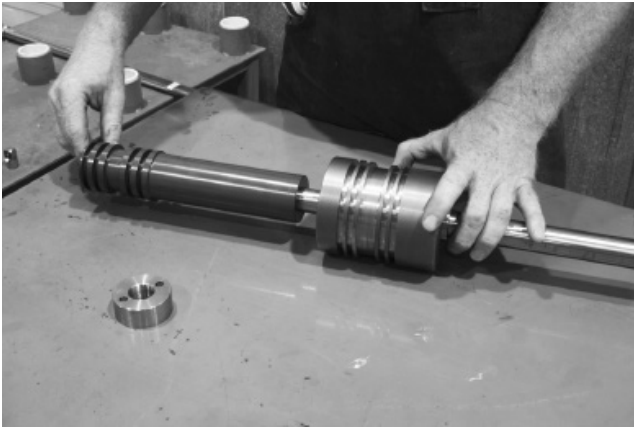

NOTE: Insert the smaller piston with ring lands toward the end of the rod.


4. Thread the piston nut (VRC24919) onto the piston rod. Do NOT lubricate the piston nut threads.

NOTE: Use piston nut VRC24911 on 2.25 pistons ONLY.

5. Using the piston nut adapter tool tighten the piston nut by hand.
6. Insert the piston rod into the rod clamp and place both into a vise and tighten.



7. Using the piston nut adapter tool and a 1" socket and torque wrench, torque the piston nut to 330 ft.-lbs.

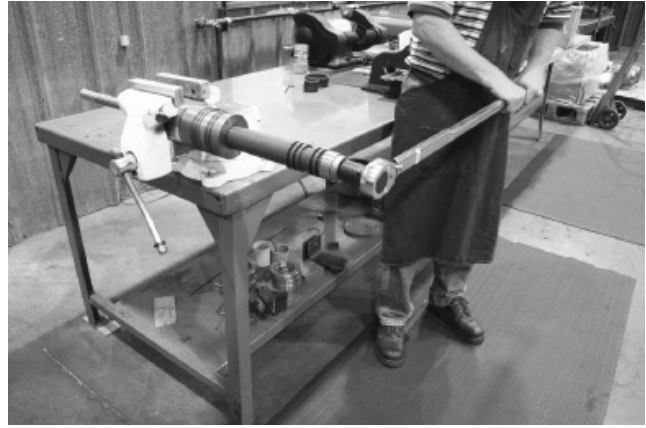

8. While the piston rod assembly is still in the clamp and vise, insert the 2 piston rings on the large piston.



9. Insert the rider band on the center groove of the large piston.
10. Insert the remaining two piston rings on the large piston.

11. Repeat the same procedure for inserting the piston rings and rider band for the smaller piston.
12. Stagger all piston ring gaps approximately 180° apart. The piston ring gaps should NOT be lined up.




8.2.3 Steeple Piston and Rod Installation


1. Apply lubricant to the pistons of the steeple piston and rod assembly.
2. Apply lubricant in the crank-end cylinder bore.
3. Insert the steeple piston and rod assembly (with piston rings) into the crank-end cylinder.

NOTE: The threaded crosshead end of the rod is 1/8" (3 mm) smaller than the inside diameter of the packing however, it is recommend to use the piston rod entering sleeve (VRC29492) for this particular installation procedure.

4. Compress the piston rings with your fingers as you carefully slide the piston rod assembly into the crank-end cylinder. Be careful not to pinch your fingers.
5. Make sure the crosshead is all the way back of its throw.
6. Remove the entering sleeve tool from the piston rod.

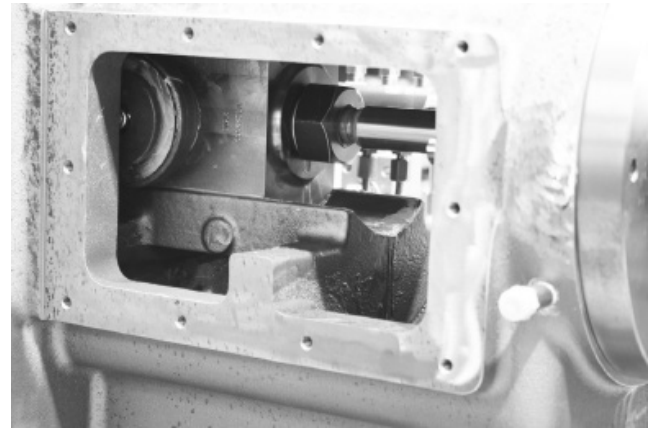

7. Install the piston rod jam nut (VRC24909) on the piston rod. Make sure that the raised flat surface of the nut will be against the crosshead.

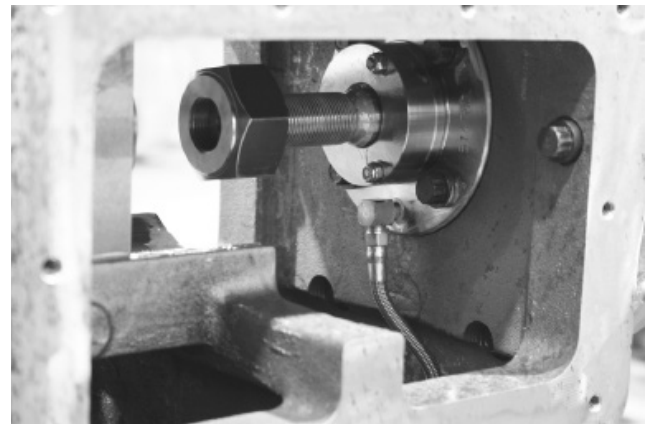

8. Screw the piston rod jam nut to the end of the threads toward the packing.
9. Using the piston nut adaptor tool (VRC29490) screw piston rod assembly into the crosshead while the crosshead is all the way to the back of its throw.



NOTE: Continue screwing in piston rod assembly until piston is approximately .0625 from crank-end head (see section 4.10.10, Setting Initial Piston Clearance).

8.3 Steeple Cylinder – Valve Removal

CAUTION: Before removing any valve cover, be sure that ALL pressure from the compressor cylinder has been vented. The pressure must be completely vented from both the suction and discharge passages of the cylinder.

1. Slightly loosen all the screws on each valve cover. With all the screws loosened, the cover should stay in its original position. If there are signs of the cover pushing out on its own STOP IMMEDIATELY! You MUST take proper steps to completely vent the cylinder before proceeding (see CAUTION above).
2. After the pressure from the cylinder has been discharged, remove the valve cover screws.
3. Remove the valve. Remove the valve by hand or use a valve tool which attaches to the valve center bolt.

NOTE: The thread size of the valve tool will depend on the size of the valve. See the table below for the different sized valve installation tools and part numbers.

VALVE INSTALLATION TOOL SIZE	
PART NO.	TOOL, VALVE INSTALLATION
VRC29463	2.25" - 4.0" CYLINDERS 1/4" AND 5/16" THREADS
VRC29464	4.5" - 10.0" CYLINDERS 3/8" AND 1/2" THREADS

4. The valve seat gasket may remain in the pocket or the gasket may fall into the gas passage. The gasket should be replaced after several uses or each time the valves are replaced.

8.3.1 Steeple Cylinder – Valve Selection

Arrow uses Hoerbiger manufactured valves. Depending on the pressure conditions of the specific application, it may be necessary to change the valve springs to lighter or heavier springs.

Contact your Arrow representative for assistance regarding valve and spring selection.

8.3.2 Steeple Cylinder – Valve Reassembly

1. The 1/32" (0.8 mm) thick soft metallic flat gasket should be coated with an anti-seize lubricant. It can then be inserted into the valve pocket. Be careful not to let the gasket fall into the gas passage.
2. Using the valve tool insert the valve and the retainer into the pocket together.
3. Insert the cover and tighten the screws evenly to the recommended torque of 82 ft.-lbs. If the assembly is correct, the distance from the underside of the cover to the cylinder will be approximately 1/8" (3 mm).

NOTE: Be certain all parts, gasket faces, and mating surfaces are absolutely clean.

4. Install the suction and discharge valves in the crank-end of the crank-end cylinder.
5. Leave the suction valve gasket, and retainer out of the suction valve port, and put a blank valve in the discharge valve port of the head-end of the crank-end cylinder.
6. Insert valves into the head-end cylinder.
7. Insert one suction and one discharge valve in the head-end cylinder of the steeple cylinder.

8.3.3 Steeple Cylinder – Valve Covers


Proper tightening technique is essential for sealing of the valve covers. It is important to draw screws upward to full torque in even and gradual steps.

1. Install the valve assembly with the flat gasket and valve retainer, in the valve pocket.
2. DO NOT use anti-seize compounds on the valve cover screws. Tighten each screw until snug using a crisscross torque pattern.
3. Next tighten each screw to full torque of 82 ft.-lbs.


CAUTION: Severe personal injury and property damage can result if valve cover screws are not installed to the proper torque of 82 ft.-lbs.

8.4 Distance Piece Installation

1. Install Distance Piece Gasket (VRS22221) and dowell pins (VRS21506) on to frame.

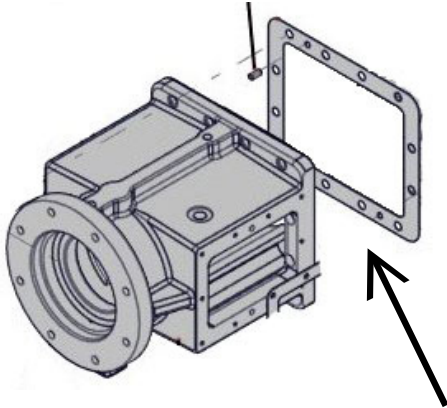

2. Insert distance piece to frame screws (VRC25077) and tighten them in a criss-cross pattern to a torque of 82 ft.-lbs.

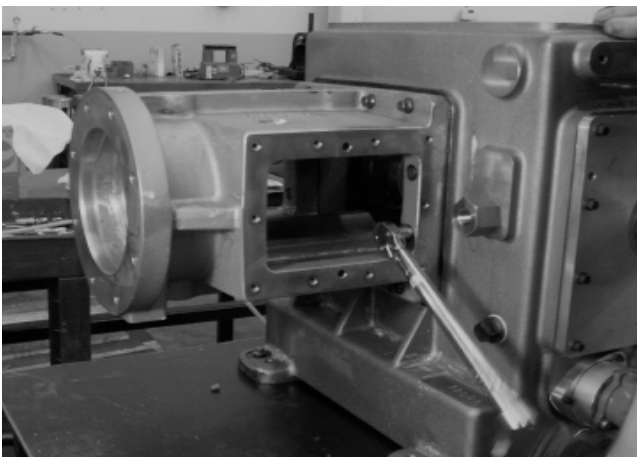


NOTE: Two studs may be used as alignment bolts to help with fitting the distance piece up against the frame.

8.4.1 Connecting Rod Installation

1. Clean and inspect the two lightweight connecting rod assemblies (VRS21220A) and the one heavyweight connecting rod assembly (VRS21210A)




2. Clean and inspect crosshead slides and then apply lubricant to the bottom and top slide surface.

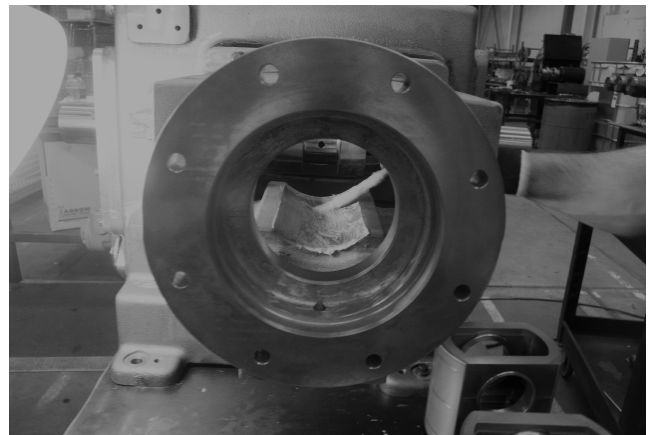

3. Clean and inspect the two crossheads (VRS22000A) and apply lubricant to the bottom and top crosshead surfaces.



4. Insert the crosshead sideways through the distance piece door and then rotate crosshead into position in the crosshead slides.

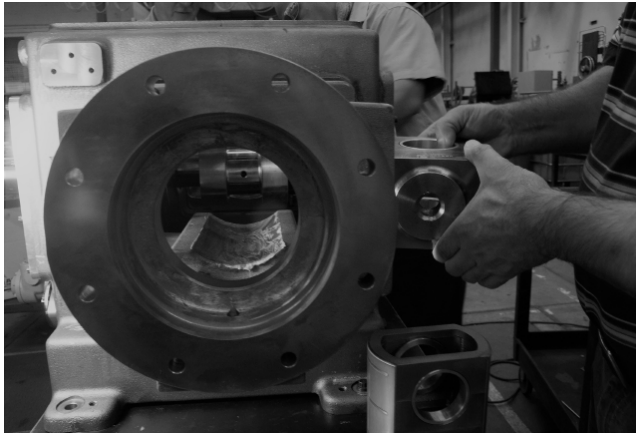

5. Inspect connecting rod bearing surface and the rod cap bearing surface to make sure no dirt gets under the rod bearings.
6. Place the rods in the frame so that the match marks on the rod cap end of the rod are on top and can be seen for proper alignment of the match marks on the rod cap to the rod.
7. Insert the heavy connecting rod bearing (VRS21211) in the heavy connecting rod and the two light connecting rod bearings (VRS21221) in the light connecting rods.



NOTE: Avoid touching the bearing surfaces as much as possible and wipe the bearing surfaces clean before applying lubricant and installing them on the crankshaft.

8. Insert connecting rods through the top of the frame and into the crosshead area on the appropriate throw.

NOTE: The two light rods and the one heavy rod can be installed on either throw. Orientation is determined by designating which throw is to be the first stage and the parts required to balance the reciprocating weights. (Consult Arrow Compressor Products for the balancing requirements of your specific cylinder configuration.)

9. Fit rod caps to the connecting rods making sure the cap is installed back on its matching rod. Caps are matched marked to the rods with identifying marks. It is necessary that the marks on one side of the cap matches the marks on one side of the matching rod.
10. Install the connecting rod cap screws (VRS21217) and tighten them to a torque of 90 ft.-lbs. Wiggle the rod on the crankshaft journal to make sure it floats freely and is not binding up on the journal.

8.4.2 Crosshead Pin Installation

1. Clean and inspect the crosshead pins.


NOTE: There are a variety of crosshead pins available in different weights and lengths depending on whether additional weight is needed to balance the reciprocating weight.

2. All VRS-4 compressors are balanced so that the reciprocating weight of the opposing throws is less than 1 pound.


NOTE: See section 4.8, Crankshaft, Crosshead, and Connecting Rod Parts, for crosshead pin options. (Consult Arrow Compressor Products for the balancing requirements of your specific cylinder configuration.)

3. Insert the crosshead cap roll pins (VRS22206) in the ends of the crosshead pins and lightly tap them in with a hammer until they fully seat in.

4. Apply lubricant to the crosshead pin and insert it into the crosshead and the bushing-end of the connecting rod.

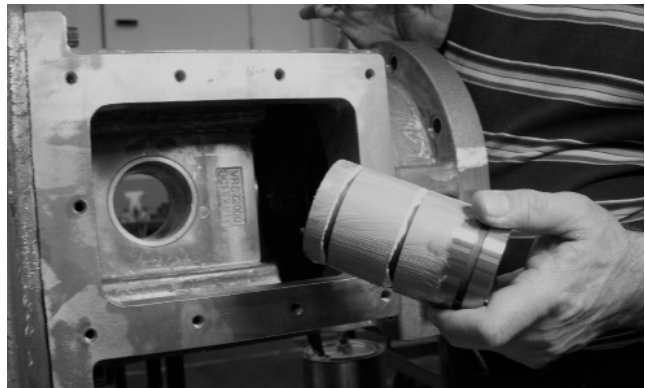


5. On the single heavy rod throw the connecting rod will be inside the crosshead.

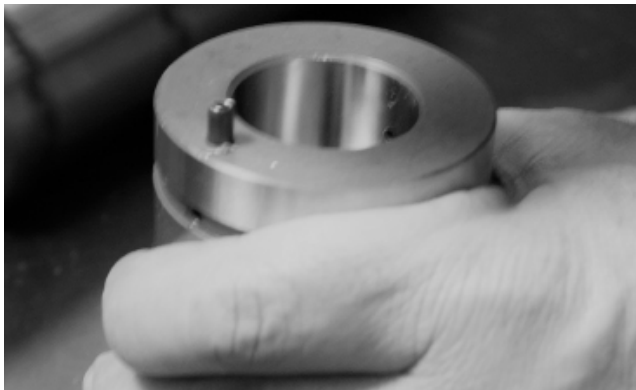


6. Place crosshead retainer cap (VRS22200) on both ends of the pin insert the short crosshead pin retainer bolt (VRS22118) and tighten the crosshead pin retainer bolt nut (177299A) to a torque of 25 ft.-lbs.




7. On the double light rods throw the connecting rods will be on the outside of the crosshead.

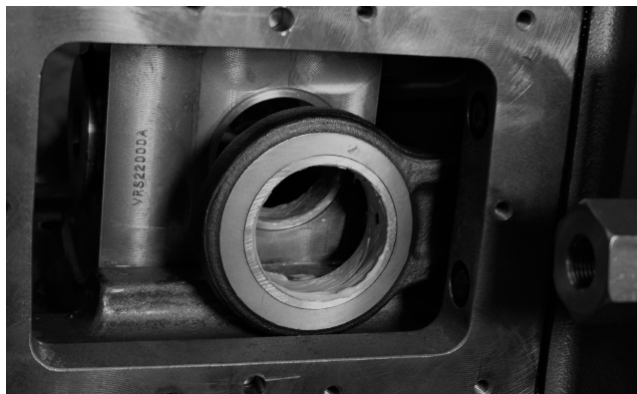



8. Insert the two crosshead pin spacers (VRS22420) between the connecting rods and the crosshead.

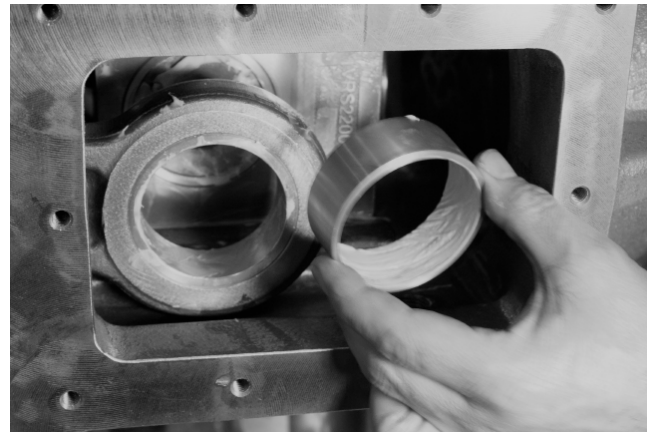

9. Apply lubricant to the crosshead pin and insert it through the rod, spacer, crosshead, spacer, and the second rod while holding all these parts in alignment.

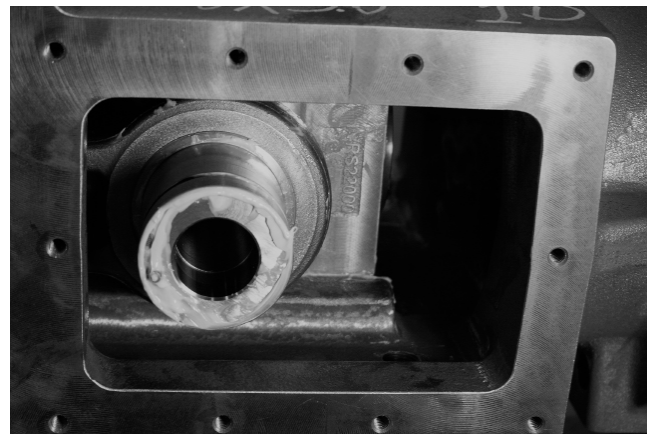

10. Place crosshead retainer caps on both ends of the pin insert the long crosshead pin retainer bolt (VRS22128) and tighten the crosshead pin retainer stud nuts to a torque of 25 ft.-lbs.

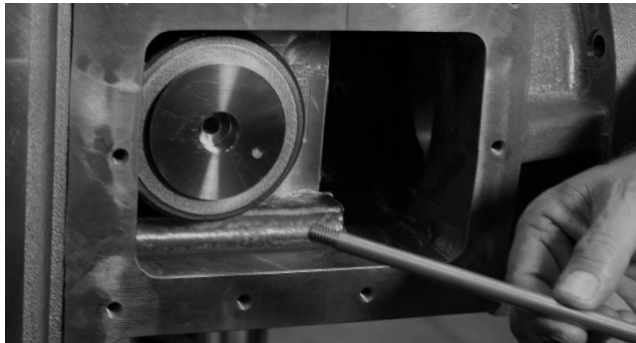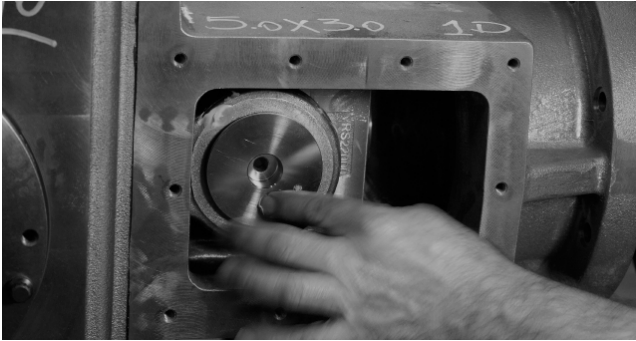

11. Apply oil to the main bearings and connecting rod bearings and rotate the crankshaft to make sure it is rotating freely.

12. Place top gasket (VRS-41315) and cover (VRS-41310) on frame and align them.




NOTE: The top of the cover plate is identified by the nameplate holes and or nameplate which is located on the top and drive-end of the cover plate.

13. Apply some never-sieze to the gasket insert the top cover screws (VRS-41327) and tighten them.



8.5 Cylinder Assembly and Installation

1. Apply lubricant to the inside bore of the cylinder and to the cylinder head and head O-ring.

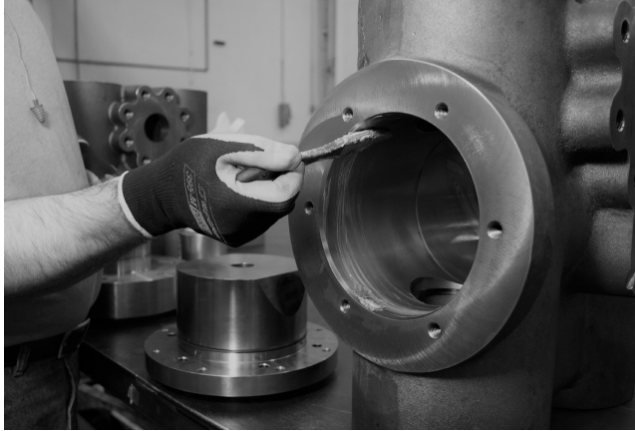


2. Slide the crank-end cylinder head into the crank-end of the cylinder bore with the flats on the head aligned with the valve ports.



NOTE: Be careful to avoid damage to the O-ring and pinching your fingers as the head is fully inserted into the cylinder.

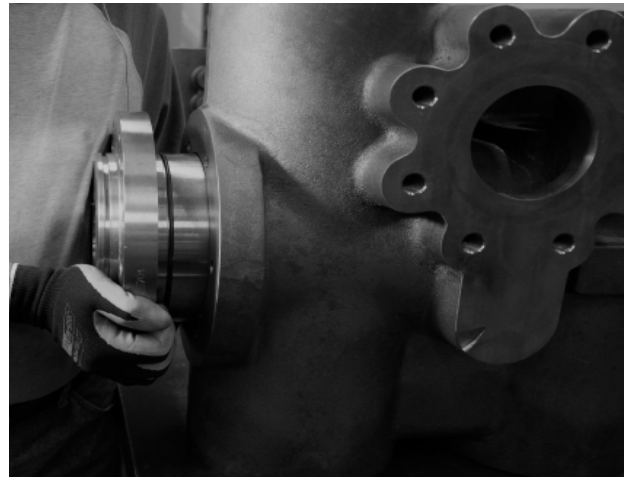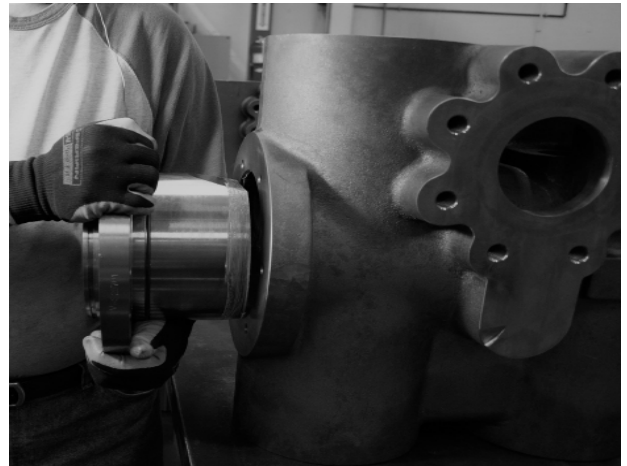

3. Insert crank-end head screws (VRC25067) in head and tighten in a crisscross pattern to a torque of 82 ft.-lbs.

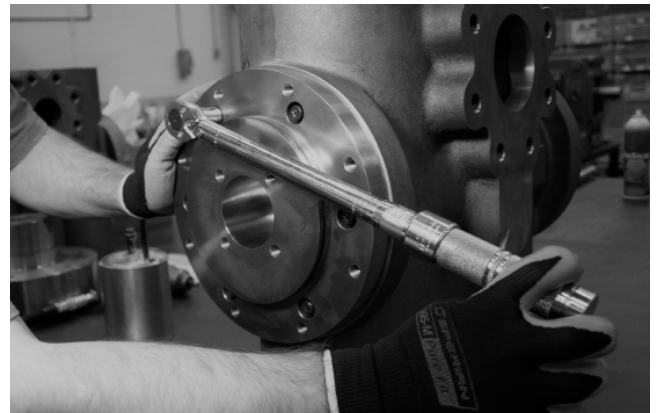

4. Insert O-ring in the O-ring groove in the cylinder head.

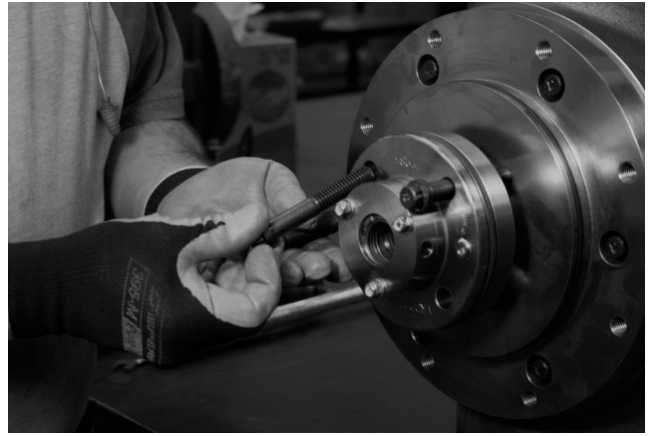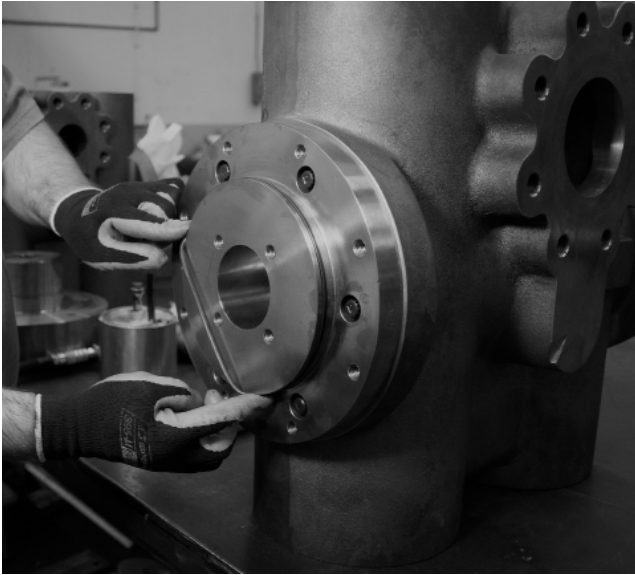

5. Prepare the packing case assembly (VR-C23001A) for installation by first loosening the stud nuts enough that the packing cups can move slightly and align as the packing case is inserted in the crank-end cylinder head.



8. The nuts on the packing case studs can now be tightened.



6. Make sure the packing case nose gasket is in place and that the packing case is installed with the lube connection on the top and the vent connection on the bottom.
7. Insert the four packing case screws (VRC23107) and tighten them evenly in a crisscross pattern to a torque of 45 ft.-lbs.

9. Prepare the packing case assembly (VR-C23001A) for installation by first loosening the stud nuts enough that the packing cups can move slightly and align as the packing case is inserted in the crank-end cylinder head.




12. The nuts on the packing case studs can now be tightened.



10. Make sure the packing case nose gasket is in place and that the packing case is installed with the lube connection on the top and the vent connection on the bottom.
11. Insert the four packing case screws (VRC23107) and tighten them evenly in a crisscross pattern to a torque of 45 ft.-lbs.

13. Remove the plugs in the lube and vent connections.

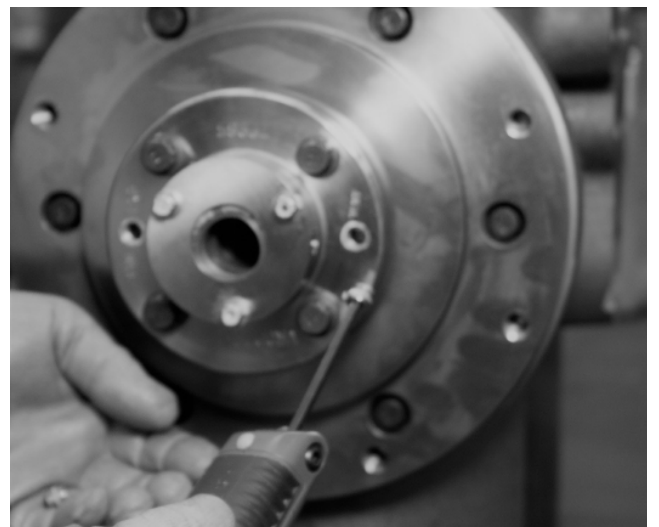


14. Apply Loctite 592 thread sealant to the two hose to packing fittings (VRC28878) and thread them into the lube and vent ports.
15. Tighten the lube fitting until opening of fitting (lube hole) faces to the right.
16. Tighten the vent fitting until opening of fitting (lube hole) faces down.





2. Apply lubricant to the opening in the distance piece and insert cylinder into the distance piece.

NOTE: Two 1/2" -13 studs can be used to help with alignment during the installation process.

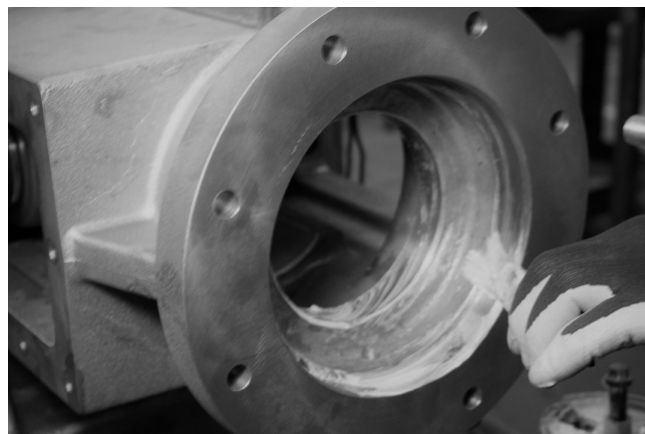


8.5.1 Cylinder to Frame Installation

1. Using appropriate lifting equipment lift cylinder upward to the distance piece. Apply lubricant to the cylinder head O-ring and packing case O-ring.

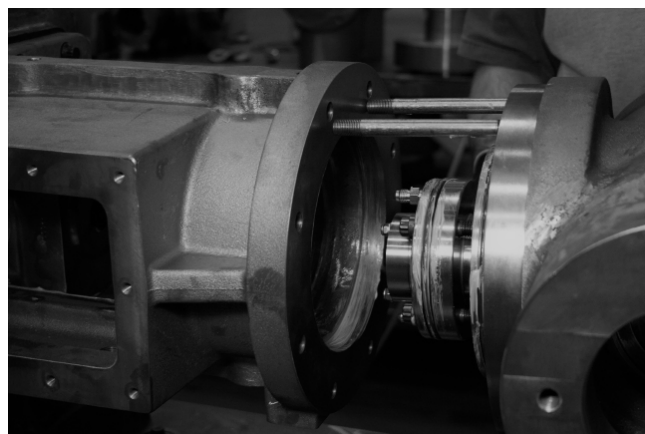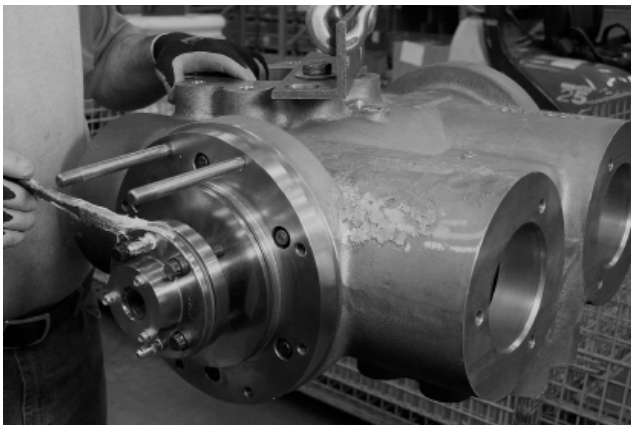

3. Install the cylinder to distance piece screws and tighten them in a crisscross pattern to torque of 82 ft.-lbs.

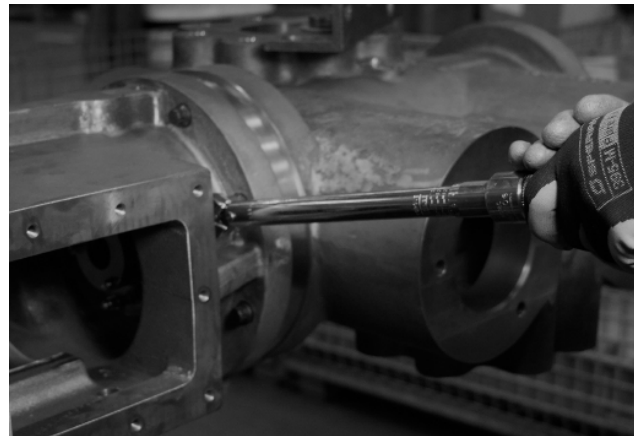

9 LUBRICATION OVERVIEW

9.1 Introduction

Proper lubrication is critical for long life and proper functionality of a compressor.

Maximum allowable oil temperature into the VRS-4 Compressor frame is 250°F (121°C), thus proper lubrication will help the compressor run efficiently with minimum friction and wear.

Below are a few ways proper lubrication helps the compressor perform optimally:

- **Reduces friction** – Reducing the friction within a compressor and decreases the amount of energy it takes to run the compressor and reduces the heat a compressor creates while performing.
- **Reduces wear and tear** – Reducing wear and tear prolongs the life of the compressor and all of the compressor's working parts. Proper lubrication reduces maintenance and repair costs.
- **Lubrication cools rubbing surfaces** – This extends the life of the constantly moving and rubbing parts within the compressor. It also removes heat build-up caused by these rubbing parts.
- **Prevents corrosive buildup** – Prevents rust and lessens corrosion on surfaces and friction heat.
- **Seals and reduces impurities** – Improves piston and packing ring(s) seals and flushes away impurities from moving parts.
- **Decreases shock and vibration** – Shocks and vibrations are softened reducing noise and vibration thus extending the life of the compressor and its parts.

Lubricants most often used in compressors are petroleum-based oils and synthetic fluids. Lubricant additives are used to better the viscosity index, slow down oxidation, lower the lubricant pour point, slow down rust accumulations, help improve de-

tergency, provide anti-wear protection, supply extreme pressure protection, reduce gas dilution, enhance wetability, prevent washing away of lubricants due to water, wet or saturated gas within the gas stream.

- **Viscosity index** is the measure of the ability of oil to resist breakdown caused by increase oil temperature.
- **Lubricity** is a the measure of the degree of lubrication.
- **Wetability** is the measure of the lubricants' ability to adhere to a metal surface.

9.1.1 Petroleum-based Oils

Two types of petroleum-based oils, also called mineral oils, are Paraffinic and Napthenic.

Paraffinic has better resistance to thinning at greater temperatures than napthenic. Paraffinic also has a higher wax content than napthenic.

Napthenic allows for better flow of lubricant and is better for cold start-ups. It has a lower resistance to thinning at higher temperatures compared to Paraffinic. Napthenic has lower life/oxidation stability and leaves soft carbon deposits or residues on discharge valves and other moving parts.

9.1.2 Synthetic Lubricants

Synthetic oils or lubricants are oils consisting of chemical compounds which were not originally present in the petroleum product but were artificially made from other compounds. The synthetic lubricants can be substituted for petroleum-based lubricants. When synthetics are substituted for petroleum-based lubricants it generally provides superior mechanical and chemical properties over those found in the traditional mineral oils. Synthetics also assist with energy savings, reduced lubricant usage and increased compressor life which results

in decreased equipment maintenance and compressor downtime.

Synthetics usually are designed for better viscosity, increased oxidation resistance, better lubricity, lower volatility, and greatly decreases operating temperatures. Some synthetic lubricants can be used in the compressor frame. Please consult with your lubrication supplier for more information regarding the use of these lubricants in the compressor frame.

- **Synthesized Hydrocarbons** – polyalphaolefins (PAO) may be used as compressor lubricants.
- **Organic Esters** – diesters and polyolesters.
- **Polyglycols** – polyalkylene glycols (PAG), polyethers, polyglycolethers, and polyalkylene glycol ethers.

Cylinder oils are a special compound of lubricants created for use in compressor cylinders. The compounds used can be a petroleum or synthetic base. These lubricants are created to enhance oil film strength and to offset the affects of water, wet gas and solvents that might be present in the gas.

9.1.3 Compressor Frame Lubricants

Arrow Engine Company recommends a good quality mineral oil which provides the proper lubrication, heat removal, oxidation inhibitors, prevents rust and corrosion build-up, and decreases wear and tear from day-to-day operation.

When compressing clean, dry, pipeline quality gas, the oil Arrow recommends for the VRS-4 compressor should be a SAE 30-weight (ISO 100 grade) oil for normal operation.

Arrow Engine Company typically uses an Industrial Oils Limited Hi-TeK TAGE GEO SAE 30 oil in the compressor frame, cylinder lubrication system, and engines.

The maximum viscosity of lubrication oil for cold ambient temperature starting is

15,000 SUS (3,300 cSt), typically 40°F (4°C) for SAE 30-weight (ISO 100 grade) oil, or 55°F (13°C) for SAE 40-weight (ISO 150 grade) oil.

The minimum viscosity at operating temperature is 60 SUS (10 cSt).

Low ash or no ash oils are recommended as high ash oils can increase maintenance requirements. Any additives used must not be corrosive or damaging to lead or copper based bearing material.

The frame-driven oil pumps use a spring loaded regulating valve (VRC28350) to maintain oil pressure. The system pressure can be raised or lowered by adjusting the valve. Discharge side of the lube oil filter is set for 50 PSIG. If the lubrication oil pressure drops below 40 PSIG, the cause should be found immediately. Low lube oil pressure shutdown, set at 35 PSIG, is required for compressor protection.

Minimum lube oil operating temperature is 150°F (66°C). This is the minimum temperature required to eliminate water vapor. The VRS-4 compressor is equipped with a simplex, spin-on filter.

The VRS-4 compressor frame lubricating oil should be changed at regular maintenance cycles of six months or 4,000 hours. More frequent oil changes may be necessary if the compressor is operating in a extremely dirty environment or if the oil supplier recommends it. Oil sampling should be done on a regular basis to verify the oil integrity for continued service. Decreasing or increasing the viscosity grade below or higher to the original oil viscosity will require a complete oil change. Viscosity testing should be performed at 212°F (100°C).

9.1.4 Cylinder and Packing Lubrication Requirements

Requirements for cylinder lubrication vary with operating conditions and the makeup of the gas to be compressed. Arrow Engine Company recommends using the same oil as used in the compressor frame

when compressing sweet natural gas, although other oils may be suitable.

Just as lack of lubrication can damage the compressor, over lubrication can cause operational issues and compressor damage as well. Excessive lubrication can cause oil carryover into the gas stream and thus increase the amount of deposits in the valves and gas passages. Valve plate breakage and packing failure are symptoms of over lubrication. The excessive lubrication will force the packing rings to lift off the rod just enough to form a leak path. Increased gas leakage results in packing and rod overheating.

If symptoms indicate lack of lubrication; first verify that the cylinder lubrication pumps are operating properly, confirm that the distribution block cycle time matches cycle times shown in Table 9.7.2, Divider Block Technical Data and Cycle Time. Double-check all tubing and fittings making sure they are tight and no leakage is present. Remember to check the fittings inside the compressor frame.

To set the proper cylinder lubrication pump flow rate, the cycle time indicator on the distribution block is to be observed. Time the cycle from flash to flash as observed on the magnetic cycle indicator assembly.

NOTE: The pumps can become inconsistent when set too low. When adjusting the cylinder lubrication pump, set for the appropriate cycle time, DO NOT set the pumps at too low a flow rate.

The cylinder lubrication pumps should be able to deliver twice the normal required lube rate for the break-in period. Read the information on lubricators provided in this manual for further details.

NOTE: The lubrication recommendation given in this manual are to be used as guidelines. If the recommended lubricants

or flow rates DO NOT appear to work properly, the flow rates and/or lubricant type may need to be changed. Please contact the lubricant supplier for specific lubricant recommendations.

Warranty of component failures which occur while using lubricants which do not meet these specifications mentioned in this manual will be subject to review on a case by case basis.

9.2 Frame and Cylinder Lubrication Overview

1. The Frame and Cylinder Lubrication (Chain Drive) System

- The Chain Idler Assembly
- Sprocket Alignment
- Chain Tensioner Adjustment
- Frame Oil Pump Tubing
- Frame Oil Strainer to Pump Tubing Assembly

9.2.1 Frame Lubrication System Description

The frame lubrication pump supplies oil to the internal frame running gear such as the crankshaft, connecting rods, crosshead pins, crossheads and to the inlet side of the cylinder lubrication pump.

The sight glass on the accessory end of the frame displays the oil level in the sump. The proper oil level is when the oil is in the center of the sight glass. It is important that the oil level does NOT exceed two-thirds of the sight glass or over lubrication can occur.

Frame lubrication is drawn from the sump through the suction strainer into the oil pump that is mounted on the accessory end of the compressor frame. From the pump discharge port, oil flows to the oil fil-

ter (KA50060). From the filter, oil flows to the six port manifold and to the central oil galley at the bottom of the frame. The Central galley directs oil to each of the crankshaft main bearings and then to the connecting rods and crosshead pins. The six port manifold directs oil to the upper and lower crosshead slides and to the cylinder lubrication pump.

9.3 Cylinder Lubrication System Description

9.3.1 Description

The cylinder lubrication system provides oil to the compressor cylinders and piston rod packing. The cylinders have top lubrication injection points. Oil is supplied to the suction side of the lubricator pump directly from the six port manifold.

The lubricator has its own oil reservoir to lubricate the worm gear and cam. This reservoir is self-contained and is not fed by the lube oil system. The sight glass located on the reservoir side will show the oil level in the lubricator reservoir.

There is a purge port (VRC28630) check valve in the manifold in the discharge line of the force-feed lubricator pump through which the system may be primed. Next in the manifold is a overpressure indicator (VRC28610) with a blow-out disc (VRC28611). If there is any blockage within the system, the pressure build-up will rupture the disc. Venting the system through the blow-out disc will cause the no-flow shutdown switch to activate.


From the discharge manifold, oil is filtered by a 10-micron filter (VRC28710). The oil then travels to the distribution block where each of the outlets has a check valve. Here, the lubricant is allocated to provide the amounts needed to the cylinders and packing.

Some of the oil to the packing moves through to the cylinders, but the majority of it is drained out through the oil drain fitting on the bottom of the packing case and through the flexible hose assembly terminating at a fitting in the frame, and to be run to an appropriate location by the packager.

9.4 Frame Oil Pressure Relief Valve (Typical*)

9.4.1 Adjusting Frame Oil Pressure

The pressure relief valve is integral to the frame oil pump to adjust the pressure. Loosen the lock nut on the oil pressure relief valve and move the adjusting screw out to decrease pressure and in to increase pressure. After making the necessary adjustment, tighten the lock nut.

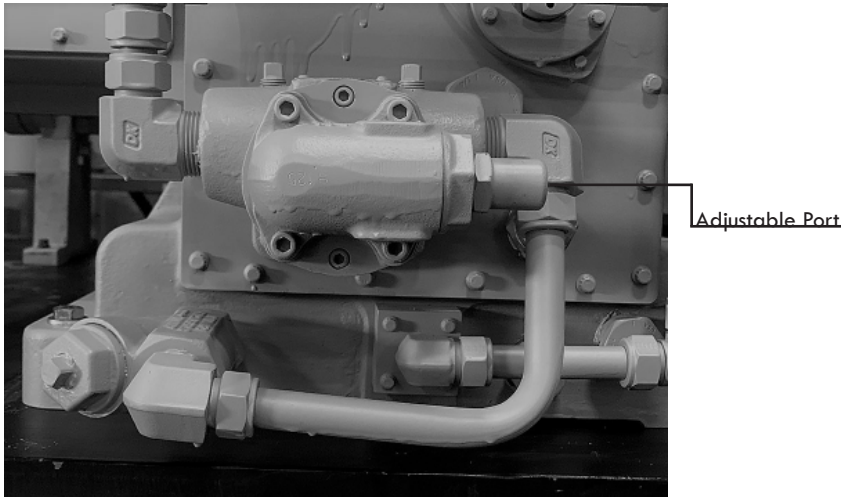

9.4.2 Lube Oil Pressure


Normal pressure on the discharge side of the frame oil filter is set at the factory at 50 PSI at 1,800 RPM. If oil pressure drops below 25 PSI, find the cause immediately and correct the problem.

*These are typical specifications for the oil pressure relief valve. Various brands of valves are used, and specifications may vary slightly depending on brand provided at time of order. All valves provided have the same connections and are interchangeable.

9.4.3 Low Oil Pressure Shutdown

The low oil pressure shutdown is normally mounted by the packager and is supplied to the customers specifications. Arrow Engine provides an oil pressure pickup point on the 6-port manifold (VRC28120).

The compressor must have a working low oil pressure shutdown.

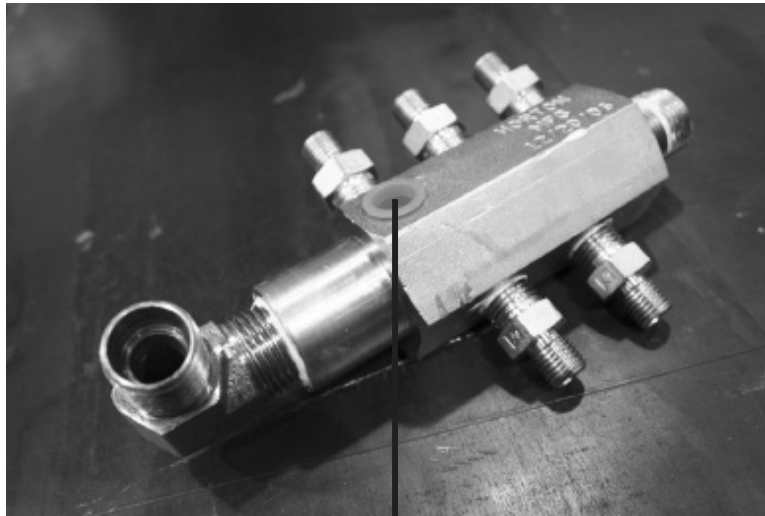

Pressure Pickup Point


IMPORTANT: Never attempt to add oil to the frame through the breather hole while the compressor is running. This will cause oil foaming and unnecessary no-flow shutdowns in the force-feed lubrication system.



Because the cylinder lubrication system is constantly using oil from the frame, a working frame oil level controller is necessary. This must be designed to allow oil travel into the frame from an overhead tank at all ambient temperature conditions.

NOTE: The cylinder lube system must have a blow-out disc between the cylinder lubricator and the no-flow shutdown. The cylinder lube system must have a no-flow shutdown. (These are normally provided with Arrow compressors.)

Shutdown must be enabled to activate within three to five minutes after disruption of lubrication flow.

9.5 Tubing and Distance Piece Venting

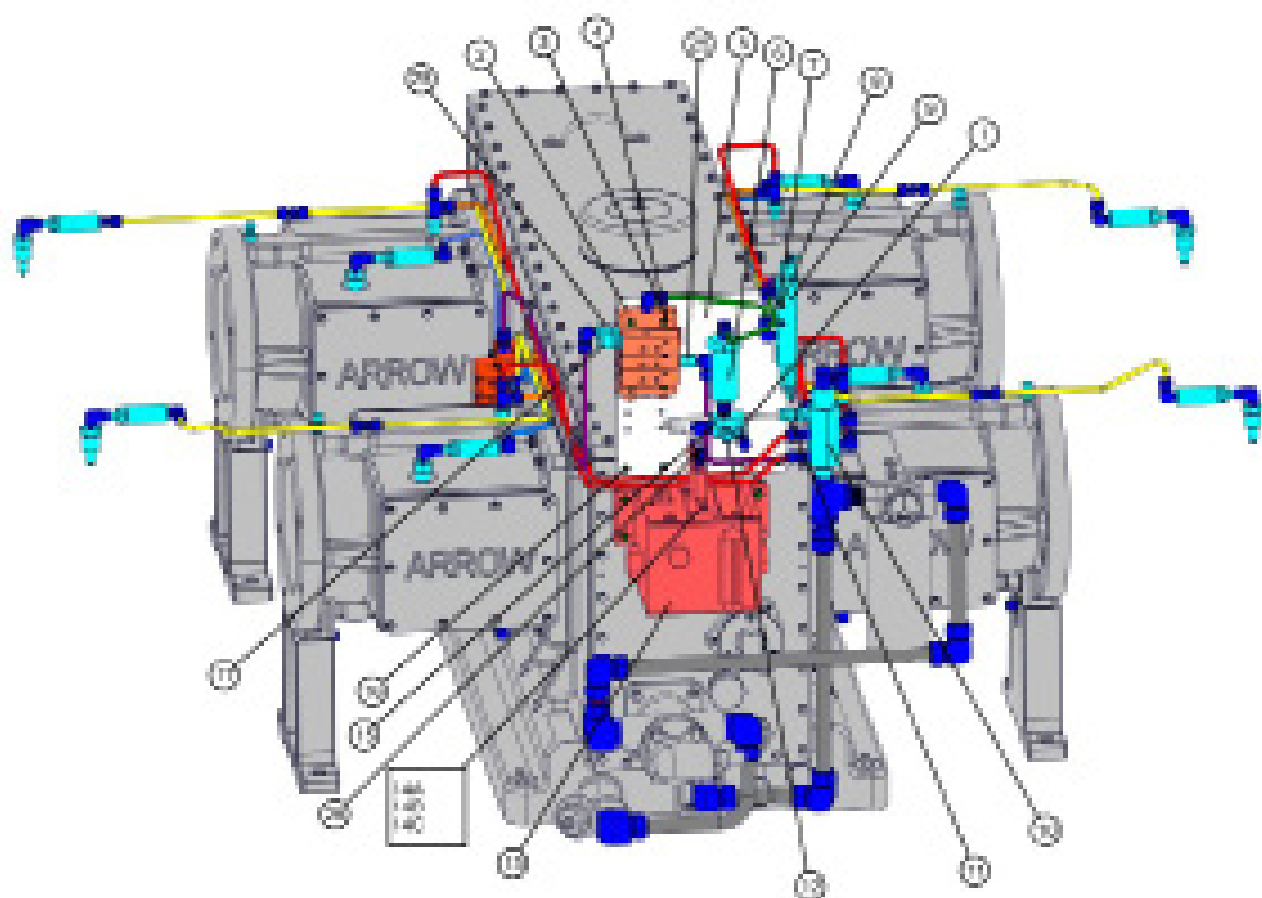


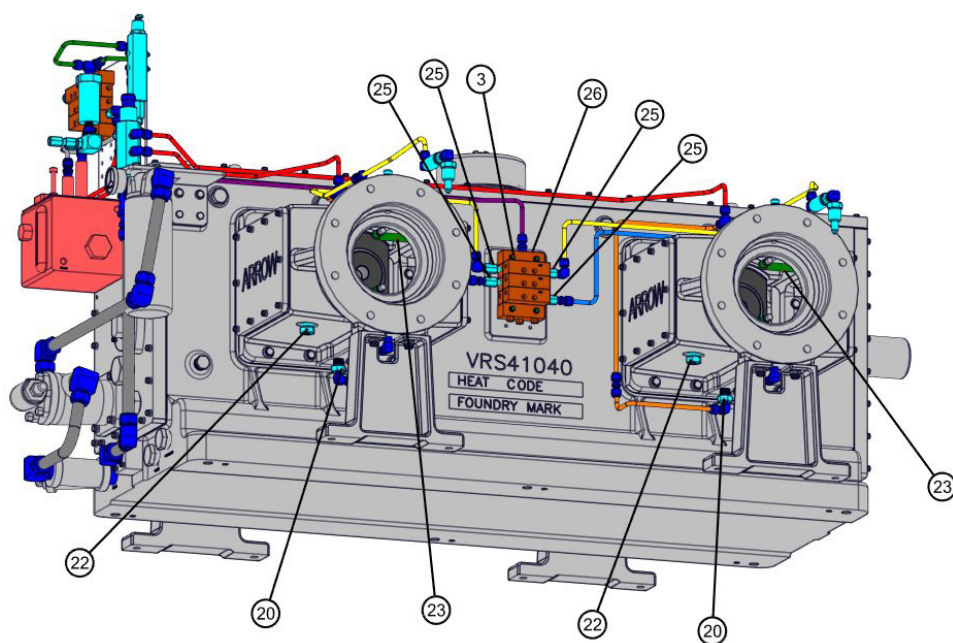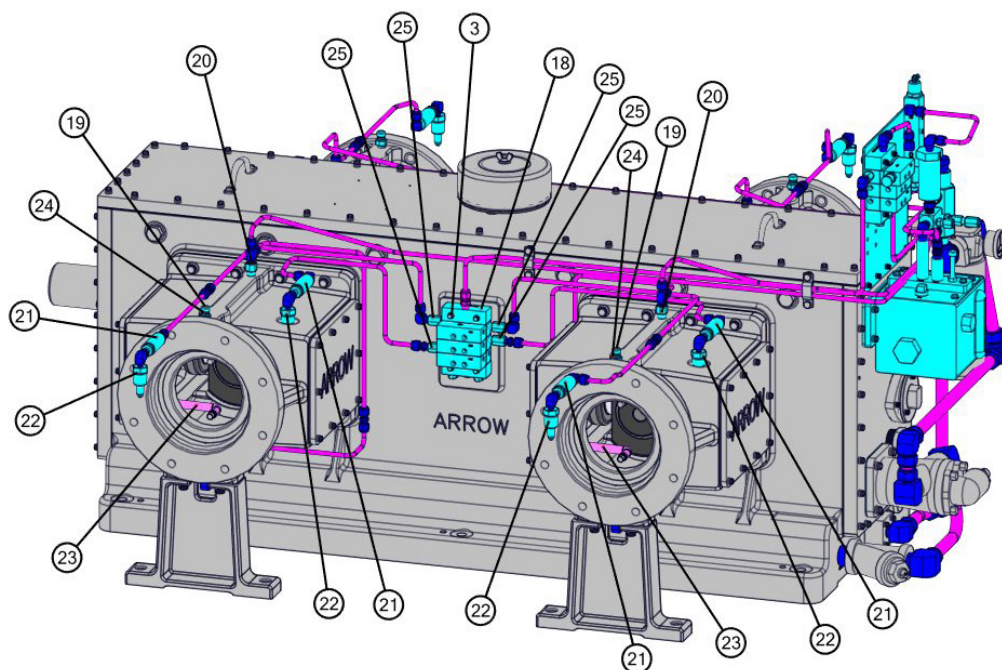

VRS- 4 LUBRICATION SYSTEM TUBING

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	VRC28630	PORT, PURGE, 1/8" NPT	1
2	TBD	BLOCK, DIVIDER, 3-STAGE, MASTER	1
3	VRC28607	1/4"-20 X 1-1/2" 12-POINT SCREW	12
4	29A-1/420	NUT HEX FINISHED ZINC-PLATED	4
5	VRS-48650	BRACE DIVIDER BLOCK	1
6	VRC28710	FILTER, LUBE OIL, INLINE, 10-MICRON	1
7	VRC28727	SCREW NO-FLOW SWITCH 10-32 X 1-1/2"	2
8	VRC28728	NUT, NO-FLOW SWITCH 10-32N	2
9	VRS28720	SWITCH, NO-FLOW SAFETY	1
10	VRC28120	MANIFOLD, 6-PORT, CUSTOM	1
11	VRC28890	FITTING, CHECK VALVE, 1/4-18 NPTF	1
12	VRC28610	INDICATOR, OVERPRESSURE, LUBE OIL	1
13	VRS-48530	RESERVOIR, CYLINDER LUBE PUMP	1
14A	VRC28510B	PUMP OIL CYLINDER LUBE 3/16"	1
14B	VRC28512B	PUMP OIL CYLINDER LUBE 1/4"	1
14C	VRC28514B	PUMP OIL CYLINDER LUBE 3/8"	1
15	VRC28640	MANIFOLD, LUBE PUMP, CUSTOM	1
16	VRC28487	SCREW, 12-POINT 1/4-20 X 1/2	5
17	VRC28621	INDICATOR, VISUAL-CYCLE, LUBE OIL	1
18	TBD	DIVIDER BLOCK	1
19	VRC28888	CAP, VENT	4
20	VRC28835	FITTING 1/8"FX1/4"M WITH .094 ORIFICE	8
21	VRC28730B	VALVE CHECK LUBE OIL 1/8" NPT	8
22	VRC28876	FITTING, PACKING, CUSTOM 1/2"	8
23	VRS28877	HOSE FLEX ASSEMBLY PACKING	8
24	PF9-1/4X1/8	BUSHING PIPE	4
25	VRC28730	VALVE, CHECK, LUBE OIL, 1/8" NPT (DB)	10
26	VRC28847	FITTING, REDUCER, MANIFOLD 1/8" X 1/4"	1
27	TBD	DIVIDER BLOCK	1

9.6 Filling and Operating the Lubrication System

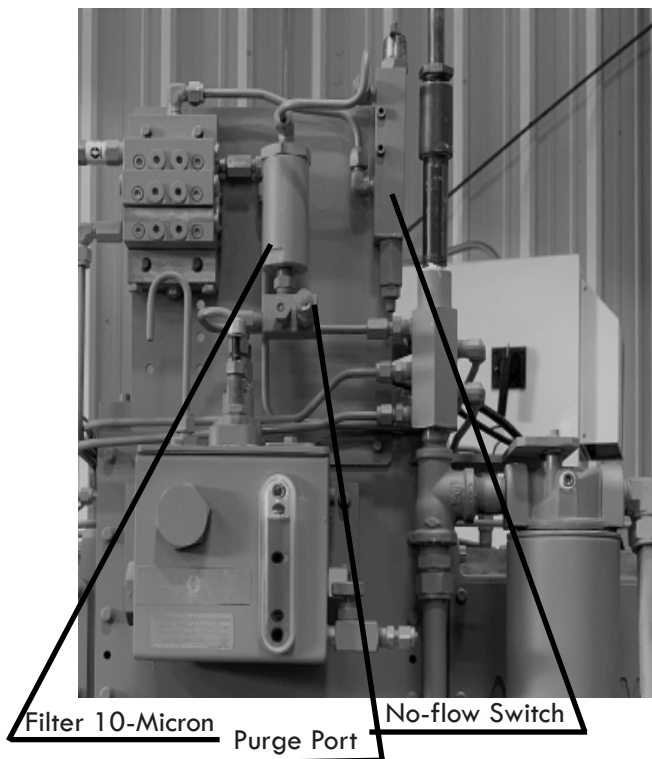


1. Loosen tubing connection at the inlet and all outlets of the divider block.
2. Install a hand priming pump (VRC29480) into the purge port check valve at the pump outlet.
3. Operate the hand priming pump until clean air-free lubricant appears at the inlet of the divider valve. Then re-tighten the tubing connection at the inlet and operate the hand priming pump to purge air from the divider valve. When air-free lubricant is observed at all outlets re-tighten tube connections.

NOTE: When operating hand priming pump (steps 1-3) gauge pressure should not exceed 300-500 PSI unless you encounter air pockets which will increase pressure. Once air is expelled, the gauge should drop back.

4. Loosen tubing connections at all injection point check valves.
5. Operate the hand priming pump until clean air-free lubricant appears at the inlet of all injection point check valves. Then retighten all tubing connections at all injection point check valves.
6. Remove hand priming pump from purge port check valve at the lubricator pump outlet.
7. It is necessary to prime the lubricator pump before the oil line from the day tank or crankcase is connected. Clean air-free lubricant must be observed at the pump inlet.
8. Fill the lubricator reservoir with oil to 1" from top of gauge glass. (Do not fill to top.) This oil is used to lubricate the internal parts only. Occasionally oil level will increase due to seepage from pump which is not uncommon; when the reservoir level is observed near the top of the gauge glass remove drain plug and drop level.
9. The system should now be completely filled with clean air-free lubricant and ready for start-up.

9.7 Divider Block

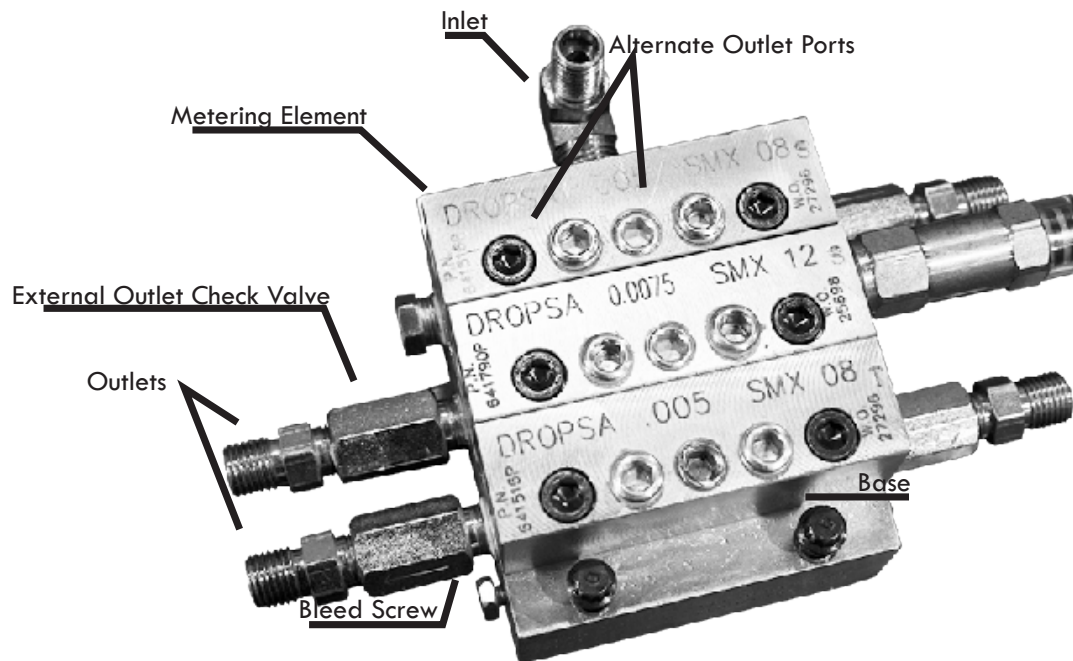

9.7.1 Divider Block Overview

The divider block is made up of three valve blocks fastened to a section of the base plate. O-rings are used to seal the valve blocks and the base plate and base plate sections. The divider valves are used in a single line progressive lubrication system that distributes lubrication.

Check valves at the inlets of all lube points should be installed.

Metering pistons contained within the valve blocks release a set amount of lubricant with each cycle. These valve blocks can be single or twin. Outlets must be plugged if not used when singling or cross porting.

The use of a by-pass block maybe used on the base plate. This allows the addition or deletion of lubrication points without disconnecting or disturbing any lubrication system tubing. When using a by-pass block, both outlets must be plugged.

The valve and by-pass blocks are attached to the base plate which sets on the piece of equipment needing to be lubricated. The base plate contains divider block's inlet and outlet connections, interconnected pathways and built-in check valves. Lubricant piping both to and from the divider valve is connected to the base plate.

The base plate consists of one inlet block, three intermediate blocks, one end block and three tie rods. The gasket plate seals are included with the base plate segments. The valve block capacity of each base plate is dependent upon the number of intermediate blocks in the base plate. There must be a minimum of three working valves on each valve and base plate assembly.

9.7.2 Divider Block Technical Data and Cycle Time

DIVIDER BLOCK		
PART NO.	DESCRIPTION	QTY.
THREE-STAGE		
VRC28626	Master 3 section Graco MMH 9S, 9S, 12S	1
VRC28627	Secondary 3 section Graco MMH 9S, 21T, 6S	1
VRC28628	Secondary 3 section Graco MMH 6S, 6S, 18T	1

NOTE: Contact Arrow Engine for more information.

Table 9.7.2. Divider Block Technical Data and Cycle Time

9.8 Cylinder Lubrication System Running Conditions

1. Using the sight glass, check the oil level in the lubricator reservoir. The lubricator reservoir is used to lubricate the worm gear and cam. IT DOES NOT FLOW THROUGH THE SYSTEM. Add oil only if the sight glass indicates low oil in the reservoir.
2. If the piping has been removed or if the lube system has been drained, fill and prime the system through the 1/8" NPT connection end located in the lube pump manifold (VRC28640). Priming the force-feed lubrication system requires the use of a priming pump (VRC29480).
3. If the unit has been overhauled, it is important to adjust the lubricator for maximum lubricant distribution.

The following steps will guide you through the process of adjusting the lubricator:

- Loosen the adjusting screw locknut.
 - Turn the plunger stroke adjustment screw to the full UP position.
 - Tighten the adjusting screw locknut.
 - Proper feed rate may be set after the compressor is started.
4. The operator may choose to use a gear oil in the reservoir instead of the 30-weight oil provided by the manufacturer. Gear oils reduce noise and increase the longevity of the pump.

NOTE: Gear oil is optional. It is NOT a requirement.

5. When the compressor is running, make sure the oil level in the lubricator reservoir is at the designated sight glass.

NOTE: See your packager's specific data to determine the normal operating conditions, the cylinder working pressures, and the rated speed.

9.9 Lubrication System Troubleshooting

Pump does not discharge lubricant.

Possible Causes	Possible Solutions
Crankcase oil starving pump suction	Check crankcase oil pump and/or blockage in line to lubricating pump.
Empty Day Tank	Fill day tank.
Air entrapment within pump	Make certain that clean, air-free lubricant can be observed at the pump inlet. This should be done prior to the oil line from the day tank or crankcase is connected.
Defective pump	Replace pump.

Divider block does not cycle or operates at erratic pressures.


Possible Causes	Possible Solutions
Contaminated or trapped air	Operate the hand priming pump until clean, air-free lubricant appears at the inlet of the divider valve. Then retighten the tubing connection at the inlet and operate the hand priming pump to purge air from the divider valve. When air-free lubricant is observed at all outlets retighten tube connections.
Stuck piston within divider block	Pressure gauge should not exceed 300–500 PSI.
	Replace divider block metering element.

Divider block repeatedly ruptures disc.	
Possible Causes	Possible Solutions
Blocked or crushed line downstream	Replace line as necessary.
Defective injection point check valve	Replace check valve.
Rupture disc over tightened	Torque nut to 36 in/lbs. max. DO NOT OVER TIGHTEN. If a torque wrench is not available, hand tighten, then tighten 1/8th turn with a wrench. Use a backup wrench when installing return fitting.
Clogged lube filter	Clean or replace filter element.
Trapped air	Operate the hand priming pump until clean, air-free lubricant appears at the inlet of the divider block. Then retighten the tubing connection at the inlet and operate the hand priming pump to purge air from the divider valve. When air-free lubricant is observed at all outlets retighten tube connections.

9.10 Locating Blockage

1. Check to ensure all twin elements "T" have two outlets in base and all single elements "S" have one outlet and one pipe plug in base.
2. Loosen tube connection at inlet and install a hand priming pump. Operate hand priming pump to dispel contamination of air. If necessary loosen (DO NOT REMOVE) the two bleed screws on each side of the modular base farthest from the inlet.
3. If high pressure continues, remove (one at a time) each alternate outlet plug, which is common to an outlet port in the base. If the pressure gauge drops and the divider block cycles freely after the plug is removed, the blockage is downstream of that individual outlet. If the pressure remains high when pumping oil with all alternate outlet plugs removed, the blockage is within the divider block.

9.11 No-flow Switch

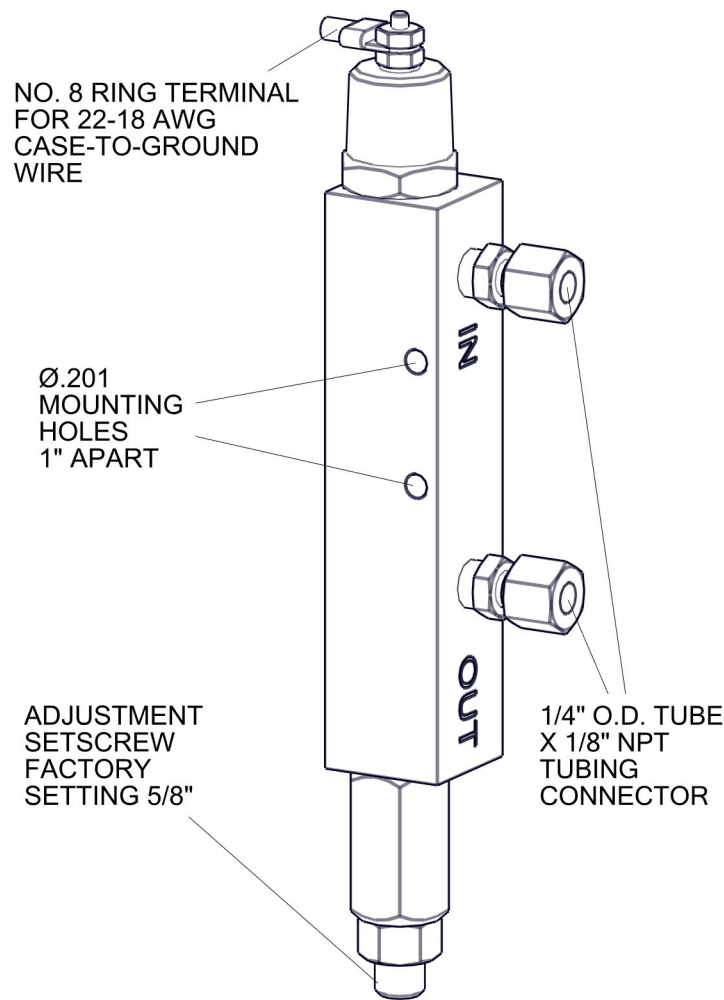

IMPORTANT: The No-flow switch must be mounted terminal end upward with a maximum angle of 20° off vertical to prevent condensation around the switch contact.

9.11.1 No-flow Switch Overview

The No-flow Switch mounts in the line between the lubricator and the cylinder. Oil flow is through the switch-forcing the plunger off its contact. Its rate of travel is controlled by fluid slippage past the precision-fit plunger, preventing premature shutdown. If the lubricator stops pumping, the plunger will drift to the contact and stop the engine. On start-up, the first stroke of the lubricator automatically opens the switch. In operation the plunger can pump out of its hole on high feed rates and does not obstruct flow. The time interval between lubrication failure and shutdown can be adjusted by increasing or decreasing the compression on the spring.

The switch is available with an overpressure rupture assembly which will instantaneously bleed off and stop the engine in the event the lube-line check-valve plugs. The standard rupture disc fails at 1750 PSI. The explosion-proof switch has been tested to 5,000 PSI and its recommended working pressure is 8,600 PSI.

9.11.2 No-flow Switch Installation

1. The No-flow Switch must be mounted either vertically (terminal end upward) or at a minimum angle of 20° off horizontal with the terminal end at the high point. This prevents water from accumulating around the switch contact.
2. A 25 micron sintered bronze or similar in-line-type filter should be installed ahead of the no-flow switch. These are available from Arrow or most manufacturers of lubricators.
3. To assure constant oil viscosity, mount the switch in a warm place near the cylinder lube-line check valve or point of lubrication.
4. Connect line from the lubricator to the inlet port on the no-flow switch.
5. Hand pump the lubricator until oil flows from the outlet port; then connect the line from the outlet to the point of lubrication.
6. The no-flow switch is factory adjusted for a shutdown time of approximately 3 minutes using SAE 30 oil at 100°F (38°C). The switch is viscosity sensitive, therefore, shutdown time will vary with oil viscosity. Many compressor manufacturers indicate that 10–15 minutes operations after cessation of lubricant flow is acceptable so it should NOT be necessary to make seasonal adjustments.
7. If adjustments are necessary, ensure that the adjustments are made while the compressor and no-flow switch are at their normal operating conditions. The adjustment setscrew is located on the bottom of the switch housing.

Turn the setscrew IN to decrease shutdown time and OUT to increase shutdown time. Shutdown time can be determined by removing or disabling the lubricator pumping unit.

On the multiple pump installations pumping at the same rate, the setting can usually be transferred from one switch to another by making the distance from the end of the adjustment setscrew to the end of the adjustment setscrew housing equal on all switches.

10 RECOMMENDED MAINTENANCE

10.1 Suggested Maintenance Intervals

Keeping any equipment running and operating correctly and efficiently requires regular maintenance, Arrow compressors are no different. The frequency of maintenance depends upon the environment in which the compressor is operating, the work load that is required as well as the cleanliness of the gas the compressor is compressing.

IMPORTANT: The primary item to be completed first on the preventive maintenance list is to be compliant to Arrow Engine's and the packager's compressor start-up checklist (see section 4, Compressor Start-up). All items on this checklist must be performed before and after start-up.

This section serves only as a guide to Arrow's recommended maintenance to keep your compressor running efficiently and at peak performance. Conditions may vary and so your maintenance time lines and intervals may be different or change due to environmental conditions at your location.

Maintenance time intervals start from the date and time of initial start-up of the compressor. If your oil supplier's recommended oil service changes are more frequent than Arrow's recommendations, the supplier's maintenance intervals should be followed. Regular oil analysis is recommended. If problems develop, the oil should be changed immediately and the cause of the problem should be investigated and solved.

It is a good idea to keep a maintenance log book for the compressor or compressors if you have more than one at a location. Every maintenance item should be recorded with exact detail to have a good history of what was done and for tracking maintenance issues and costs.

Check lubricator block cycle pin indicator. Refer to the information plate on the side of the lubricator reservoir or Table 9.7.2, Divider Block Technical Data and Cycle Time, for the correct cycle time. These logs should be reviewed by qualified personnel to determine performance and maintenance trends of the compressor.

10.2 Daily Maintenance Requirements

1. Check frame oil pressure. It should be 50 to 60 PSIG when at operating temperature. Compressor inlet oil temperature is 250°F (121°C) maximum.
2. Check frame oil level. Oil level should be seen in the sight glass. If you can not see oil in the sight glass determine the cause and correct the problem. If oil needs to be added, be sure you add the correct weighted oil and be careful not to over fill.
3. Check lubricator block cycle pin indicator. Refer to the information plate on the side of the lubricator reservoir or Table 9.7.2, Divider Block Technical Data and Cycle Time, for the correct cycle time. **NOTE:** Very dirty or wet gas may require a more frequent cycle time than normal.

4. Check primary and secondary packing vents for blowing. If excessive blowing is occurring, determine the cause and replace the packing if necessary.
5. Check for any gas leaks. Correct immediately if any gas leaks are found.
6. Check and correct any oil leaks.
7. Check operating pressures and temperatures. If abnormalities exist, investigate and correct the problems. It is recommended that a daily operating temperature log be maintained and available for reference.
8. Check shutdown set points.
9. Low oil pressure shutdown is to be set at 25 PSI minimum.
10. The high cylinder discharge temperature shutdown is to be set within 25°F (-4°C) of the actual operating temperature. It is NOT to exceed 350°F (177°C).
11. High-low pressure shutdowns set as close as practical. Rod load capacity of the compressor should be taken into consideration.
12. Check lubricator reservoir oil level.
13. Check for any unusual noises or vibrations.

Monthly Maintenance Requirements

In addition to the daily maintenance requirements, check and confirm safety shutdown functions.

10.2.1 Six-month or 4,000 Hours Maintenance Requirements

In addition to the daily and monthly maintenance requirements:

1. Drain and replace lubricator reservoir oil.
2. Change oil filter.
3. Change oil. More frequent oil changes may be required due to environmental influences, the oil supplier recommends it or if oil analysis requires it. A less frequent oil change may be allowed because the oil is replaced at regular intervals due to force-feed lubricator usage.
4. Clean the oil strainer anytime the oil is changed.
5. Open the frame when oil is changed and visually inspect for any dirt or foreign material that may have entered into the frame. You do not have to disassemble the frame for this inspection, however, it may become necessary if serious damage has been done to the frame has been identified.
6. Re-tighten hold down stud-nuts to proper torque values and perform a soft foot check. If the hold down fasteners on the compressor frame or driver have become loose, it is recommended that the coupling alignment be checked.

10.2.2 Yearly or 8,000 Hours Maintenance Requirements

In addition to the daily and monthly maintenance requirements:

1. Check crankshaft main bearing for abnormal wear, connecting rod bearing clearance and end play clearance with a feeler and indicator. If outside the wear limits listed on Table 3.4 of this manual, Clearances, then replace the affected bearings.
2. Check crosshead guide clearance with feelers, if outside the wear limits replace effective parts.
3. Inspect valves for broken plates and loose center bolts. Replace any broken plates and tighten center bolts to proper torque value (see Table 3.11, Valve Assembly Fasteners – Tightening Values, in this manual).
4. Inspect cylinder bores for damage or wear.
5. Inspect piston ring end gap. Replace all rings that are outside the maximum wear limits (see Table 3.9, Piston to Bore Clearance and Conventional Piston Ring End Gap for Double-acting and Steeple Cylinders).
6. Rebuild cylinder packing case.
7. Inspect for frame twisting or bending. This is done by shimming of the compressor feet.
8. Realign if necessary to hold coupling alignment within 0.005" (0.127 mm).
9. Check and re-calibrate all temperature and pressure gauges.
10. Check and record compressor rod run-out.
11. Grease VVCP stem threads at grease fitting, using a multipurpose grease and standard hand pump grease gun.
12. Clean frame breather filter.
13. Check divider blocks.

10.2.3 Two-year or 16,000 Hours Maintenance Requirements

In addition to the daily, monthly, and yearly maintenance requirements:

Check auxiliary and chain drive for sprocket teeth undercutting and chain for excessive stretching.

This would be a good time to replace all chain drive parts.

10.2.4 Four-year or 32,000 Hours Maintenance Requirements

In addition to the daily, monthly, yearly, and two-year maintenance requirements:

1. Check main and connecting rod bearing clearances by using the dial indicator.

NOTE: Disassembly is not necessary nor is it recommended to check for clearances. Disassembly should be performed only IF excessive clearance is discovered.

2. Check crosshead guide clearances with feeler gauges.

3. Check crosshead pin to crosshead pin bore and connecting rod bushing bore by removing crosshead pins.
4. Check for excessive wear in the accessory end drive chain tensioner.
5. Check for excessive ring groove wear in the pistons.

10.2.5 Six-year or 48,000 Hours Maintenance Requirements

In addition to the daily, monthly, yearly, two-year, and four-year maintenance requirements:

1. Replace crankshaft main roller bearing and connecting rod bearing shells and bushings.
2. Replace lubricator divider blocks if needed.
3. Replace crosshead bushings if needed.

10.3 Common Problems, Possible Causes

Minor problems can be expected during the routine operation of an Arrow VRS-4 compressor. These issues are most often traced to liquid, dirt, improper adjustment or to operating personnel that may be unfamiliar with the Arrow compressor. Difficulties of this type can usually be corrected by cleaning, proper adjustment, replacing a minor part or proper training of operating personnel.

Major problems can usually be traced to long periods of operation with unsuitable lubrication, careless operation, lack of routine maintenance or the use of the compressor for purposes for which it was not intended.

Recording of the inter-stage pressures and temperatures on a multistage unit is valuable. Any vibration, when operating at a given load point, indicates trouble in one of the stages. Normally, if the inter-stage pressure drops the trouble is in the lower pressure cylinder. If it rises, the problem is normally in the higher pressure cylinder.

Tables on the following pages list common problems that could occur with the Arrow VRS-4 compressor. It is impossible to present a complete list of every possible maintenance issue, but this list presents some of the most typical problems and their possible cause.

PROBLEM	POSSIBLE CAUSES
Low Oil Pressure	Oil pump failure
	Oil foaming from counterweights striking oil surfaces or oil level too high
	Cold oil
	Dirty oil filter
	Excessive leakage at bearings
	Improper low oil pressure switch setting
	Oil pump relief valve set too low
	Defective pressure gauge
	Plugged oil sump strainer
Noise in Cylinder	Loose piston
	Piston hitting cylinder head-end head or crank-end head
	Loose crosshead jam nut
	Broken or leaking valve(s)
	Worn or broken piston rings or rider bands
	Valve improperly seated or damaged seat gasket
	Liquids in cylinder
Excessive Packing Leakage	Worn packing rings
	Improper lube oil and or insufficient lube rate
	Dirt in packing
	Packing rings assembled incorrectly
	Improper ring side or end gap clearance
	Plugged packing vent system
	Scored, tapered or out of round piston rod
	Excessive piston rod run-out
	Packing not seated or properly run in

PROBLEM	POSSIBLE CAUSES
Packing Overheating	Lubrication failure
	Improper lube oil and/or insufficient lube rate
	Worn packing rings
	Dirt in packing
	Improper ring side or end gap clearance
	Scored, tapered or out of round piston rod
	Excessive piston rod run-out
Excessive Carbon on Valves	Excessive lube oil
	Improper lube oil
	Oil carry-over from inlet system or previous stage
	Broken or leaking valves causing high temperature
	Excessive temperature due to high-pressure ratio across cylinders
Relief Valve Popping	Faulty relief valve
	Leaking suction valves or rings on next higher stage
	Obstruction, blind or valve closed in discharge line
High Discharge Temperature	Excessive ratio across cylinder due to leaking inlet valves or rings on the next higher stage
	Bent or damaged intercooler piping
	Leaking discharge valves or piston rings
	High inlet temperature
	Improper lube oil and/or lube rate
Frame Knocks	Loose crosshead pin or retainer caps
	Loose or worn main, crank pin or crosshead bearings
	Low oil pressure
	Cold oil
	Incorrect oil
	Knock is actually from cylinder end

PROBLEM	POSSIBLE CAUSES
Accessory End of Crankshaft Oil Leak	Clogged vent or vent piping
	Improper sealing of plug
Piston Rod Packing Case Leaks	Worn wiper rings
	Wiper rings incorrectly assembled
	Worn/scored rod
	Improper fit of rings to rod/side clearance

11 WARRANTY

VRS Gas Compressor Continuous Duty Warranty

CONTINUOUS DUTY DEFINITION: The highest load and speed which can be applied, subject to Arrow Engine Company's ratings in effect at time of sale.

I. ARROW ENGINE COMPANY COMPRESSOR AND COMPRESSOR PARTS WARRANTY POLICY

The goods manufactured by Arrow Engine Company and delivered hereunder will be free of defects in material and workmanship for a period of 12 months from the date the goods are placed in service by the buyer or 18 months from date of shipment, whichever shall occur first. In addition, the manufacture warrants for a period of 36 months after delivery the following parts to be free of defects in material and workmanship under normal use and when properly maintained: crankshaft, crankcase casting (structural elements only) and connecting rods. Maintenance or wear items such as piston rings, packing rings, wiper rings, valve plates, valve springs, gaskets, O-rings, etc. are not warrantable. Prototypes or nonstandard Manufacturers configurations are covered under a separate agreement. Damage resulting from improper storage, neglect, extreme environmental conditions, misapplication, service and maintenance inconsistent with the Arrow VRS Gas Compressor Operations and Maintenance Manual or overloading of a compressor is not covered under this warranty policy. For warranty coverage of units test run at a Distributor's facility and not to be field started within one month from the date of testing, the compressor should be re-preserved, according to Arrow Engine's compressor preservation guidelines. For the warranty period, manufacturer shall repair or replace defective material.

II. EXTENDED WARRANTY

Effective for all Arrow VRS Gas Compressors shipped from Arrow after July 1, 2010, Arrow provides an extended warranty for units that continuously use and maintain 100% Arrow original equipment replacement parts. The extended warranty will be applied as follows:

Arrow warrants for a period of 72 months after delivery, the following parts to be free from defects in material or workmanship under normal use when properly maintained according to the Arrow VRS Compressor Operations and Maintenance manual: (1) Crankshaft, (2) Crankcase Casting, (3) Connecting Rods, (4) Crossheads, (5) Crosshead Guide Castings.

In addition, Arrow warrants for a period of 24 months after delivery, the following parts to be free from defects in material or workmanship under normal use in lubricated cylinders when properly maintained according to the Arrow VRS Compressor Operations and Maintenance manual: (1) Cylinder Bodies, (2) Pistons, (3) Piston Rods.

Arrow warrants that all remaining components manufactured or delivered by Arrow will be free of defects in material and workmanship for a period of 12 months from the date the goods are placed in use by the purchaser or 18 months from date of shipment, whichever occurs first. Labor coverage remains at one year and remains under the terms and conditions of the standard Arrow Compressor Warranty. If at any time parts not manufactured or delivered by Arrow (non-OEM replacement parts) are placed into service on the compressor, the extended warranty will be null and void and the standard limited warranty will apply.

OEM parts and additional information regarding Arrow's limited warranty can be obtained from Arrow Engine Company.

III. WARRANTY - MANUFACTURED AND NON-MANUFACTURED AFTER-MARKET PARTS AND START-UP

Parts manufactured by Arrow Engine Company are warranted to be free of defects in material and workmanship for 12 months from the date of Shipment. Certain parts on Arrow Engine Company's VRS Compressor are furnished as aftermarket parts from other sources. The warranty on these items is passed through the Distributor, from the other manufacturers.

A. COMPRESSOR IN USE

A completed "Compressor In Use" form must be completed by the Distributor and in the Manufacturer's possession before a "Warranty Claim" can be processed. "The Compressor In Use" form must be completed by the Distributor and forwarded to the Manufacturer upon shipment of any package with Arrow Engine Company products.

B. COMPRESSOR START-UP

The Arrow VRS Compressor must be started-up in accordance with the latest version of the Arrow Engine Company VRS Compressor Start-up Report. The VRS Compressor Start-up Report must be completed and forwarded to the Manufacturer upon completion of start-up.

C. DEFERRED START-UPS

Warranty coverage on VRS Compressors not started within 12 months from the factory ship date, see the Manufacturer's "Deferred Start-up Policy."

IV. OWNER/DISTRIBUTOR'S RESPONSIBILITIES UNDER THE EXPRESS LIMITED WARRANTY

Owner shall be responsible for:

- A. The operation and maintenance of the Products within the guidelines established by Arrow Engine Company.
- B. Making the Products available to Arrow Engine Company's authorized contractors or distributors for any warranty repair, during normal business hours.
- C. All additional costs incurred for premium or overtime labor, should owner request that repairs be made on a premium overtime schedule.
- D. All costs incurred as the result of removal or reinstallation of the Products as may be required to effect any warranted repair.
- E. All administrative costs and expenses resulting from a warranted failure.
- F. Any costs of transportation, towing, repair facilities, or associated costs.
- G. Loss of revenue and loss of/or damage to real and/or personal property.
- H. Payment of labor charges is limited to failure on items of the Manufacturer that occurred during packaging and within the first 90 days of start-up. The Manufacturer reserves the right to adjust the labor on warranty claims so that the labor paid will be within the Manufacturer's "Standard Repair Hours Policy" or within a reasonable amount of time to accomplish the task for which the claim is submitted. The initial investigation of a warranty item will be at the expense of the Distributor.
- I. Arrow Engine Company will not be responsible for additional repair time as a result of normal job site location, remote location, nonstandard gas, or special equipment, end cost of transporting personal, parts and equipment to and from the package site. Travel time and

mileage will be restricted to 150 miles one way from the packager's closest service location to land based site. For ocean or water based compressor sites, please contact Arrow Engine Company for travel policy.

V. INTERNATIONAL WARRANTY

The Manufacturer's coverage for VRS Compressors shipped outside the United States or Canada is limited to parts only F.O.B. Tulsa, Oklahoma.

VI. LIMITATION OR ARROW ENGINE COMPANY'S OBLIGATIONS

The obligation of Arrow Engine Company under this express limited warranty shall be waived and voided, and Arrow Engine Company shall not, thereafter, be responsible for:

- A. Any failure resulting from owner or operator abuse or neglect, including but not by way of limitation, any operation, installation, application, or maintenance practice not in accordance with guidelines or specifications established by Arrow Engine Company; or
- B. Any failure resulting from unauthorized modifications or repairs of the Products or;
- C. Any failure resulting from overload, overspeed, overheat, accident, improper storage; or
- D. Failure of owner to promptly provide notice of a claimed defect - all warranty claims must be authorized, documented, and submitted within 30 days of the failure date while under the warranty period; or
- E. Failure of Products for which Arrow Engine Company did not receive properly completed start-up reports; or
- F. Repairs of a covered failure performed with nongenuine Arrow Engine Company parts; or
- G. Repairs of a covered failure performed by nonauthorized contractors or distributors; or
- H. Failure to make Products available to Arrow Engine Company or its authorized representatives, or
- I. Failure to supply documents such as drawing and specifications relating to the specific application of the Products.

VII. APPLICABILITY AND EXPIRATION

The warranties set out above are extended to all owners in the original chain of distribution. The warranties and obligations of Arrow Engine Company shall expire and be of no further effect upon the dates of expiration of the applicable warranty periods.

The foregoing sets forth Arrow Engine Company's only obligations and owners' exclusive remedy for breach of warranty, whether such claims are based on breach of contract, tort (including negligence and strict liability), or other theories, and the foregoing is expressly in lieu of other warranties whatsoever expressed, implied, and statutory, including without limitation, the IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS.

Notwithstanding the preceding, in no event shall Arrow Engine Company be liable for any direct, special, incidental or consequential damages (whether denominated in contract, tort, strict liability, negligence or other theories) arising out of this Agreement or the use of any Products provided under this Agreement.

Any action arising hereunder or relating hereto, whether based on breach of contract, tort (including negligence and strict liability), or other theories must be commenced within one year after the cause of action accrues or it shall be barred.

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

ENGINES

A-SERIES	A32	A42	A54 A54E	A62 A62 Turbo A62 Genset
C-SERIES	C-46	C-66	C-96	C-106
KP-SERIES	KP3 KP3TA	KP4 KP4TA	KP6 KP6TA	KP8 KP8TA
VRD-SERIES	VRD30	VRD40	VRD60	VRD100

COMPRESSION PRODUCTS

Compressor Frames VRC-2 VRS-2 VRS-4	CNG Compressor Frames and Packages VRC-CNG	Vapor Recovery Units VRU-1 VRU-2	Gas Lift Packages Electric HP Gas Engine (VR, A-Series, CAT)	Custom Compression Packages
--	---	---	---	-----------------------------------

GAS PRODUCTS

Coalescers

REPLACEMENT PARTS

Waukesha	145G/F817	140G/F554	F18	H24	WAK/1197
----------	-----------	-----------	-----	-----	----------